


88 5530 78 Mirror

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



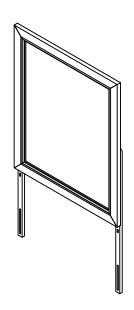

A. Mirror 1 pc. B. Mirror Support 2 pcs.

Hardware List



(M6x40) Head Cap Bolt (Long) 4 pcs. (+1 extra)



(M6x30) Head Cap Bolt (Short) 4 pcs. (+1 extra)



Spring Washer 8 pcs. (+1 extra)



Flat Washer 8 pcs. (+1 extra)



Key Wrench 1 pc.



Small Key Wrench 1 pc.



Assembly Instructions 2/3

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep Key Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Use a soft cloth between these parts and the floor.


STEP 1

Carefully place Mirror (A) face down on a soft cloth.


HORIZONTAL

Attach Mirror Supports (B) to Mirror (A) in horizontal or vertical position with Head Cap Bolts (Short), Spring Washers and Flat Washers.

Tighten with Key Wrench. (See Figure 1)

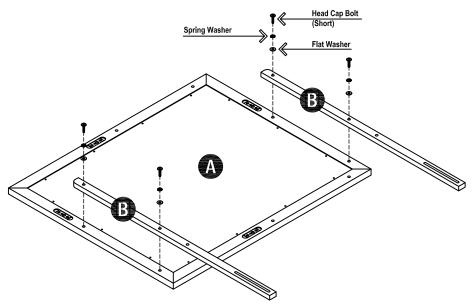

VERTICAL

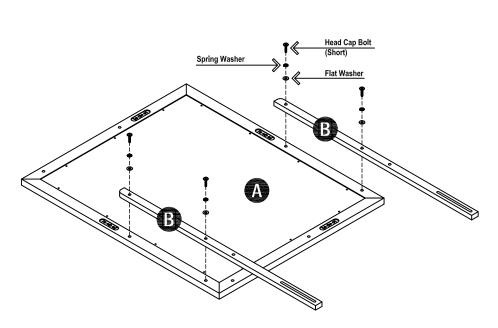

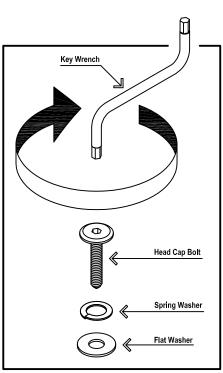


Figure 1




Assembly Instructions 3/3

STEP 2

Attach the unit in horizontal or vertical position to Dresser (carton 88 5530 43) with Head Cap Bolts (Long), Spring Washers and Flat Washers.

Tighten with Key Wrench. (See Figure 1)

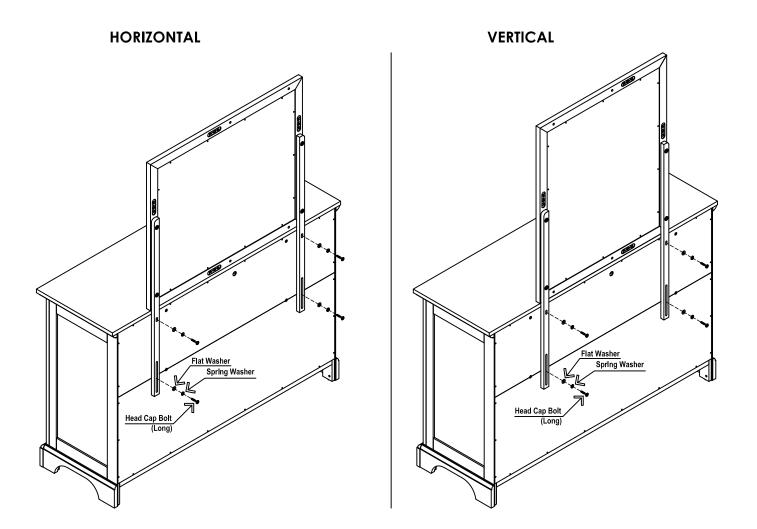

::kitchensource.com

1.800.667.8721

VERY IMPORTANT!!

CARE INSTRUCTIONS

NEVER-

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

NEVER-

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT WRITE DIRECTLY ON SURFACE.



PREVENT MARKING

DO NOT PLACE IN DIRECT SUNLIGHT.



PREVENT FADING

DO NOT USE COMMERCIAL WAXES AND POLISHES.



PREVENT YELLOWING DO NOT PLACE HOT OBJECTS ON SURFACE.




PREVENT FINISH DAMAGE

DO NOT
USE
RUBBER (
BASED
PLACE MATS

PREVENT DISCOLORING

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

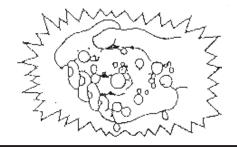

Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale.