### 88 5180 31


### Arts & Crafts Dining Table


### an **Eefa**Co. Store

 
### **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

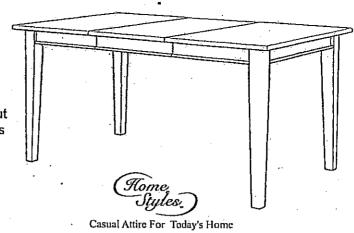

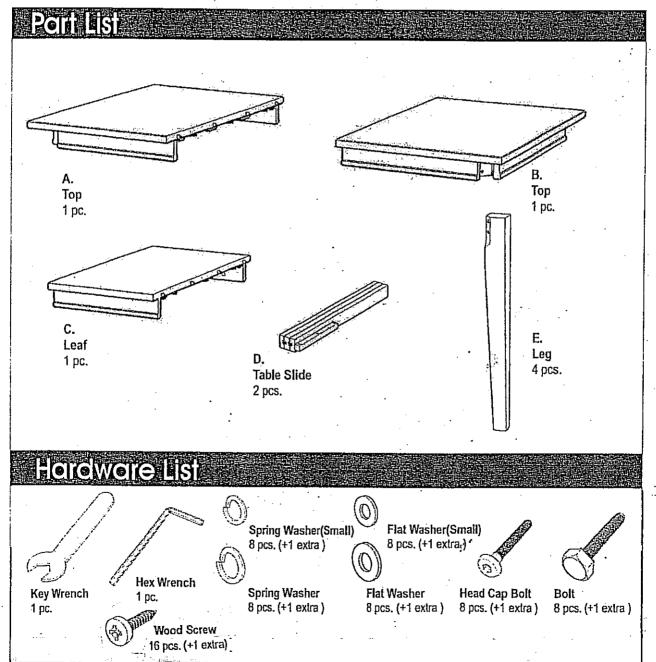






#### **IMPORTANT**

\* Do not tighten up all the screws until each part is properly assembled.

\* You should keep Hex Wrench, Key Wrench in a safe place as you may need to tighten up the Bolts in the future.

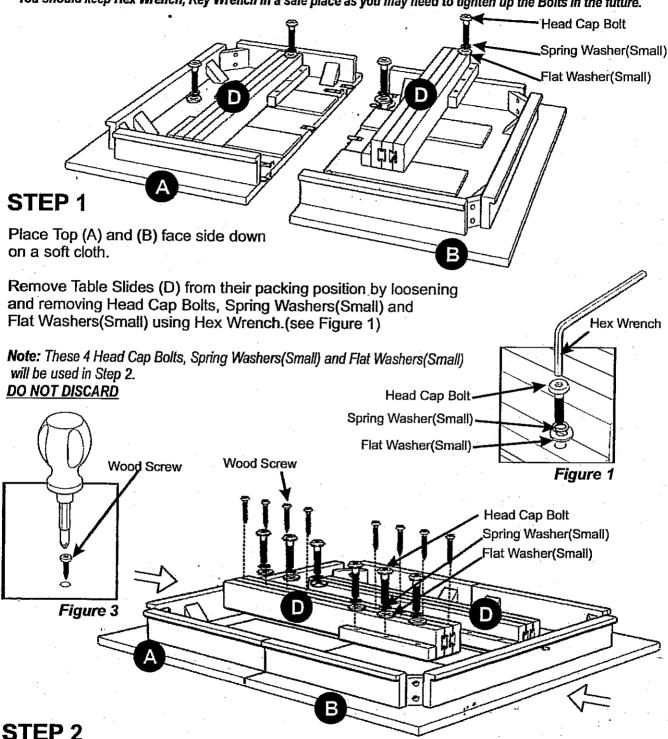

Attach Top (A) with (B), by aligning dowels with the holes and firmly pushing together.

Engage the locks by turning their handles clockwise ¼ turn (see Figure 2).

Attach Table Slides (D) to the unit using Head Cap Bolts, Spring Washers(Small) and Flat Washers(Small). Tighten Wood Screws (see Figure 3).


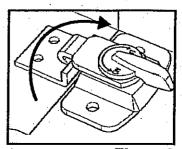


Figure 2



### Assembly Instructions 3/3

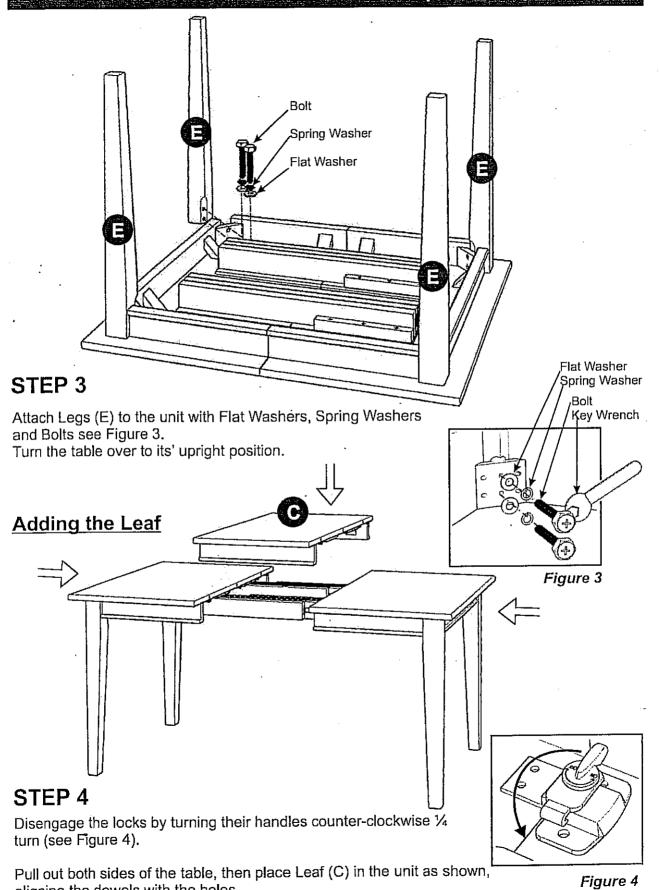

Push the table together firmly, then engage the locks by turning their handles clockwise 1/4 turn (see Figure 2).

aligning the dowels with the holes.

t-i

**Eefa**Co. Store 7.877-275-9111

# VERY IMPORTANT!!

### **CARING INSTRUCTIONS**

## **NEVER-**

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

### -NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN IN DECORATIVE ROUTE LINES. ABSORPTION CAUSES WOOD TO WARP AND FINISHED TO DE-LAMINATE.

DO NOT WRITE DIRECTLY ON SURFACE.



PREVENT MARKING

DO NOT PLACE IN DIRECT SUNLIGHT.



PREVENT FADING

DO NOT USE COMMERCIAL WAXES AND POLISHES.



PREVENT YELLOWING

DO NOT
PLACE HOT
KETTLES
POTS, ETC
ON SURFACE.

PREVENT DAMAGETOFINISH!

DO NOT
USE
RUBBERBASED
PLACEMATS
USE CLOTHS!

PREVENT DISCOLORING

## TO CLEAN

SIMPLY USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP & WATER THEN BUFF WITH A DRY CLEAN CLOTH!

