




## Wood Dining Chair CF6021

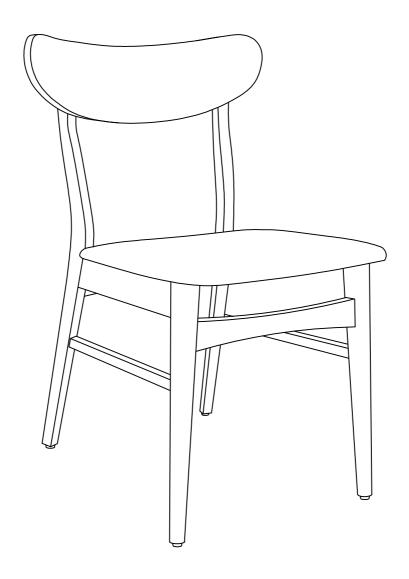

## **PART LIST**

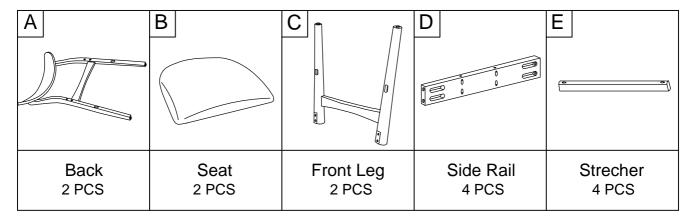

## HARDWARE LIST

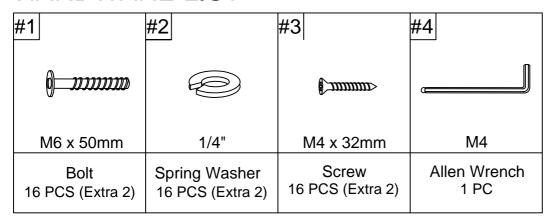

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Step 1 . Attach side rails (part D) to back (part A) using bolts (part #1), spring washers (part #2) and allen wrench (part #4). See Figure 1. Attach strechers (part E) to back (part A) using screws (part #3) and phillips head screwdriver. See Figure 2.


NOTE: Please do not fully tighten bolts until unit is fully assembled.

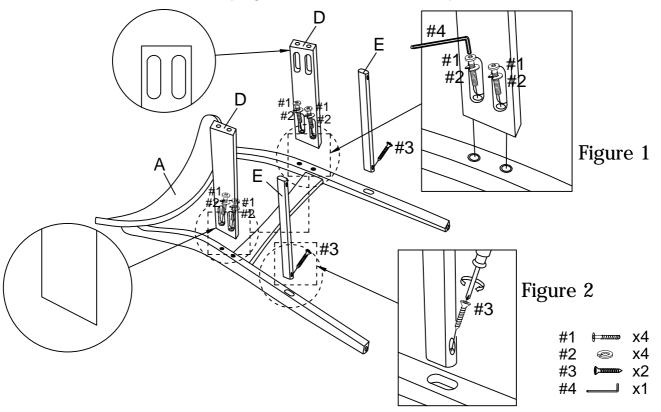

Step 2. Attach front leg (part C) to side rails (part D) and strechers (part E) using bolts (part #1), spring washers (part #2), screws (part #3), allen wrench (part #4) and phillips head screwdriver.

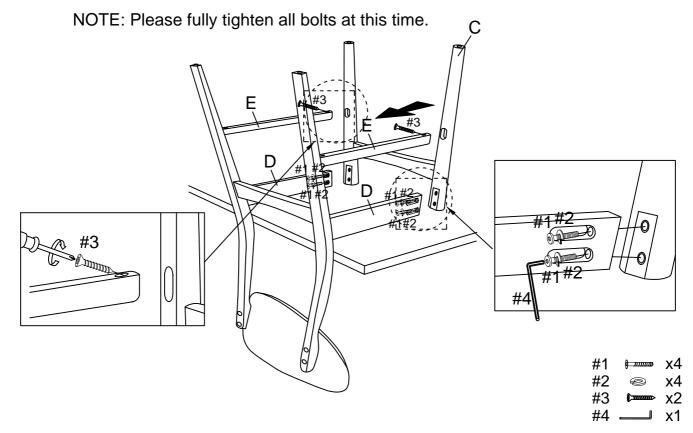

Step 3 . Attach seat (part B) to assembled unit (parts A, C, D & E) using screws (part #3) and phillips head screwdriver.

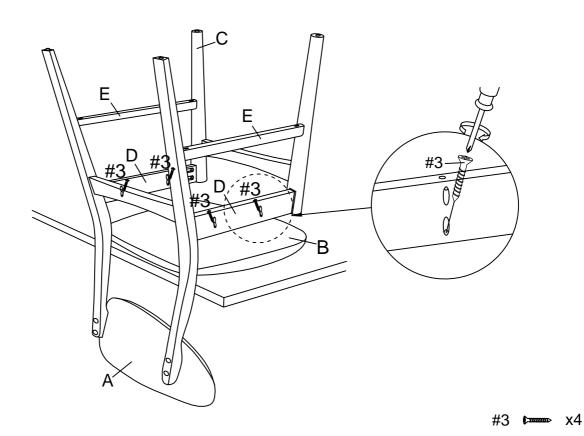

Step 4. Carefully turn unit upright. Repeat steps 1-3 to assemble remaining chair.

