## **home**styles°

## 20 05525 0432

## Dresser


## **IMPORTANT**

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



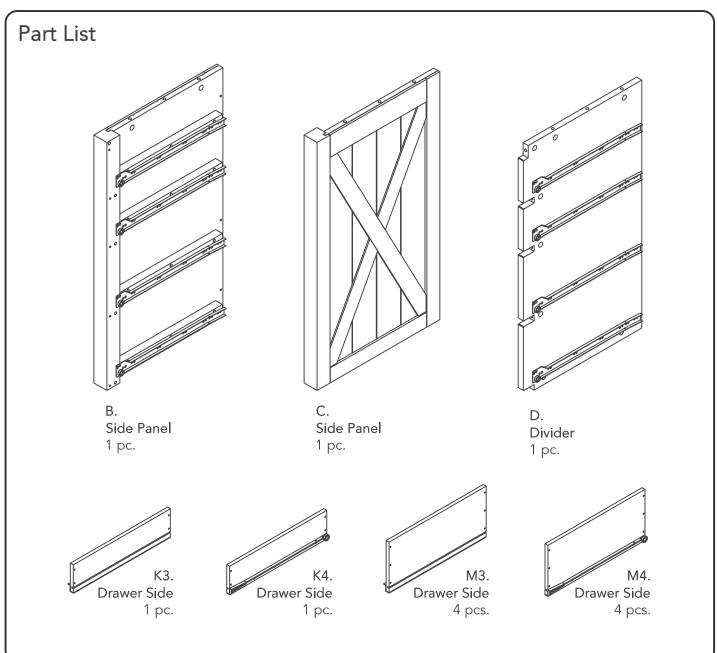

For assembly see instructions in carton 20 05525 0431.