

homestyles[®]

20 05502 0041


Chest

IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

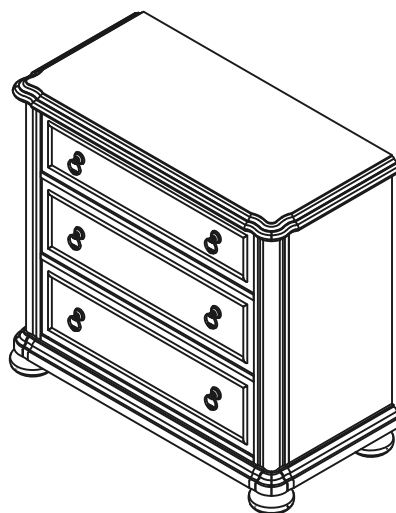

Part List

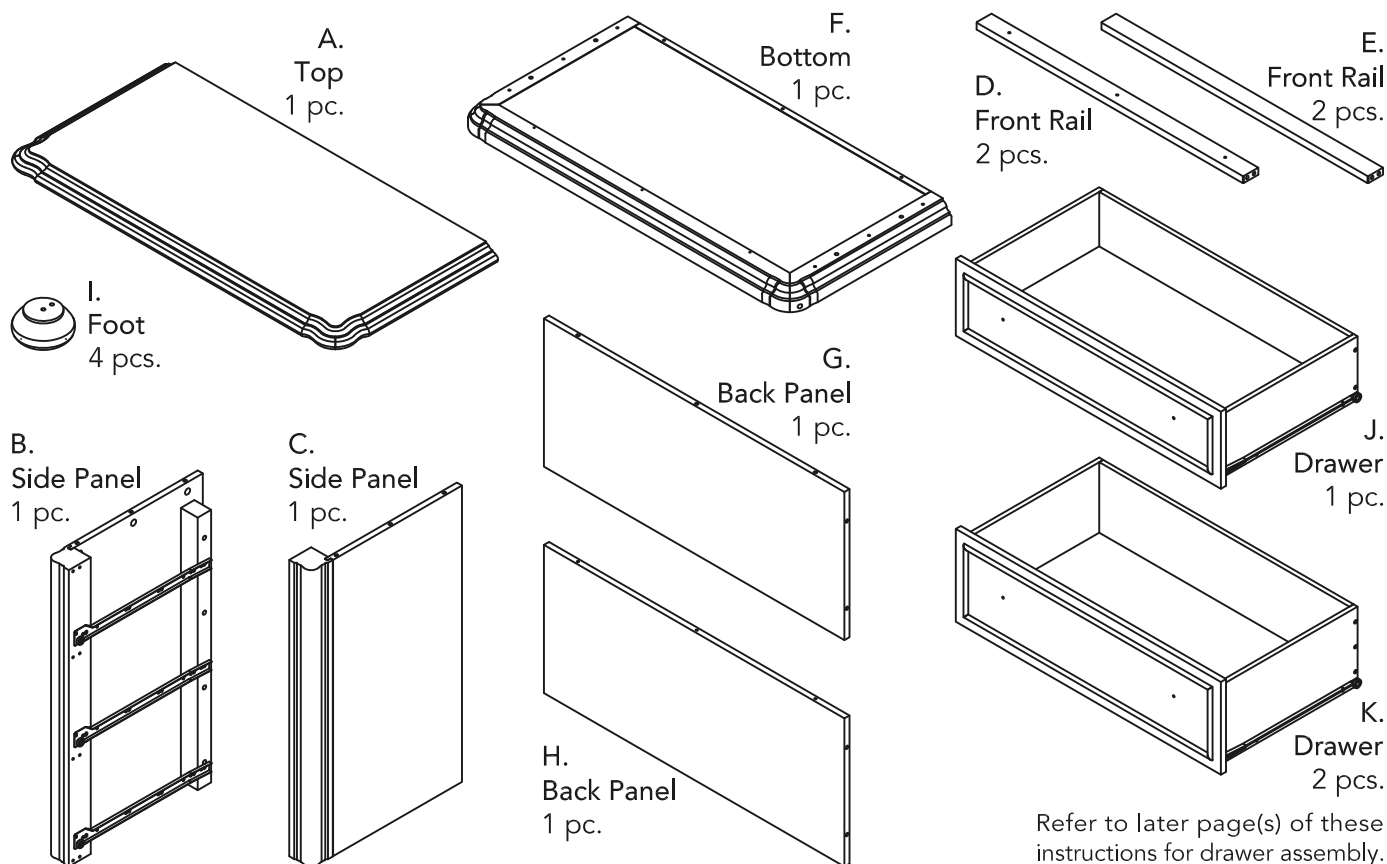

Hardware List



Hex Wrench
1 pc.



Hex Wrench (Small)
1 pc.



Cam Lock Screw
39 pcs. (+4 extra)



Cam Lock
39 pcs. (+4 extra)



M4x51
2" Round Head Screw
6 pcs. (+1 extra)



M4x25
1" Round Head Screw
6 pcs. (+1 extra)



M3x32
1 1/4" Flat Head Screw
50 pcs. (+1 extra)



M3x19
3/4" Flat Head Screw
18 pcs. (+1 extra)



M6x80
Bolt
4 pcs. (+1 extra)



5/32"x7/8"
Machine Screw
6 pcs.



Handle
6 pcs.



Dowel
8 pcs. (+1 extra)

Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/10

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

STEP 1

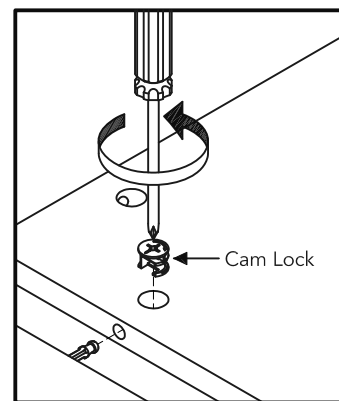
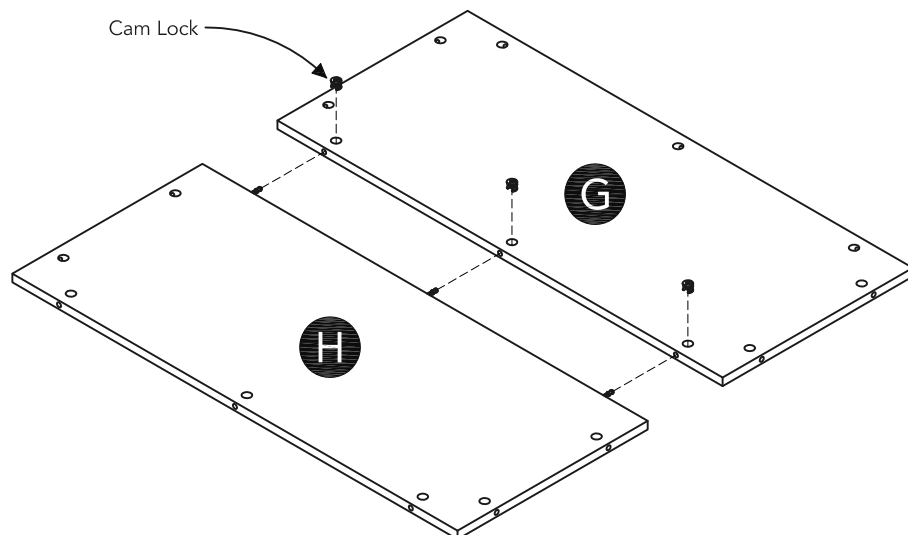
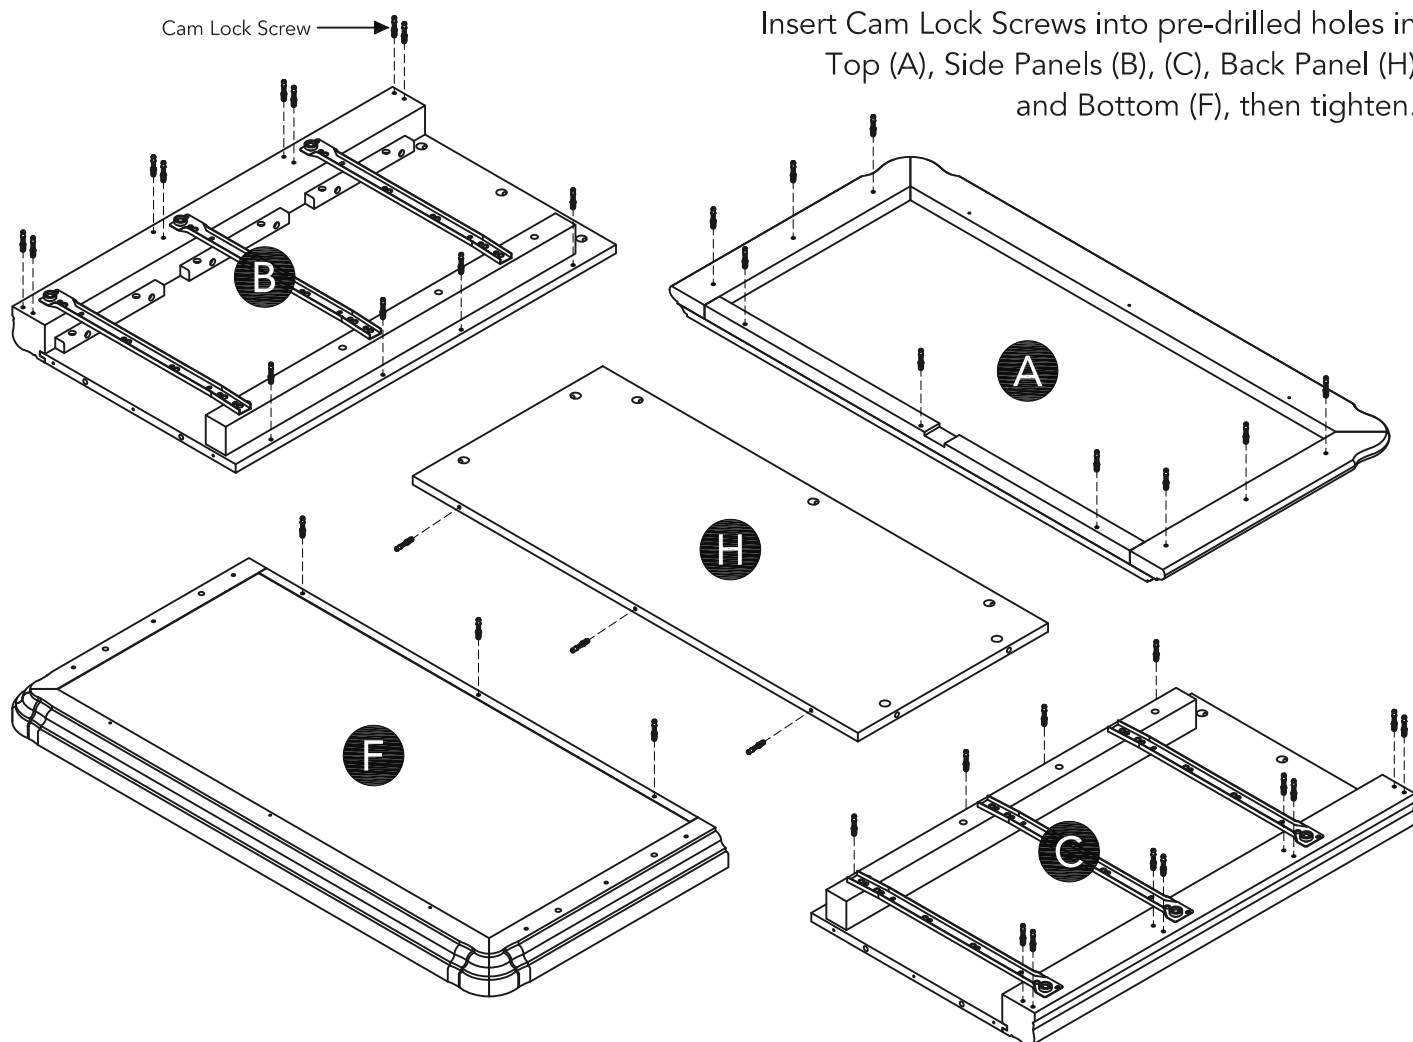



Figure 1

STEP 2

Assemble Back Panels (G) and (H) with Cam locks. (See Figure 1)

STEP 3

Orientate Front Rails (D) and (E) with Arrow label at front, then attach Front Rails (D), (E) and unit to Side Panel (B) with Cam Locks.

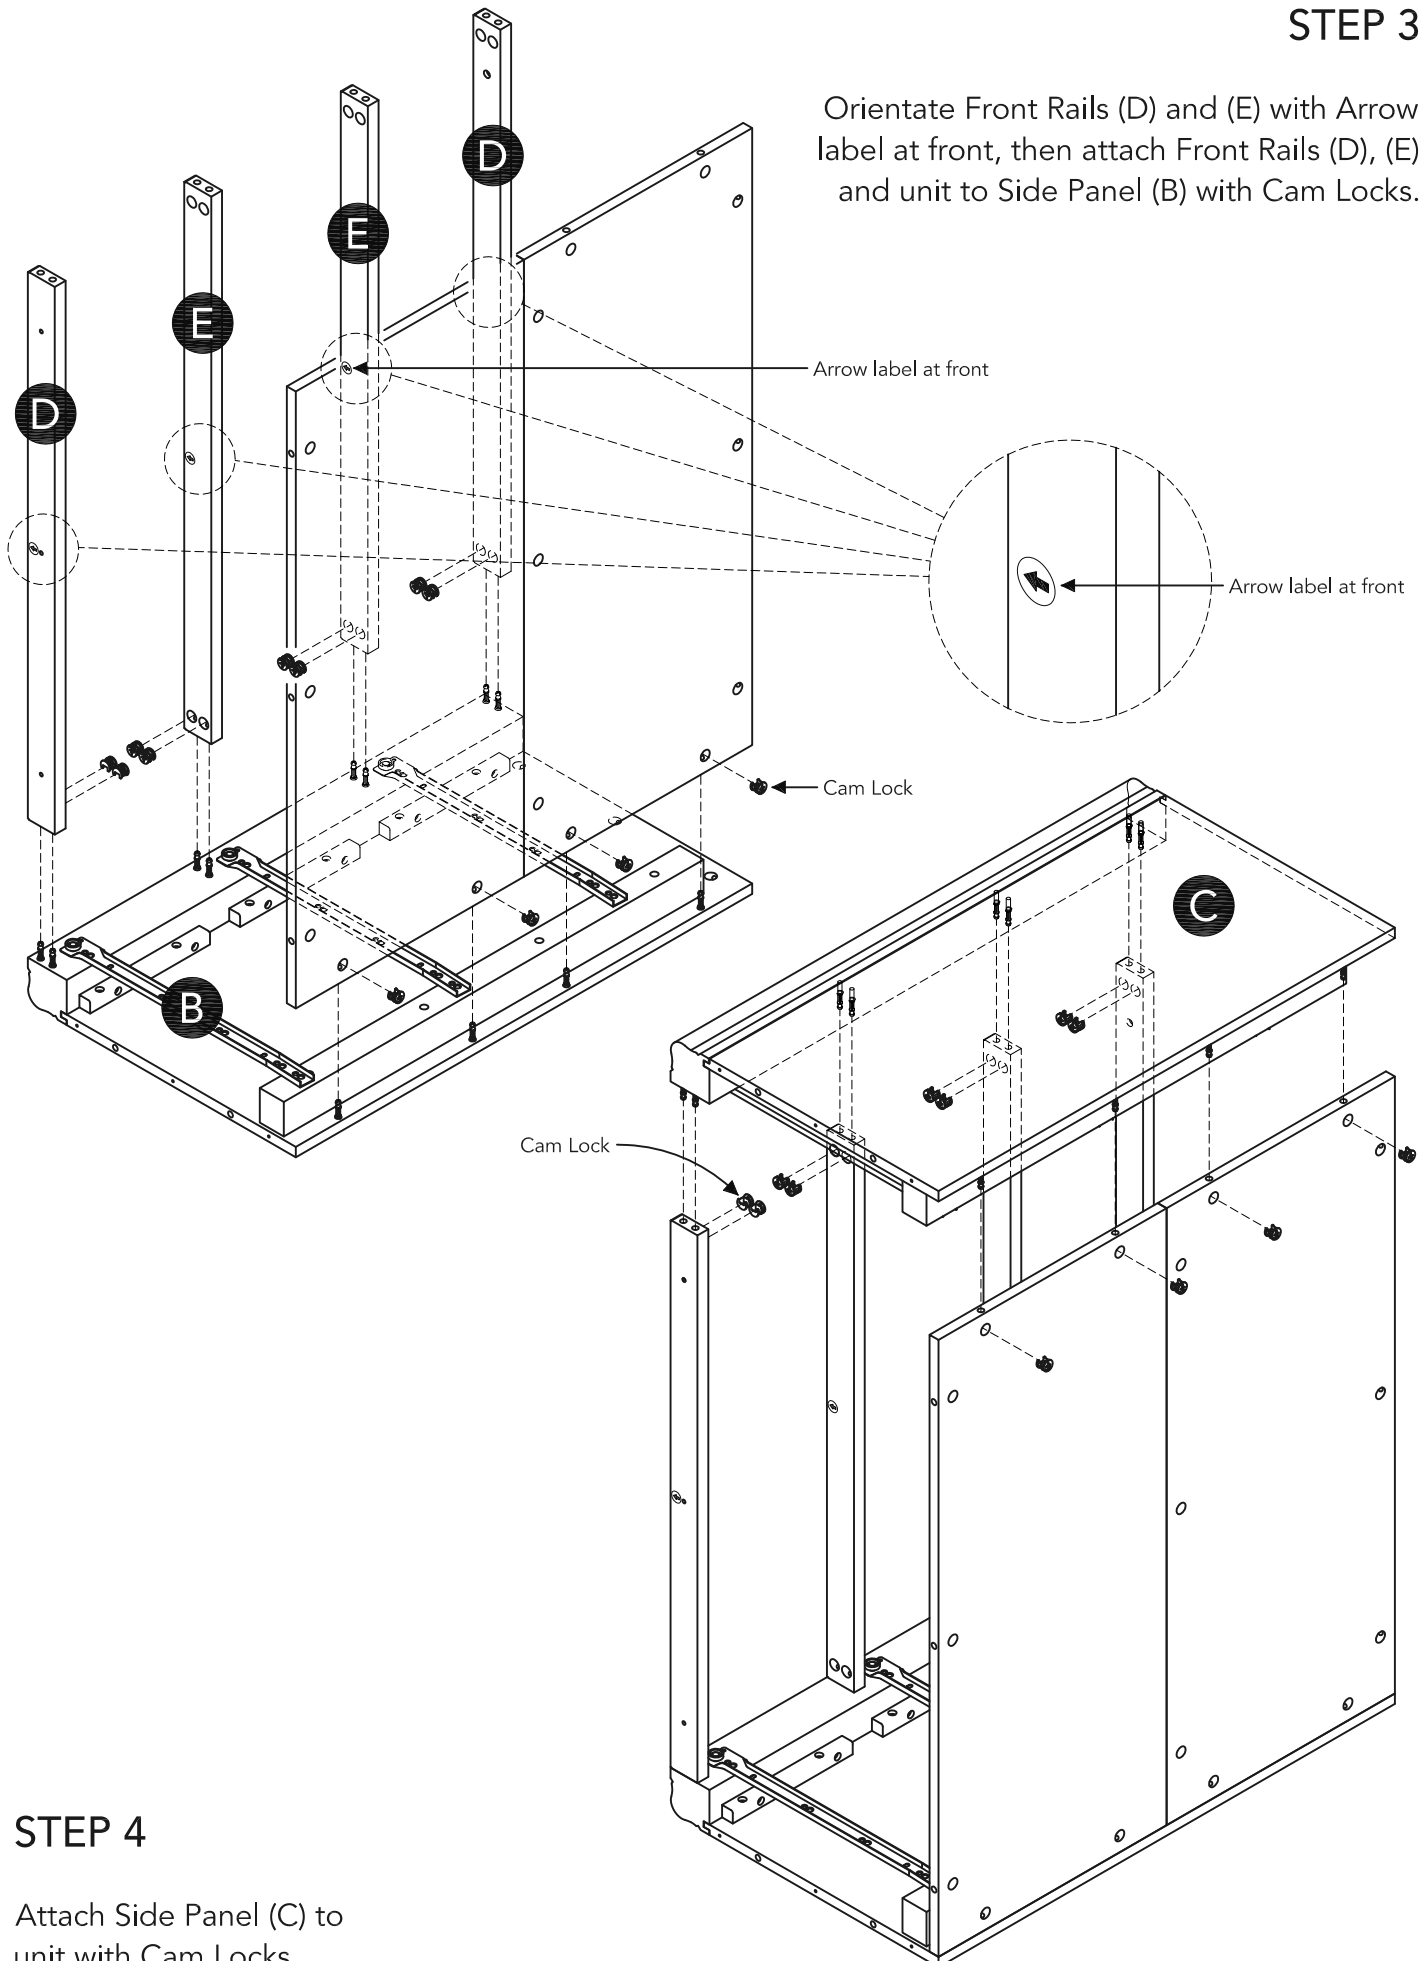


STEP 4

Attach Side Panel (C) to unit with Cam Locks.

Assembly Instructions 4/10

STEP 5

Attach Bottom (F) to unit with Dowels, Cam Locks and 2" Round Head Screws.

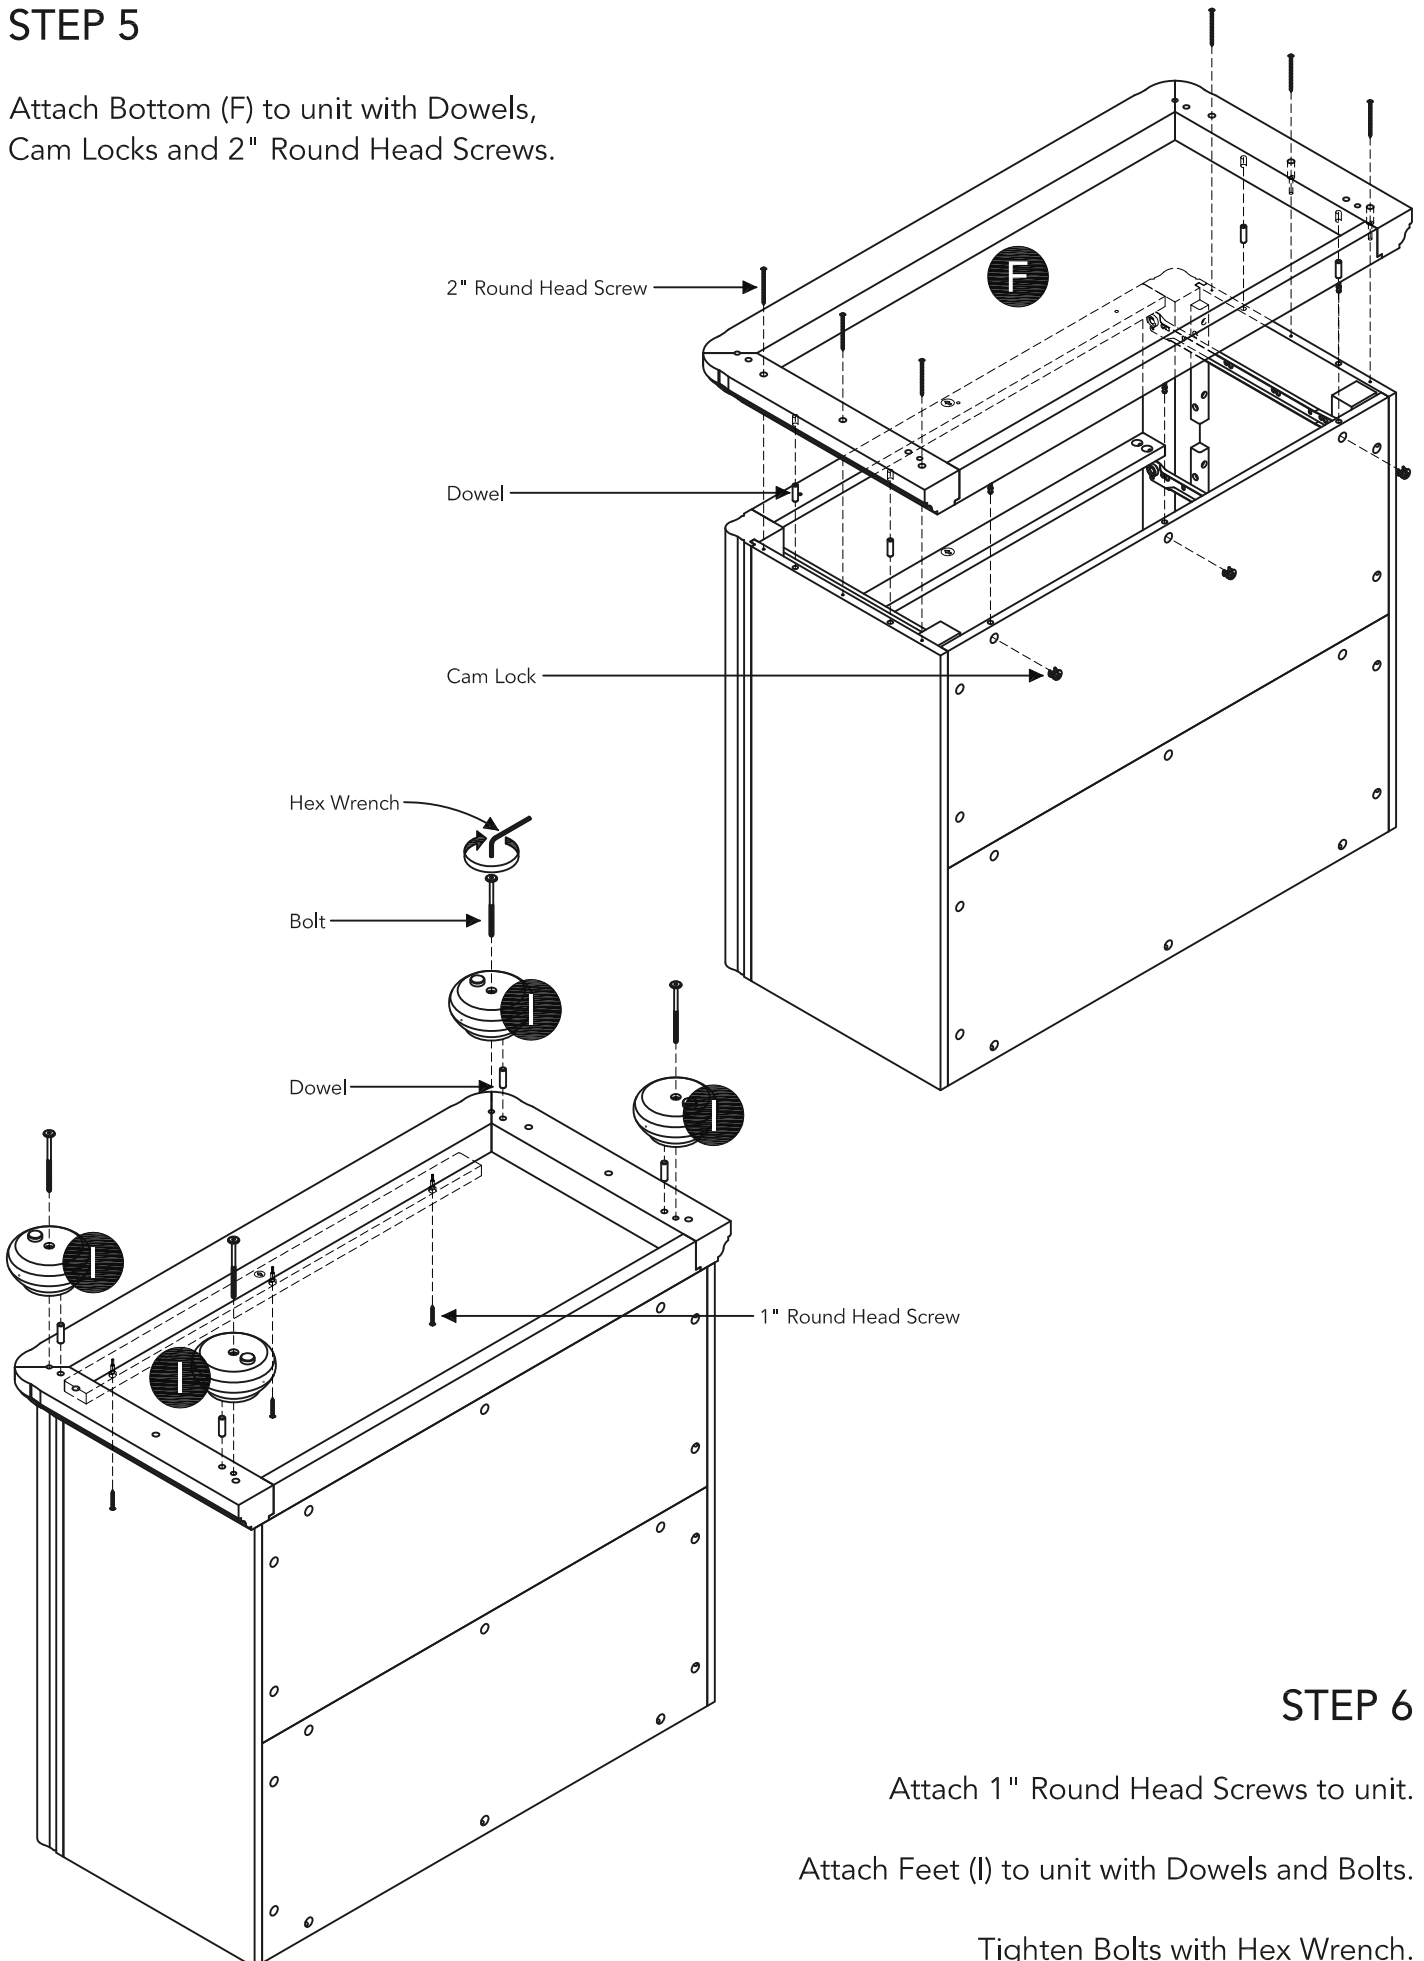

STEP 6

Attach 1" Round Head Screws to unit.

Attach Feet (I) to unit with Dowels and Bolts.

Tighten Bolts with Hex Wrench.

STEP 7

Turn unit over to its' upright position.

Attach Top (A) to unit with Cam Locks and 1" Round Head Screws.

Note: A Philips screwdriver 5" or less in length is recommended.

Level unit by adjusting the adjustable levelers on bottom of unit.
(See Figure 2)

Note: Unit must be level to proceed.

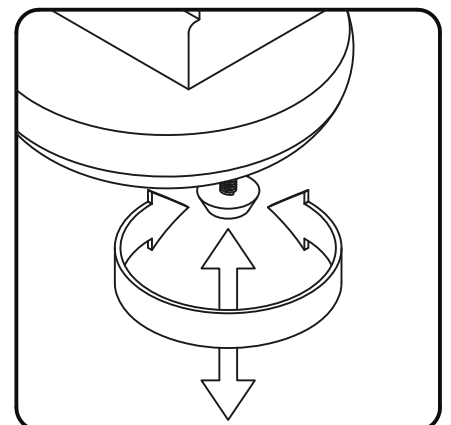
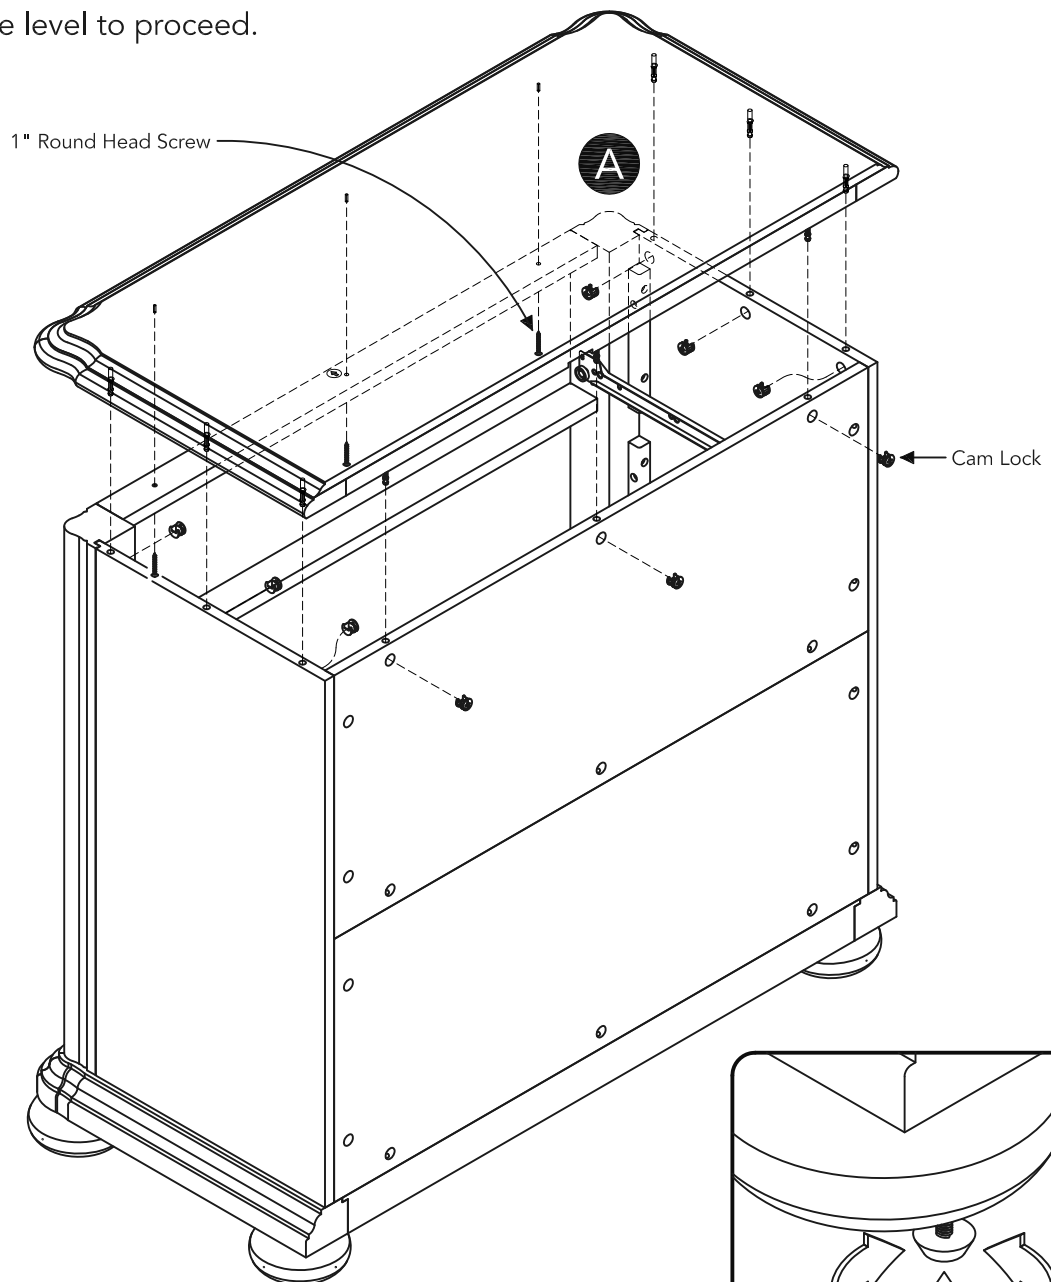


Figure 2