

Assembly Instructions 6/10

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

STEP 8

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Top (A). (See Figure 3)

Move unit.

Drill a 3/8" hole in wall 1 1/2" below mark.

Insert Anchor into the wall hole and attach Tip-over Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 4)

Move unit back into place and insert Tip-over Restraint into unit through hole in Top (A). (See Figure 5)

Attach Tip-over Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 6)

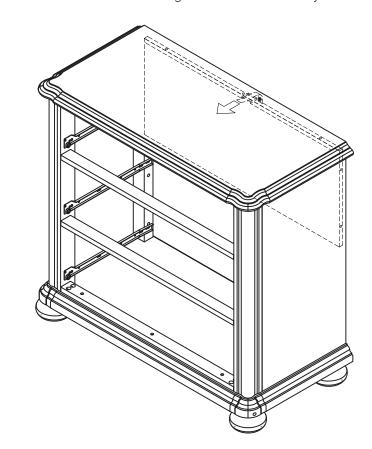






Figure 5 Figure 6

Hardware List



Tip-over Restraint 1 pc.



Anchor 1 pc. (+1 extra)



M3x38 1 1/2" Round Head Screw 1 pc. (+1 extra)




M3x13 1/2" Round Head Screw 1 pc. (+1 extra)




Flat Washer 2 pcs. (+1 extra)



Assembly Instructions 7/10

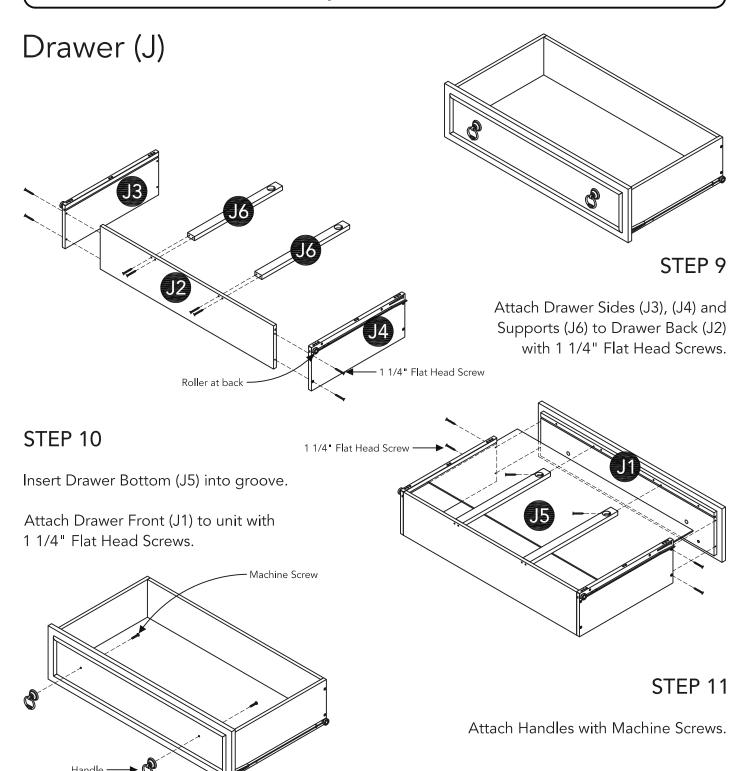


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

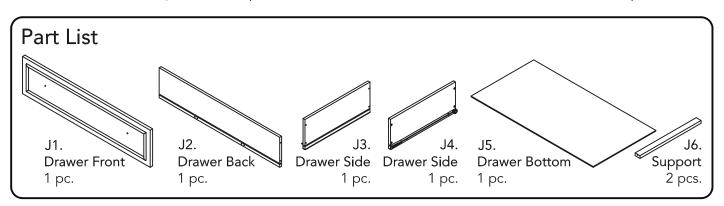




Assembly Instructions 8/10

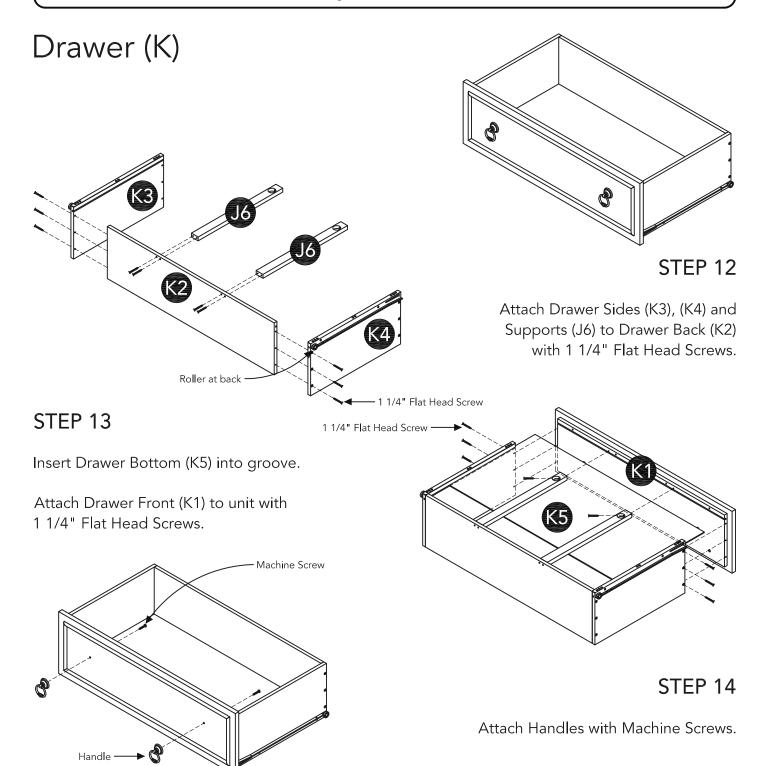


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

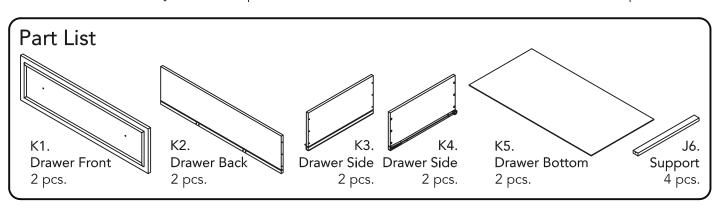




Assembly Instructions 9/10

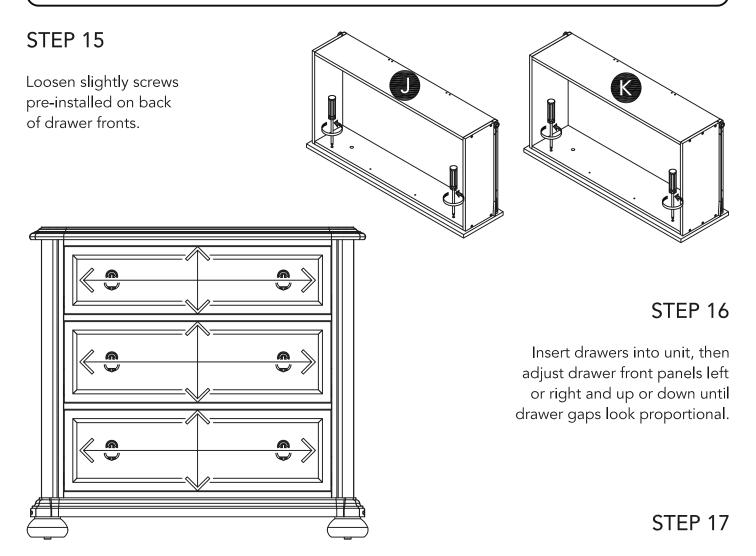

Pull each drawer open slowly, then re-tighten screws from Step 15.

Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.


Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

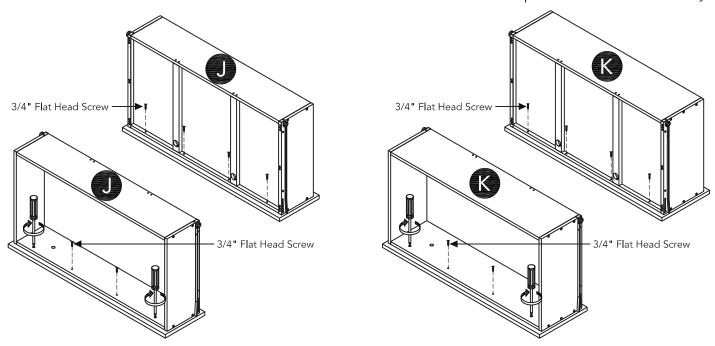



Assembly Instructions 10/10

STEP 18

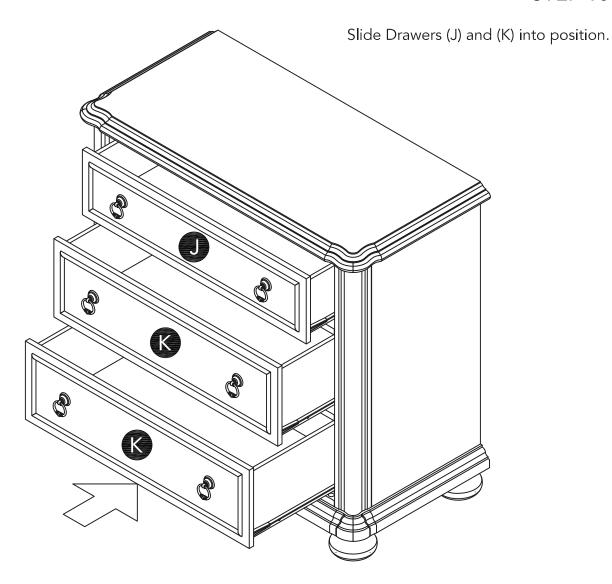



CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight. PREVENT FADING



Do not write directly on surface. PREVENT MARKING



Do not place hot objects on surface.
PREVENT
FINISH DAMAGE



Do not use rubber based placemats. PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT

YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319