

Assembly Instructions 7/11

STEP 10

Turn unit to its upright position.

Attach Connector Plates to unit with 3/4" Flat Head Screws. (See Figure 5)

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 6)

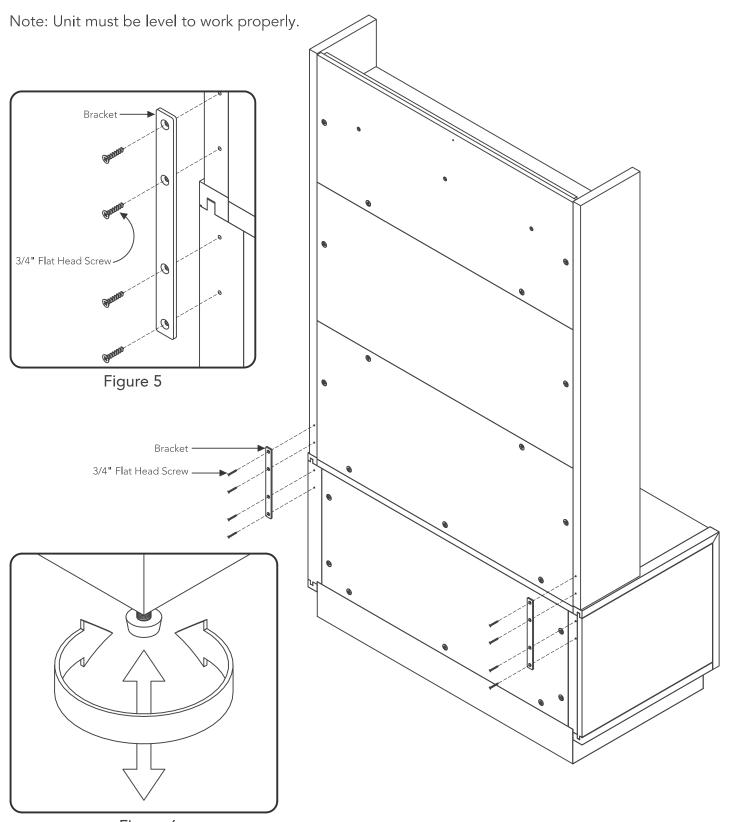


Figure 6

Assembly Instructions 8/11

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 11

Place unit at desired location.

Drill a 3/8" hole in wall in-line with pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at pre-drilled hole at top of unit with Wood Screw.

Move unit back into place.

Slide Tipover Restraint through Bracket on wall and Bracket on unit.
(See Figure 7)

Put tie end of Tipover Restraint into lock end of Tipover Restraint and pull until tight.




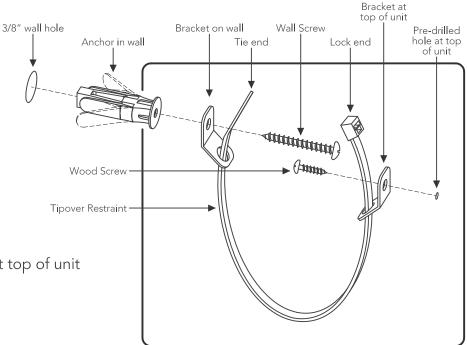


Figure 7

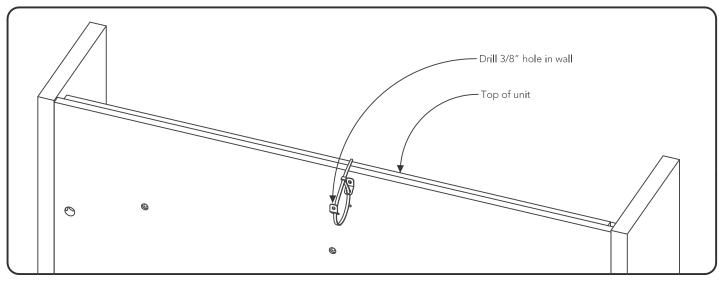

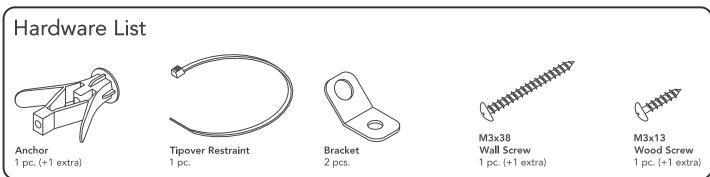


Assembly Instructions 9/11

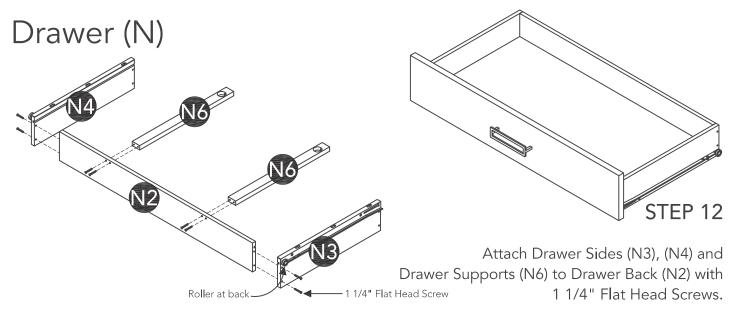


STEP 13

Insert Drawer Bottom (N5) into groove.

Attach Drawer Front (N1) to unit with 1 1/4" Flat Head Screws.

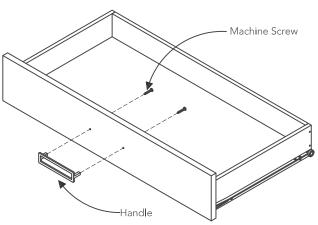


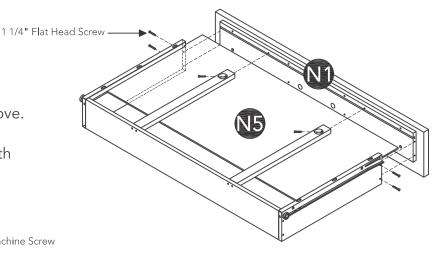

STEP 14

Attach Handle with Machine Screws.


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

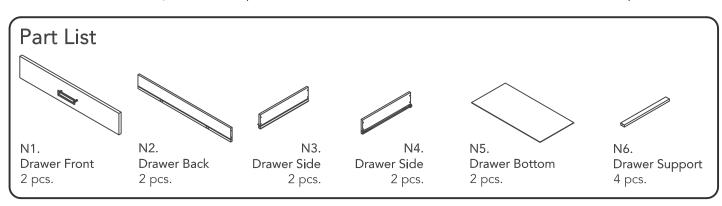


Assembly Instructions 10/11

STEP 15

Loosen slightly screws pre-installed on back of drawer fronts.

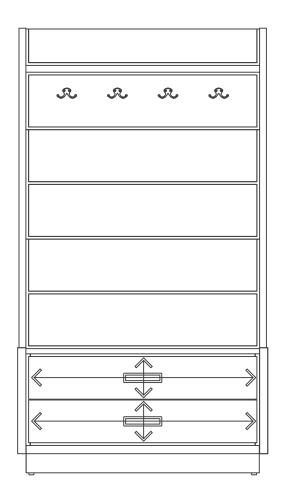

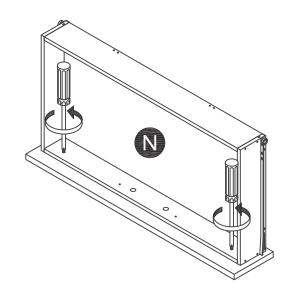

STEP 16


Insert drawers into unit, then adjust drawer front panels left or right and up or down until drawer gaps look proportional.


STEP 17

Pull each drawer open slowly, then retighten screws from Step 15.

Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

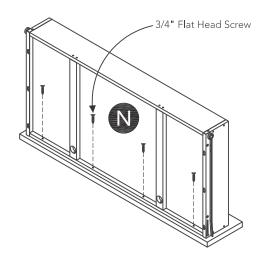


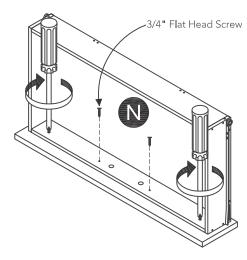

Assembly Instructions 11/11

STEP 18

Slide Drawers (N) into position.

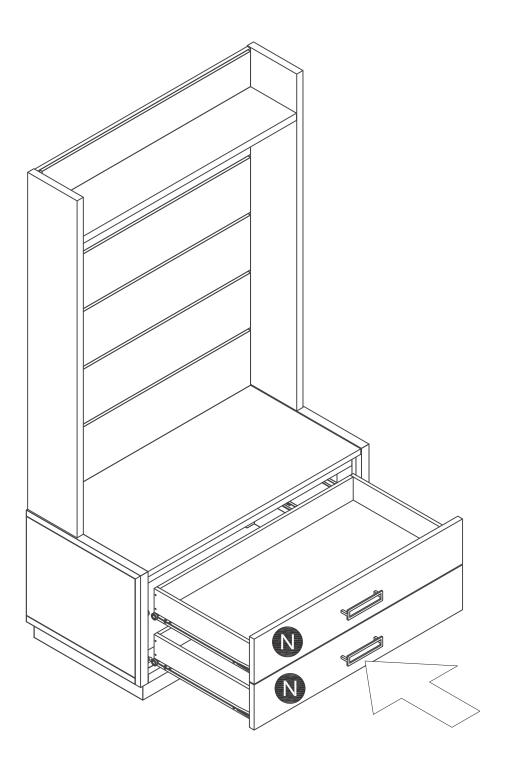

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight. PREVENT FADING



Do not write directly on surface. PREVENT MARKING



Do not place hot objects on surface.

PREVENT
FINISH DAMAGE



Do not use rubber base d placemats.
P REVENT
DIS COLORNG



Do not use commercial waxes and poishes.
P REVENT
YE LLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319