


Kräus[®]

INSTALLATION MANUAL




Automatic Sensor Trash Can

KTCS-10

Diagram and Parts List

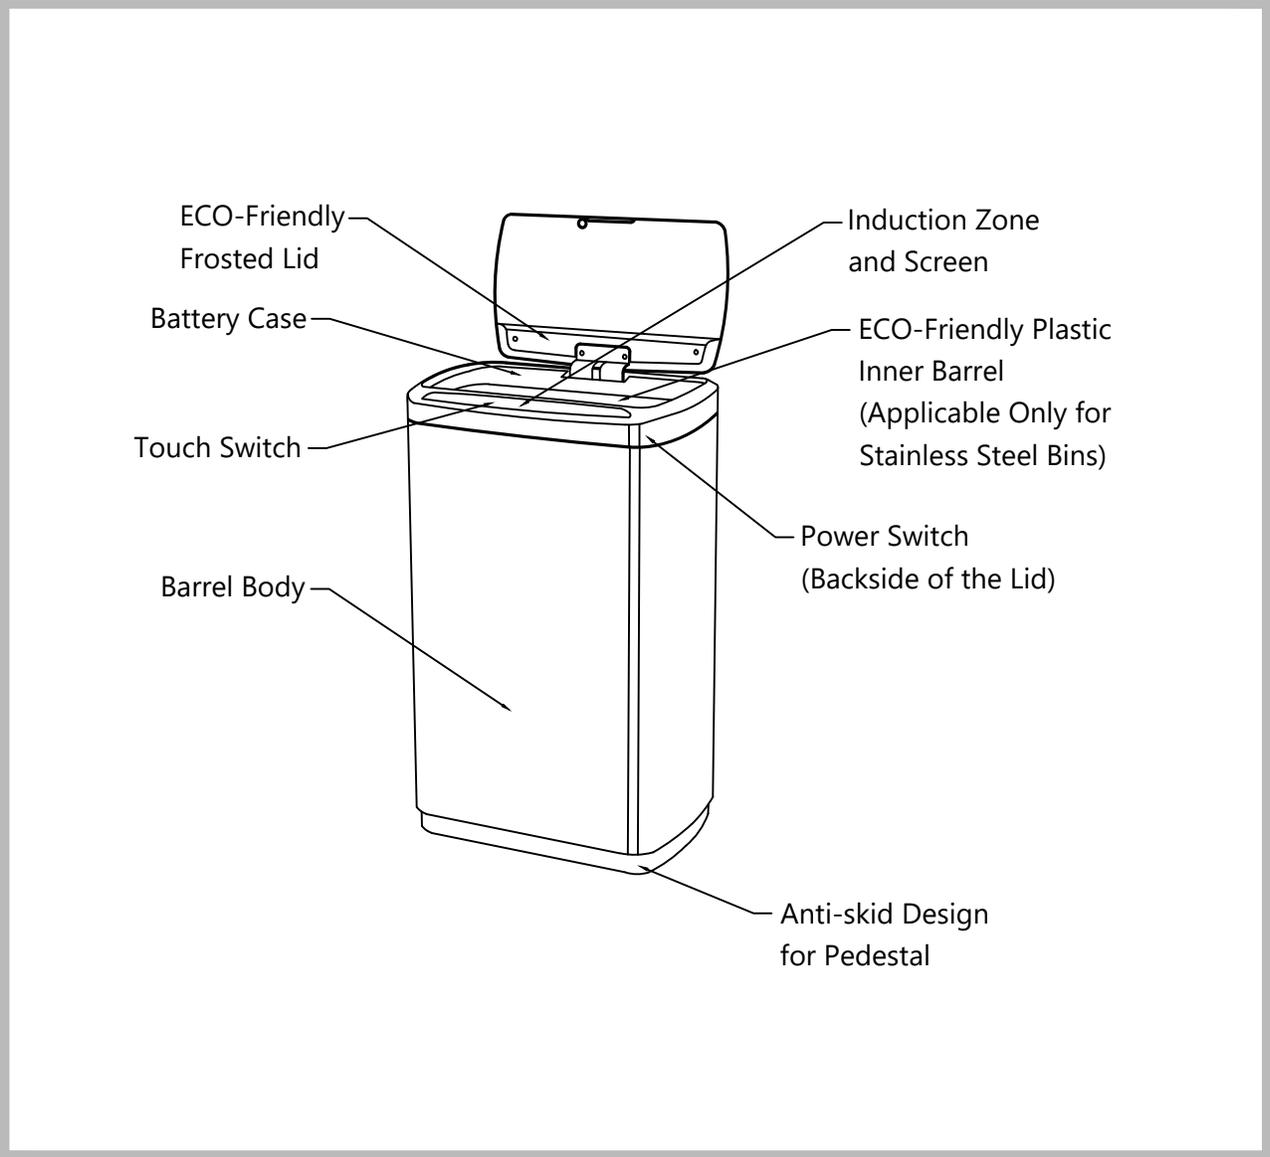


Dimensions

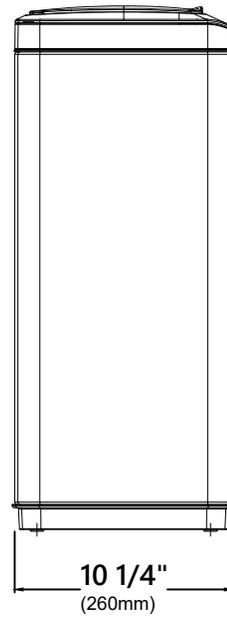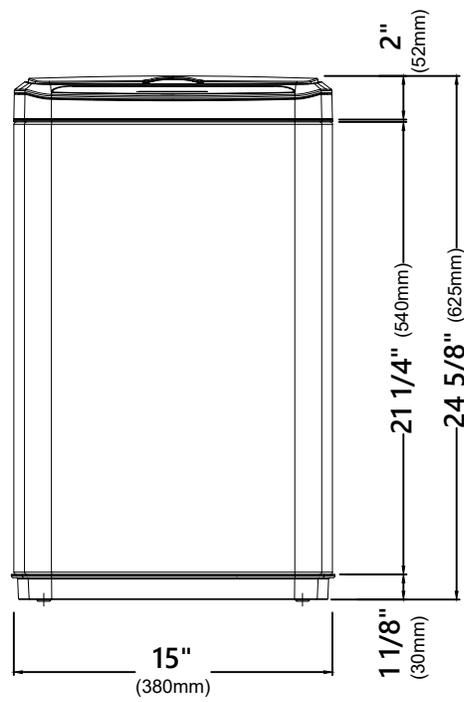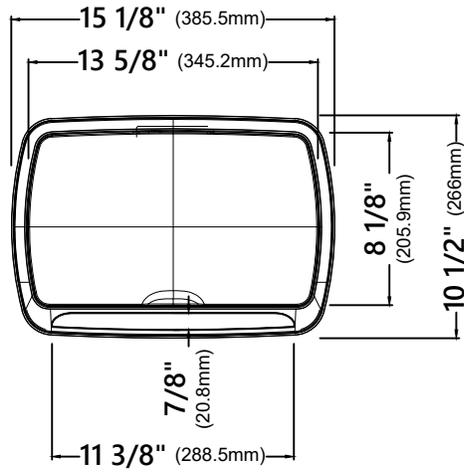

Step 1. Check All Parts


Take out lid and inner barrel, make sure the power switch faces you.

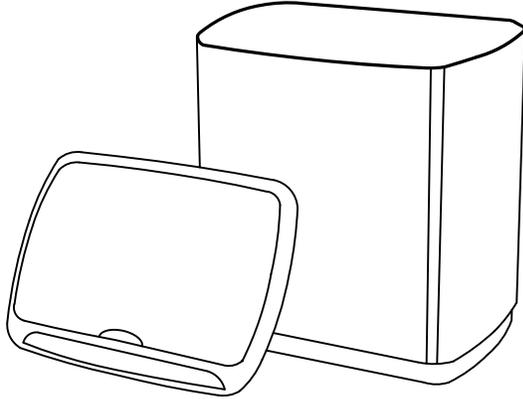


Step 2. Setting Up Your Trash Can

Remove the four black plastic packaging supports from the trash container interior.


NOTE: Failure to remove may decrease the trash can capacity and/or shred your trash bag. The packaging supports are only a part of the packaging to prevent distortion during transit.

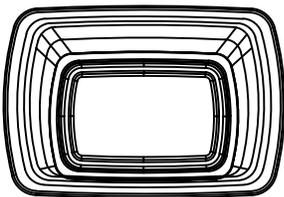

2a. Remove the lid from the Trash Can.

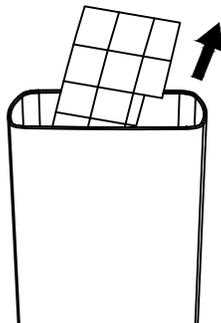


2b. Remove all four Plastic Supports and please recycle.

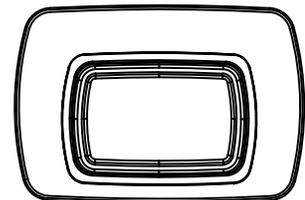


2c. Time to install the lid.

Step 3. Install Batteries

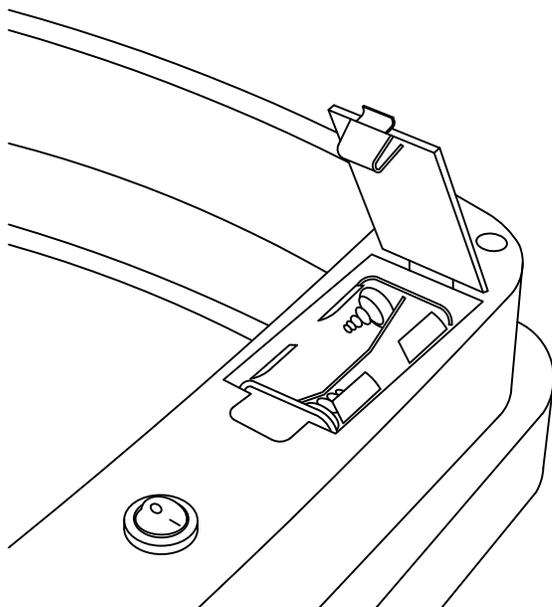


Take out the battery case. Install 3 AA batteries into the case according to the "+,-" instruction. Put back the case and seal the cover.

Step 4. Open the Power Switch

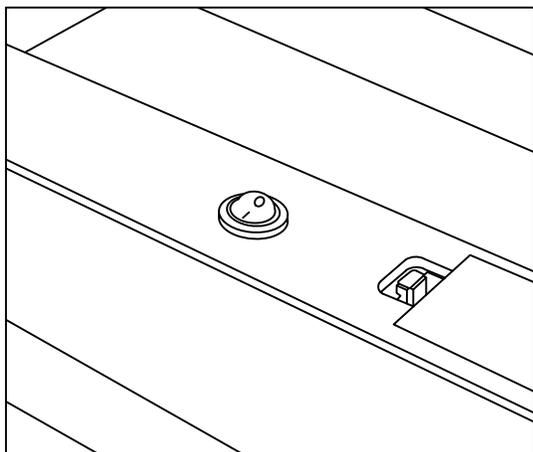

Press the power switch at the back side of the lid to "I" and the automatic sensor system will start to work.


Step 5. Instructions of Sensing Function

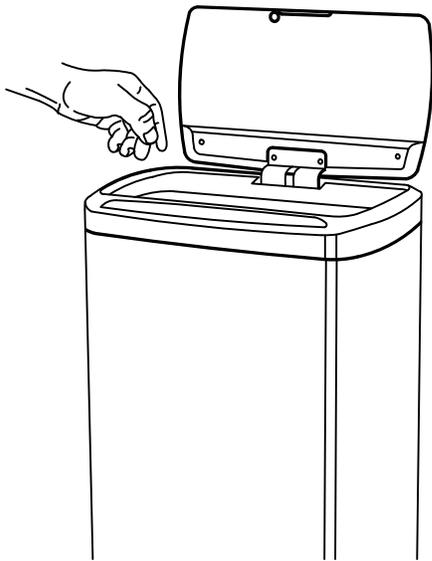


When garbage or any part of your body is in the sensing area (about 10-15cm), lid will open automatically. After leaving the sensing area, the display screen will show a 5 second countdown. The lid will close after the countdown ends.

Step 6. Securing the Trash Bag


Remove the Bag Securing Unit before taking out the full trash bag.

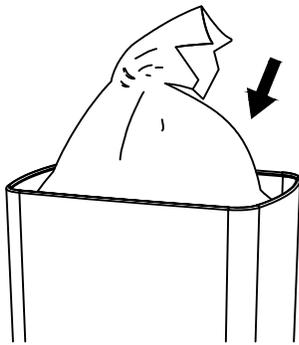

6a. Select your Preferred Trash Bag and Place it inside the Trash Can.

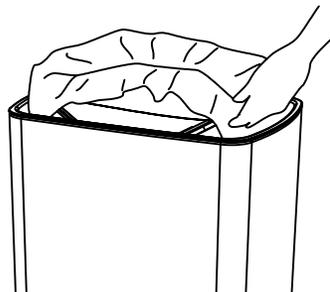


6b. Raise the orange handles from Bag Securing System and wrap the lip of the trash bag around the orange handles.

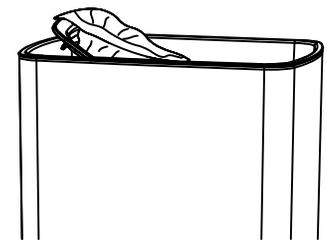

6c. Lower the handles once wrapped and replace the Lid.

Touch Button

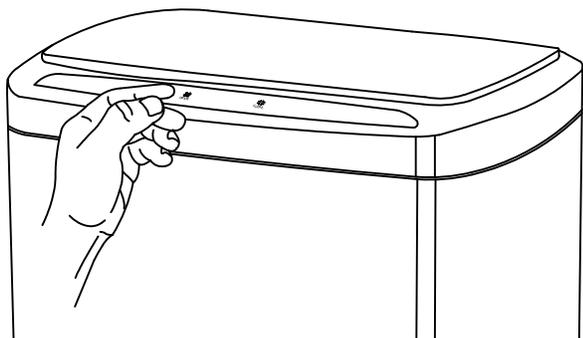


1. Press the OPEN/CLOSE button on the screen to keep the lid in the open position.

2. Press it again to close the lid. After you press the OPEN/CLOSE button, the lid will close automatically after 5 seconds if no objects are sensed.

Precautions

1. When you install batteries, please take note of the "+" and "-" instructions.
2. Be sure to use a clean cloth to clean the trash bin. Please do not use too much water on the trash bin. Water can damage the inner elements. Do not power on if water goes inside of the trash bin.
3. Please do not push or flip the lid to prevent the lid from damage.
4. Please replace the batteries in time to avoid liquid leaking. This situation may damage the electric elements.
5. Avoid using the trash bin under sunlight or wet surroundings.
6. Keep the sensing area clean to ensure proper function of the sensor.
7. Please don't mix acidic batteries and alkaline batteries. Also, do not mix rechargeable batteries and disposable batteries.
8. Please do not attempt to repair the trash bin or replace parts by yourself. This will void the warranty.

Replacement Parts

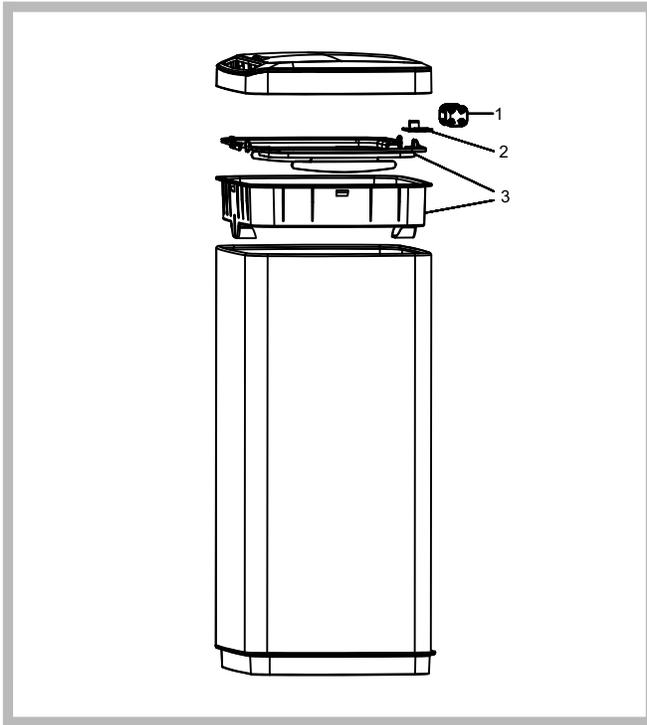

Replacement Parts List	Part #
1. Battery Compartment	KP60000
2. Battery Compartment Cover	KP60001
3. Bag Securing Insert	KP60002

Troubleshooting

If you have followed the instructions carefully and your faucet still does not work properly, take the following corrective steps:

PROBLEM	ACTION
Lid unusually opening	<p>Check whether batteries are installed properly according to "+" and "-" instruction.</p> <p>Check whether the sensing area is clean or not, please use a clean cloth to wipe it if it is dirty.</p>
Lid unusually closing	<p>Check whether the sensing area is clean or not, please use a clean cloth to wipe it if it is dirty.</p> <p>Check whether electric circuits are damp. If yes, please do not connect the power source. You can only use the bin if it is dry.</p> <p>Check whether there is any obstruction around the lid. If yes, please remove it.</p>
Lid opens slowly	Old batteries may have low power. Please replace them.

NOTE: If these solutions do not work, please contact customer service at 1-800-775-0703. Do not attempt to repair the trash bin by yourself.

Accessories - Limited Warranty

Kraus® USA Plumbing, LLC ("Kraus") extends this warranty to the original purchaser for personal household use of the Accessories when purchased from an authorized Kraus dealer and in the location of original installation. This warranty is non-transferable.

Kraus warrants the structure and finish of the Accessories to be free from defects in material and workmanship under normal usage for a period of one (1) year from the date of purchase.

Any product reported to the authorized dealer or to Kraus as being defective within the warranty period will be repaired or replaced with a product of equal value at the option of Kraus.

Commercial Warranty

Kraus USA Plumbing, LLC ("Kraus") warrants its Products for a period of one (1) year to commercial purchasers of Products used in industrial, commercial and business applications.

Care and Cleaning Instructions

Certain cleaning products may cause damage to a Product's finish and use of the following on the Product will void this warranty:

- Abrasive cleaners such as powders, bleach, ammonia, alcohol or chlorine
- Abrasive pads, steel wool or wire brushes

What is Not Covered

This warranty does not cover Products that were discontinued when purchased or display Products, whether such Products were purchased at discount outlets, unauthorized dealers, and/or sold on clearance. This warranty does not cover any free gifts included with purchase.

This warranty does not cover damage resulting from neglect, misuse (including use for an unintended application), abuse, carelessness, accident, hard water or mineral deposits, exposure to corrosive materials, improper maintenance, alteration of the Product, or failure to follow care, cleaning or installation instructions enclosed with your Product. Kraus recommends that all Kraus Products be installed by a fully licensed and insured trade professional with experience in the installation of bathroom and/or kitchen manufactured goods.