CROSLEY
FURNITURE

Round Table
CF2007/CF2008

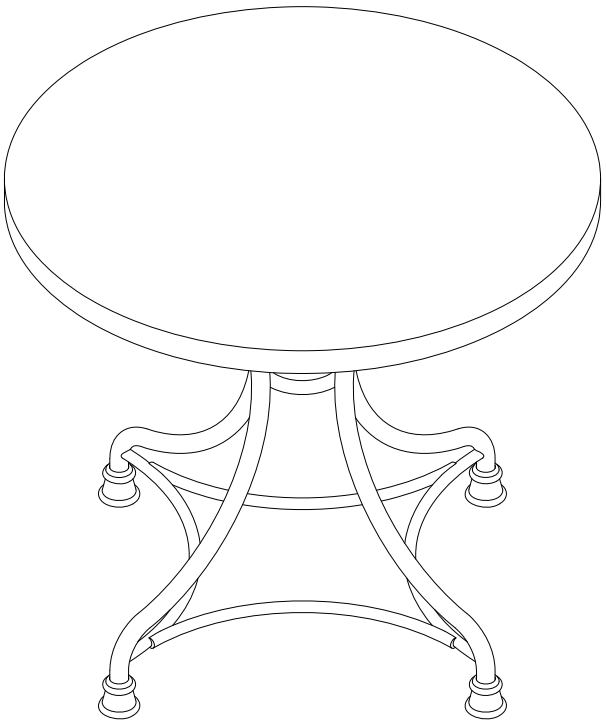

::kitchensource.com
☎ 1.800.667.8721

PART LIST

A	B	C	D
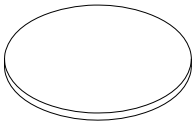			
Marble Top 1 PC	Leg 4 PCS	Circle Frame 1 PC	Bottom Frame 1 PC

HARDWARE LIST

#1	#2	#3
 1/4' x 5/8"L	 1/4' x 1"L	
Bolt 12 PCS (Extra 1)	Long Bolt 4 PCS (Extra 1)	Allen Wrench 1 PC

::kitchensource.com
☎ 1.800.667.8721

Step 1. Carefully lay marble top (part A) upside down on a flat, soft surface, such as carpet. Attach legs (part B) to marble top (part A) using bolts (part #1) and allen wrench (part #3).

Note: Please do not fully tighten bolts at this time.

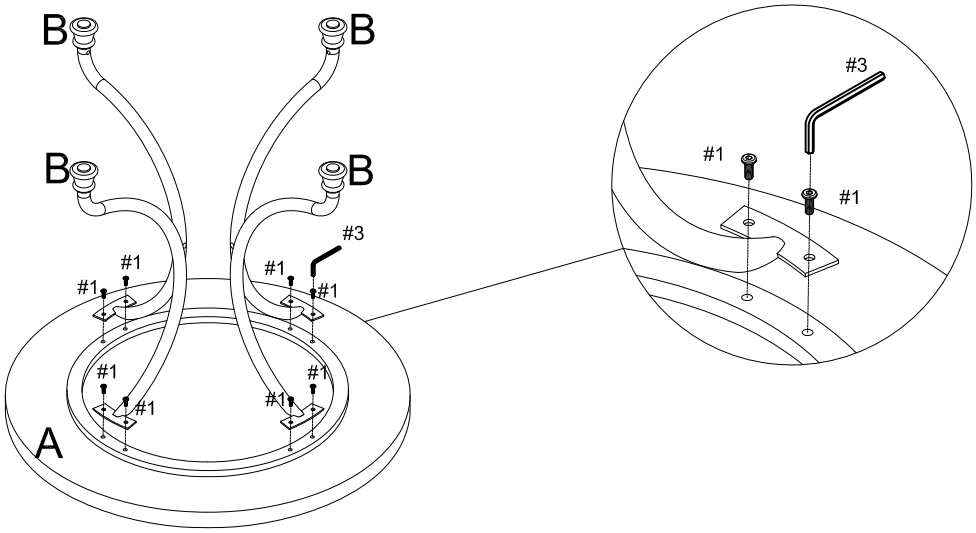

#1 x 8

#3 x 1

Step 2. Attach circle frame (part C) to legs (part B) using long bolts (part #2) and allen wrench (part #3).

Note: Please do not fully tighten bolts at this time.

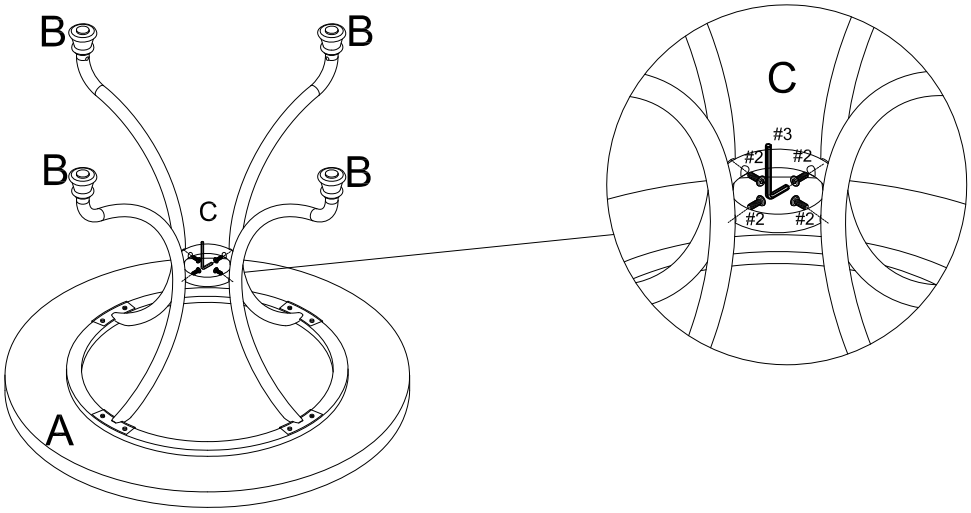

#2 x 4

#3 x 1

::kitchensource.com
☎ 1.800.667.8721

Step 3. Attach bottom frame (part D) to legs (part B) using bolts (part #1) and allen wrench (part #3).

Note: Please fully tighten all bolts at this time.

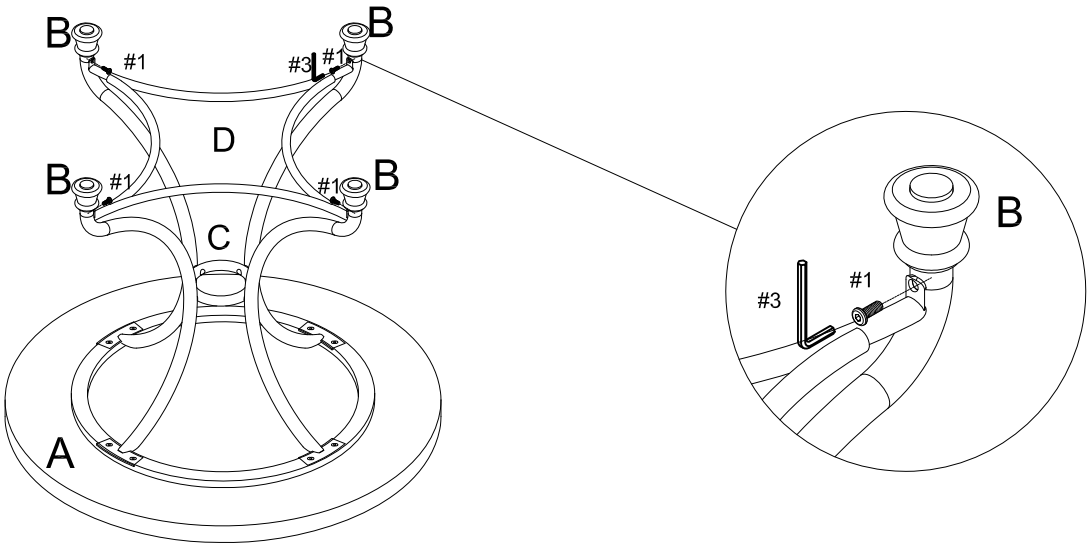

#1 x 4

#3 x 1

Step 4. Carefully turn unit upright.

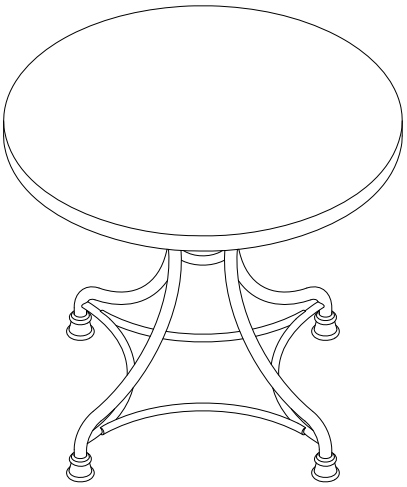

::kitchensource.com
☎ 1.800.667.8721