




**FVN21-123012**  
**CAMBRIDGE**  
**INSTALLATION GUIDE**

**kitchensource.com**  
1.800.667.8721

**FRESCA®**

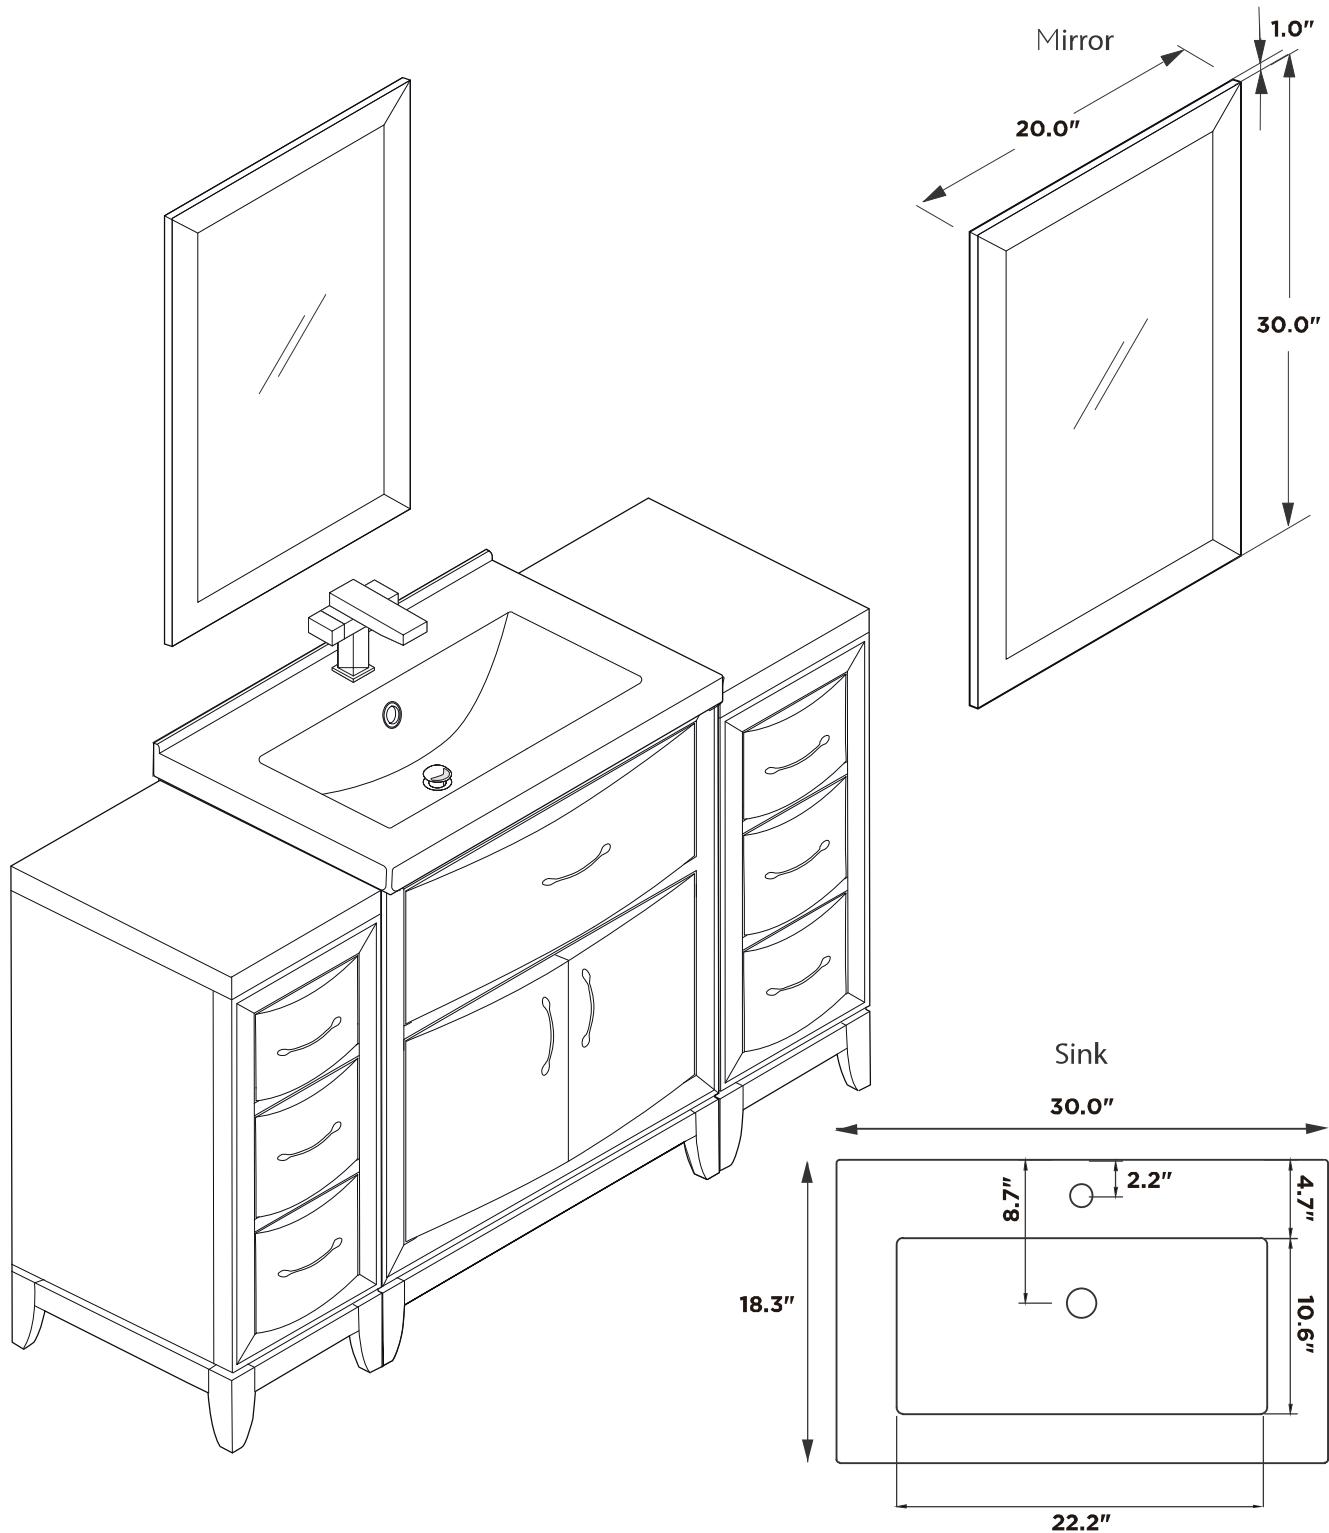

Note: All dimensions and specifications are approximate and subject to change without notice.



**FVN21-123012 | CAMBRIDGE | INSTALLATION GUIDE**

PAGE 1




**FVN21-123012**  
**CAMBRIDGE**  
**INSTALLATION GUIDE**


**kitchensource.com**  
1.800.667.8721

  
**FRESCA®**



Vanity Front

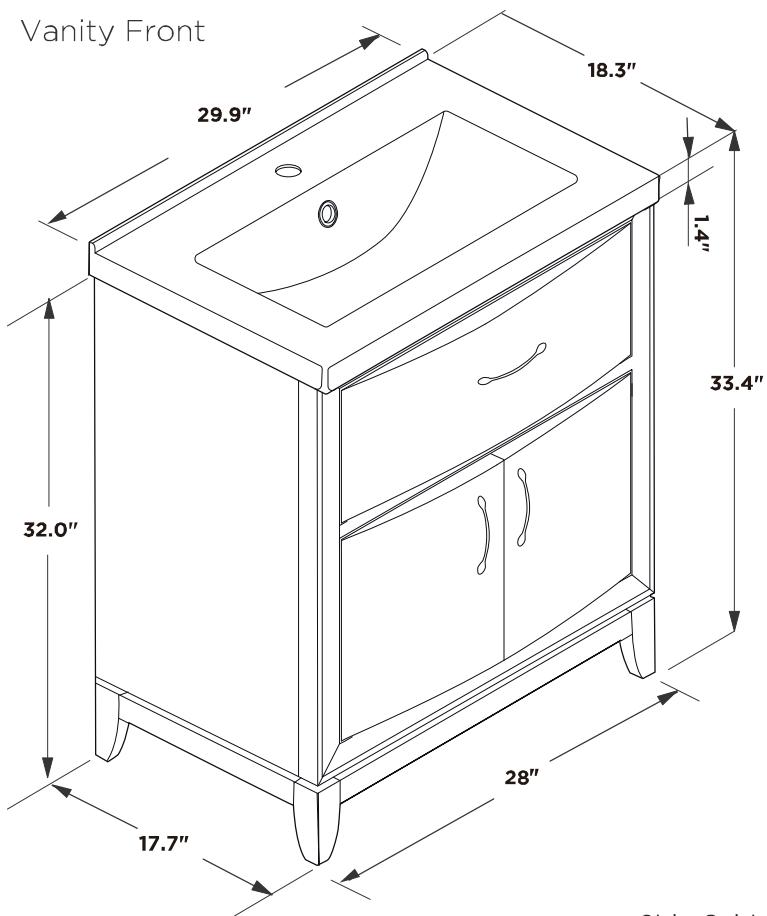

Vanity Back

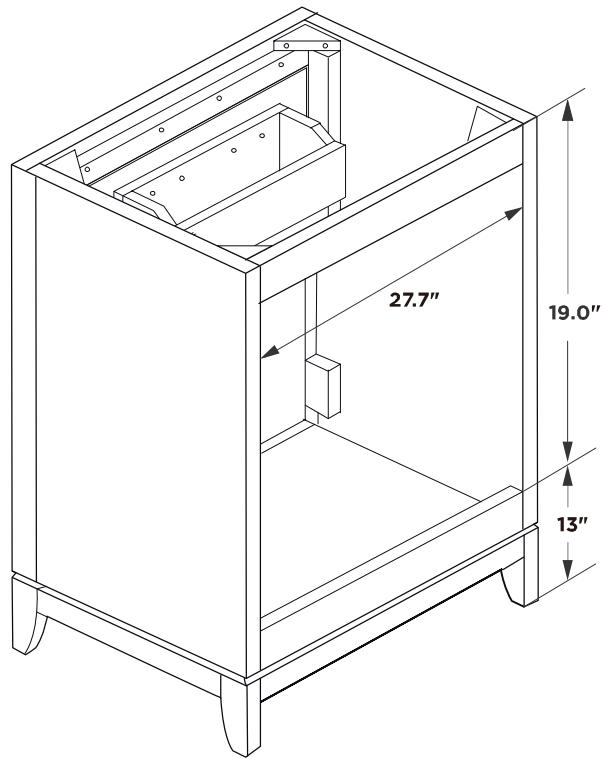

Side Cabinet Back

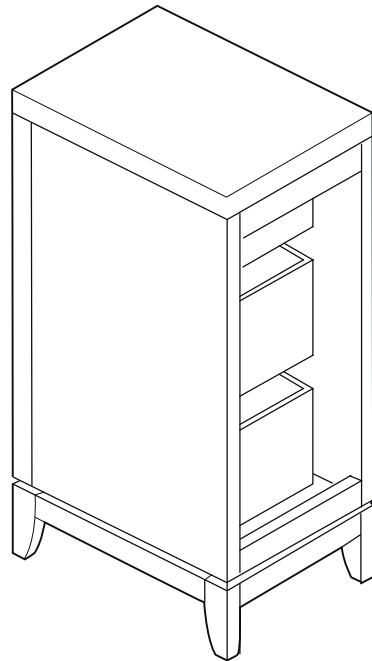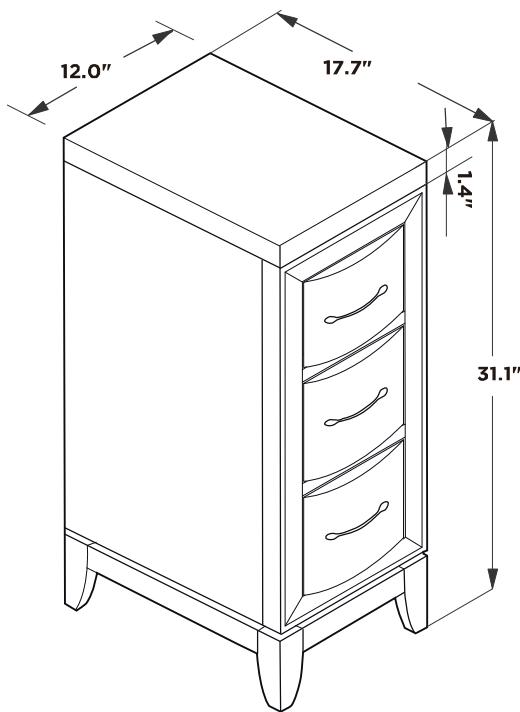

**FVN21-123012 | CAMBRIDGE | INSTALLATION GUIDE**


PAGE 2

# MIRROR INSTALLATION INSTRUCTION

## TOOLS FOR ASSEMBLY




- 1** Measure the distance between the brackets on the back of the mirror

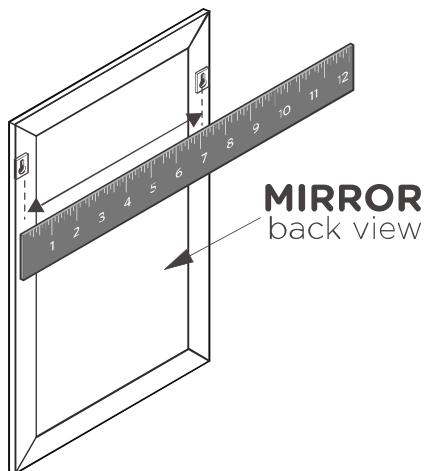


**MIRROR**  
back view


- 2** Mark the measured distance on the wall using a level

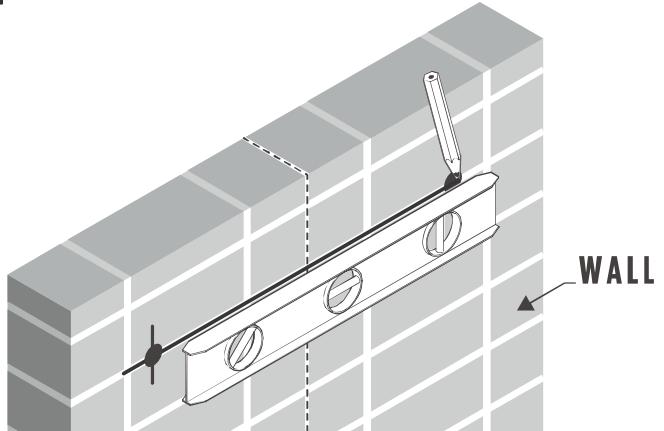

- 3** Once position is marked, drill 2 holes and insert anchors if stud is not available

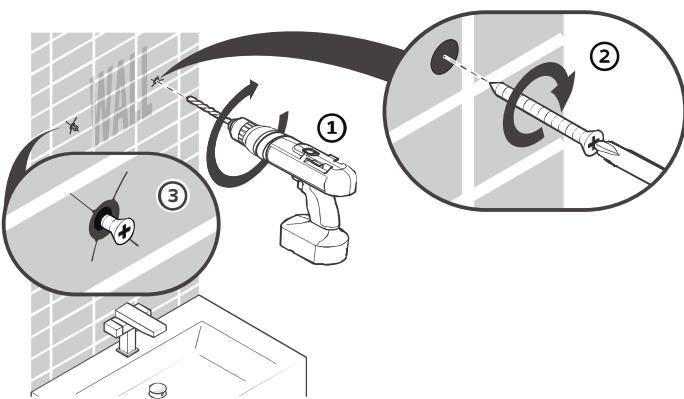

- 4** Hang mirror on the wall

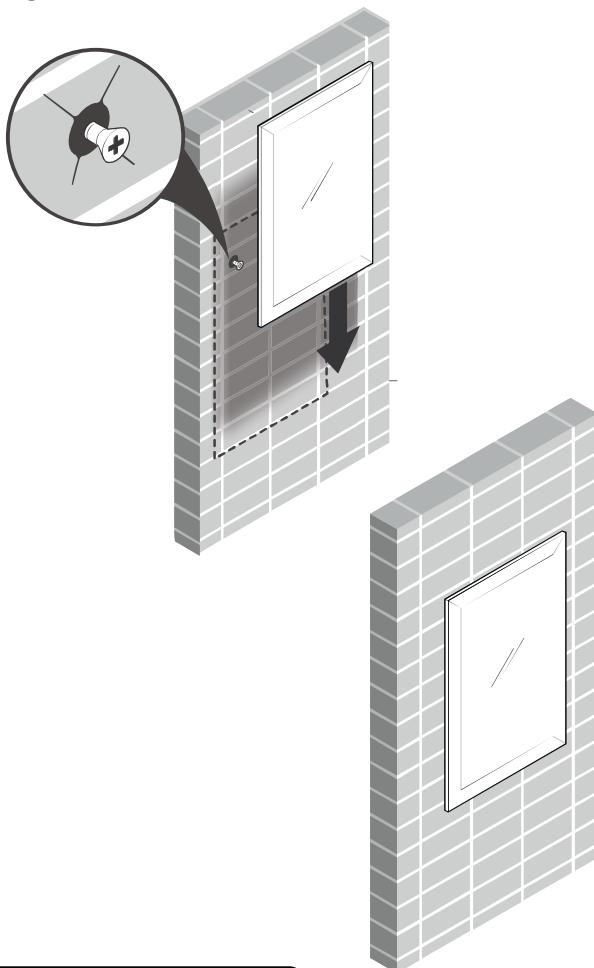

### IMPORTANT:


CONSULT AN EXPERT FOR THE PROPER SCREWS/BOLTS TO USE WHEN ATTACHING TO VARIOUS WALL CONSTRUCTIONS. SCREWS PROVIDED DO NOT ATTACH TO ALL WALL CONSTRUCTION TYPES.




**FVN21-123012 | CAMBRIDGE | INSTALLATION GUIDE**

PAGE 3

### DRAWER REMOVAL

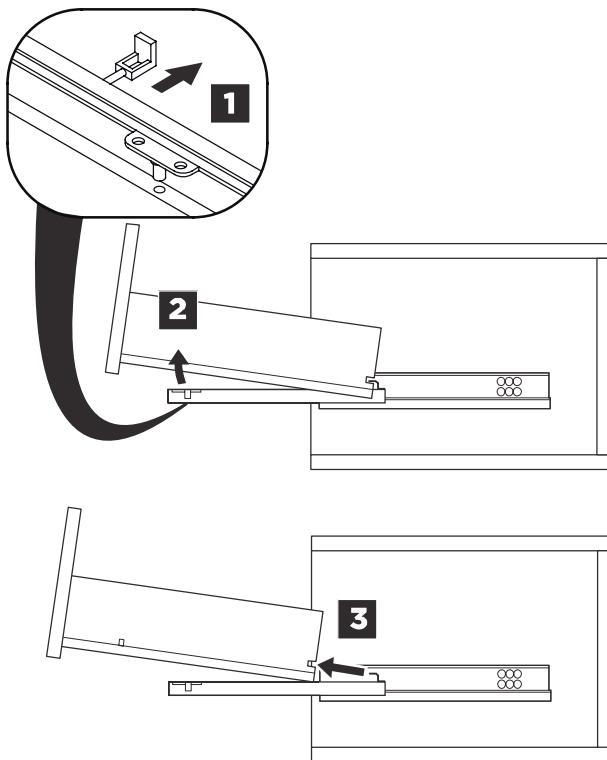


### DRAWER INSTALLATION

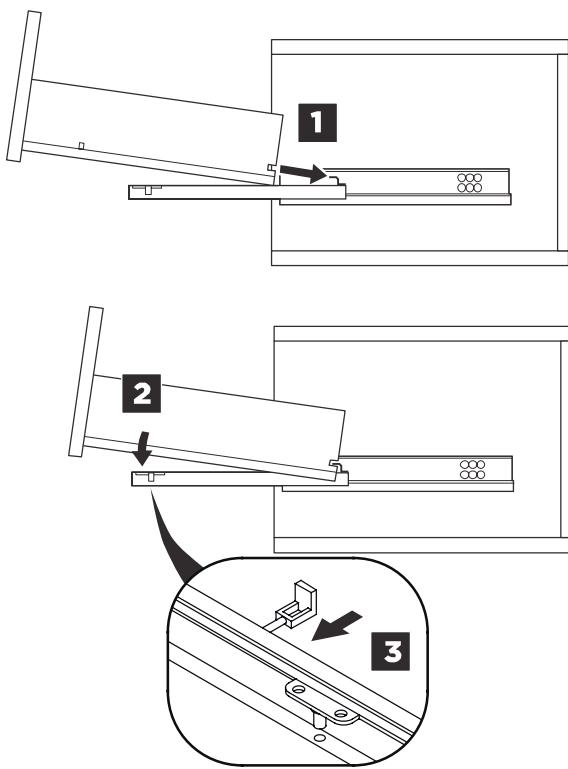


## INSTALLATION INSTRUCTIONS

- 1 Secure cabinet to the wall

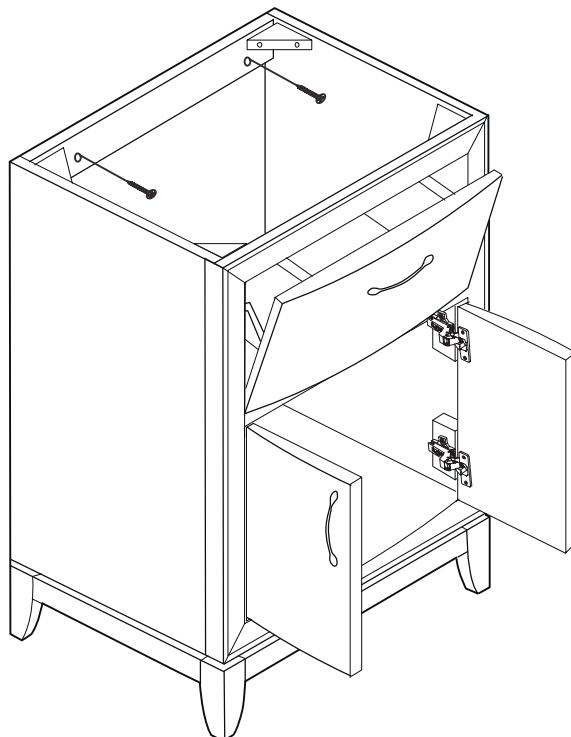


- 2 Apply a bead of silicone on the top of the cabinet and place the sink on top

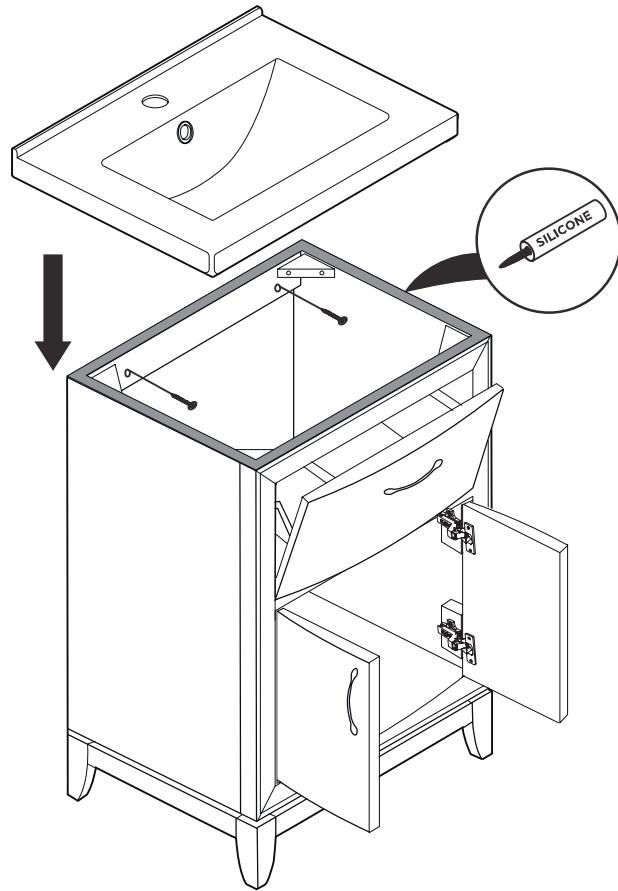


- 3 Remove side cabinet drawer

- 4 Secure cabinet to the wall

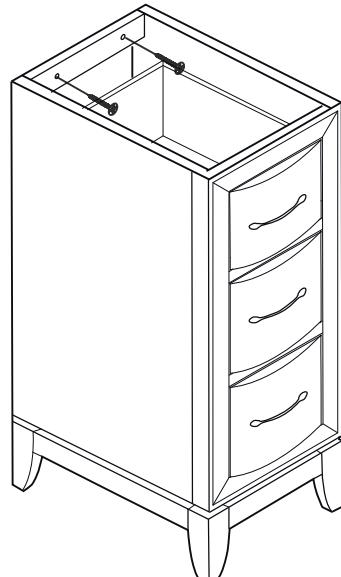

- 5 Apply a bead of silicone on top of the cabinet and place the counter-top on top

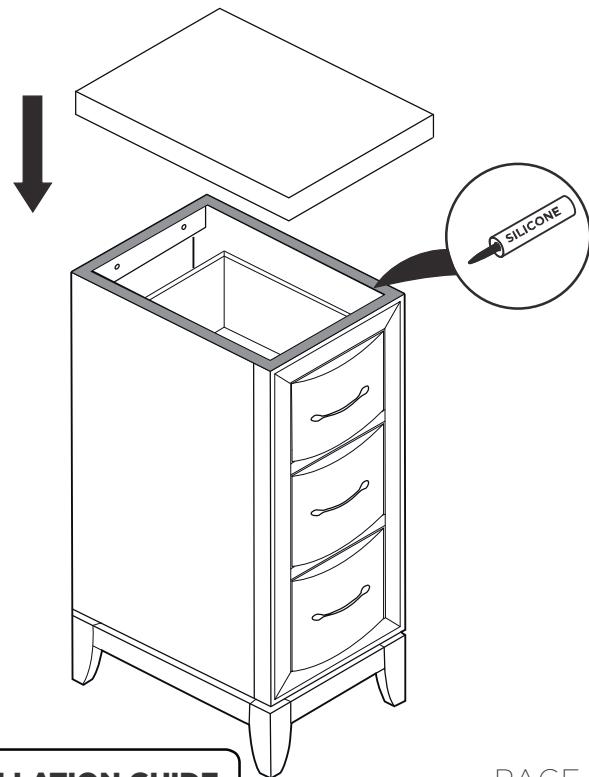

**IMPORTANT:**

Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.




**FVN21-123012 | CAMBRIDGE | INSTALLATION GUIDE**

PAGE 5

# P-TRAP & POP-UP


## INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration.

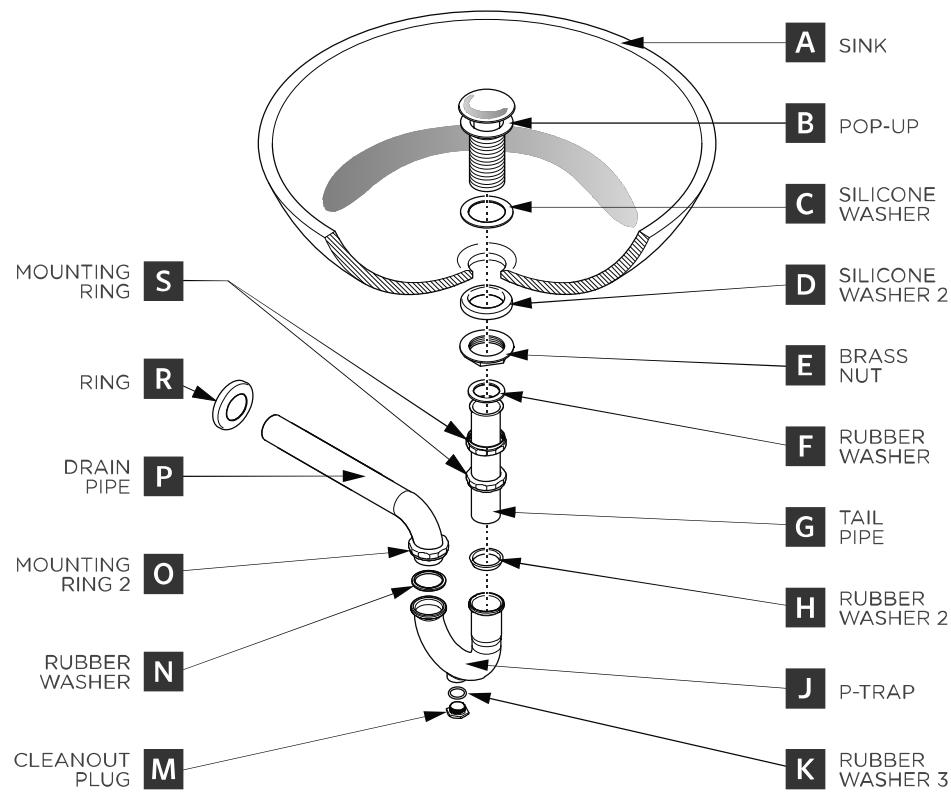


### POP-UP INSTALLATION

#### FOR SINKS WITHOUT OVERFLOW

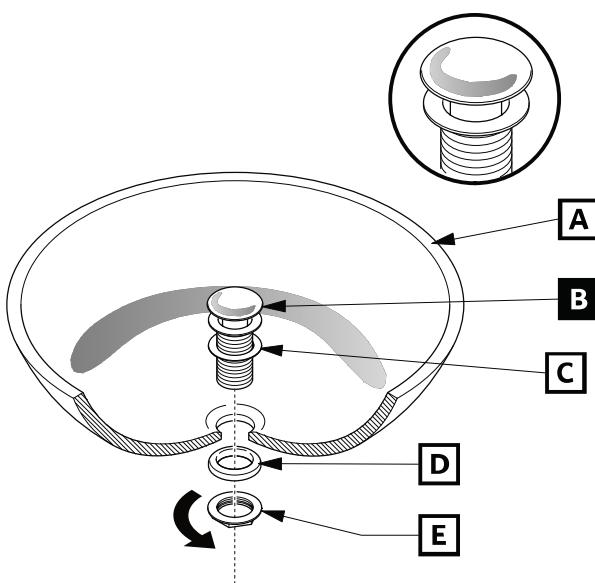


#### FOR SINKS WITH OVERFLOW

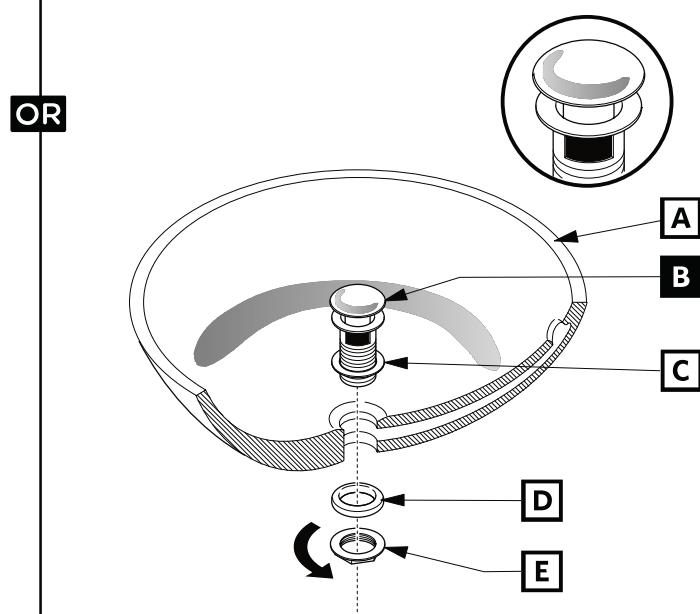

## P-TRAP INSTALLATION

- 1 Install tail pipe (G)

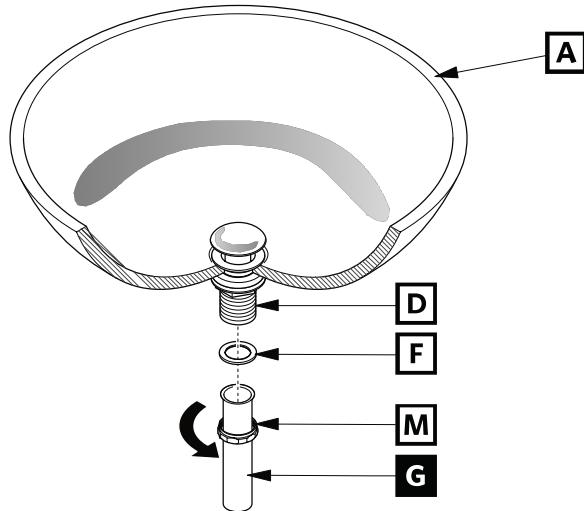

- 2 Install P-trap (J)

