

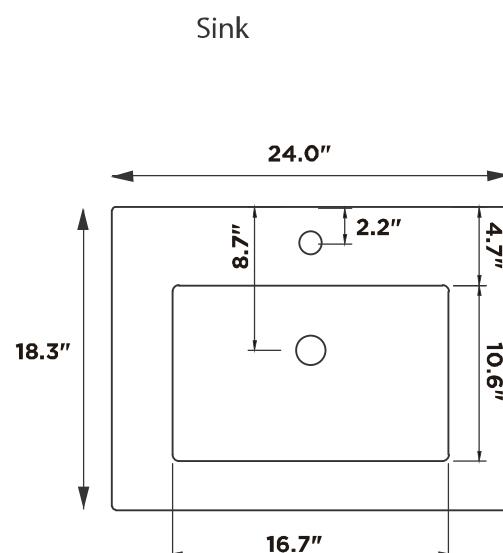


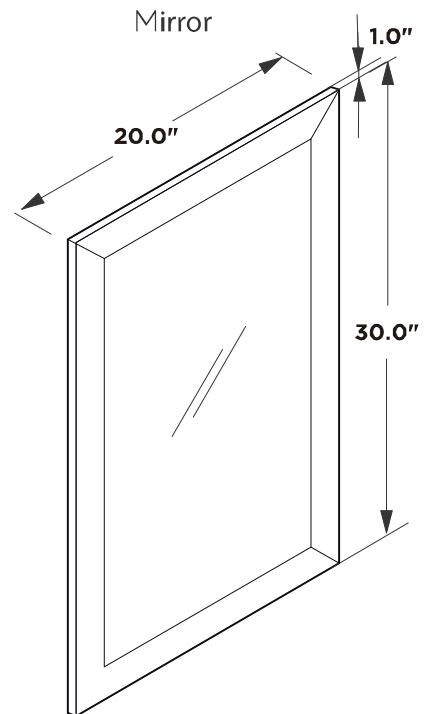

FVN21-2412
CAMBRIDGE
INSTALLATION GUIDE

kitchensource.com
1.800.667.8721

FRESCA®

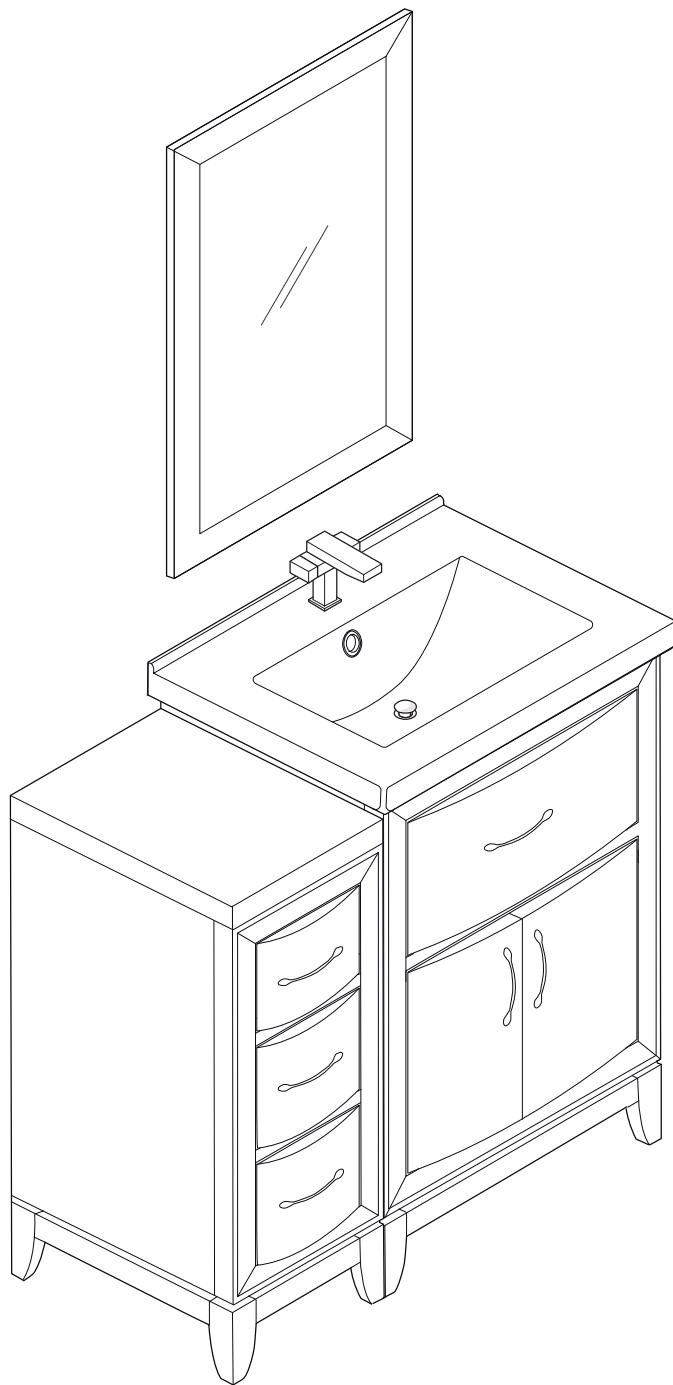

Note: All dimensions and specifications are approximate and subject to change without notice.



FVN21-2412 | CAMBRIDGE | INSTALLATION GUIDE

PAGE 1




FVN21-2412
CAMBRIDGE
INSTALLATION GUIDE


kitchensource.com
1.800.667.8721

FRESCA®



Vanity Front

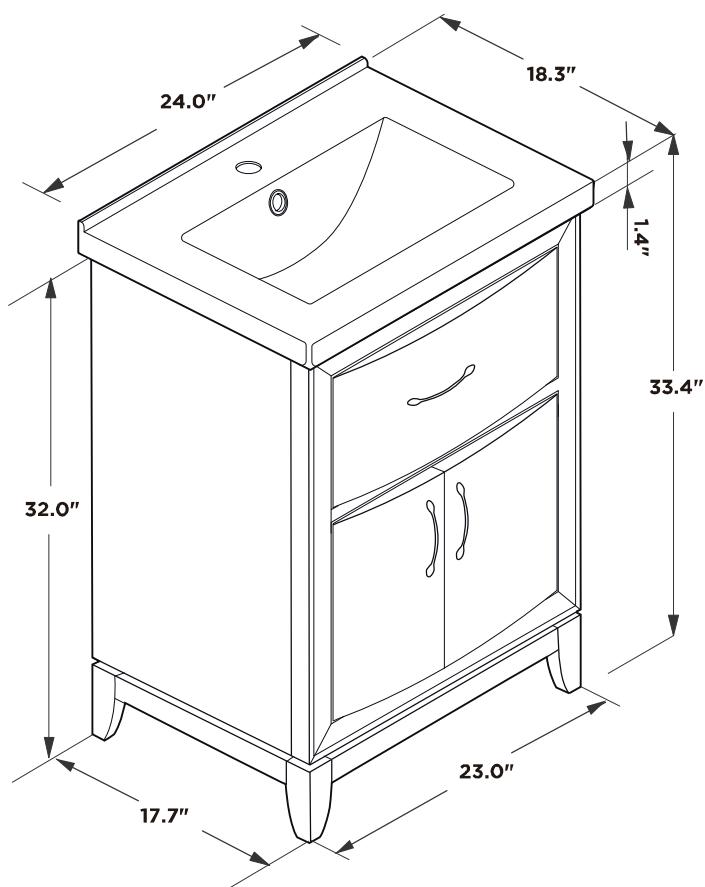

Vanity Back

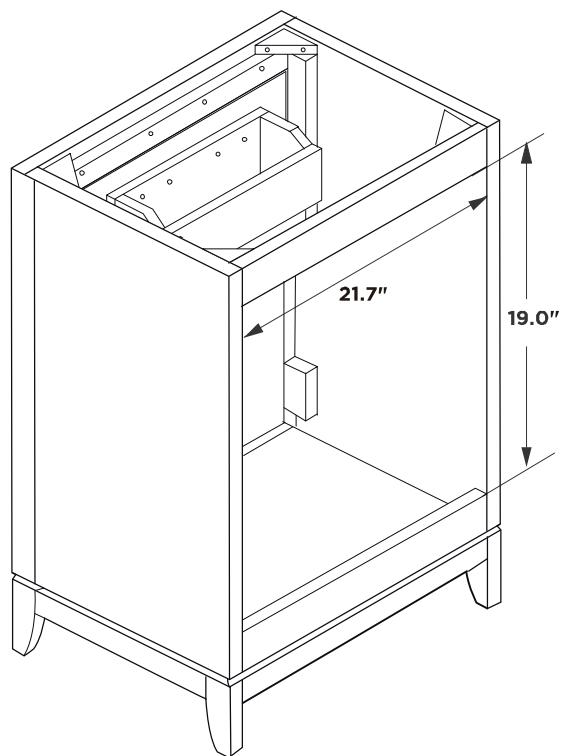

Side Cabinet Back

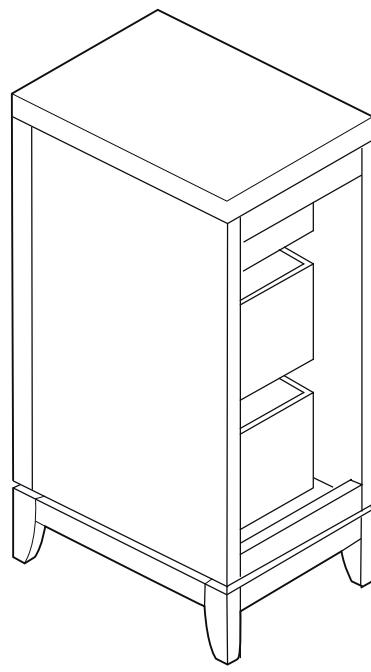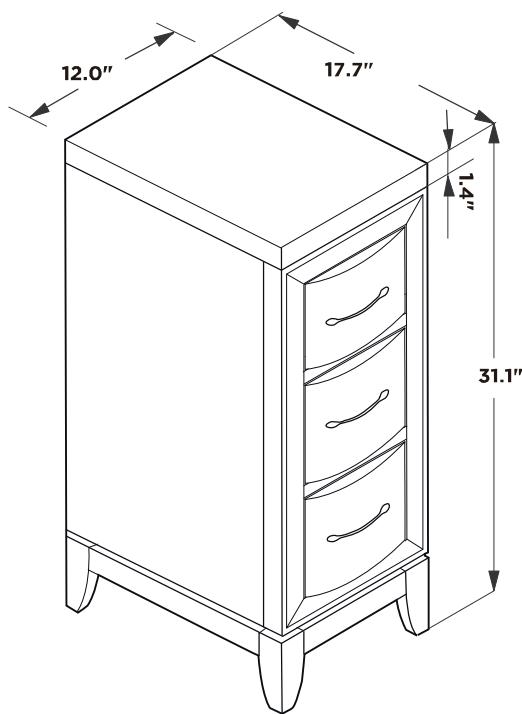


MIRROR INSTALLATION INSTRUCTION

TOOLS FOR ASSEMBLY




- 1** Measure the distance between the brackets on the back of the mirror

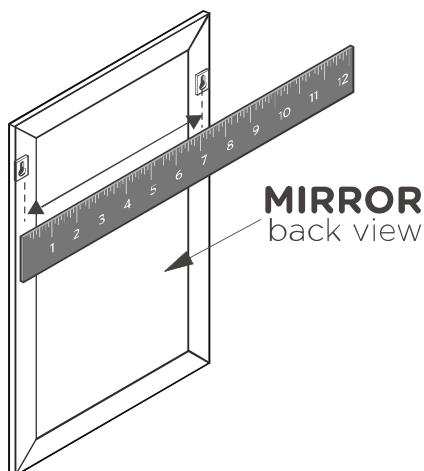


MIRROR
back view

- 2** Mark the measured distance on the wall using a level

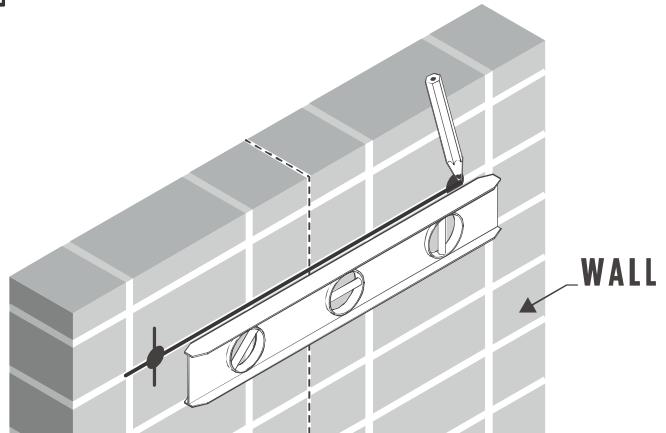


WALL

- 3** Once position is marked, drill 2 holes and insert anchors if stud is not available

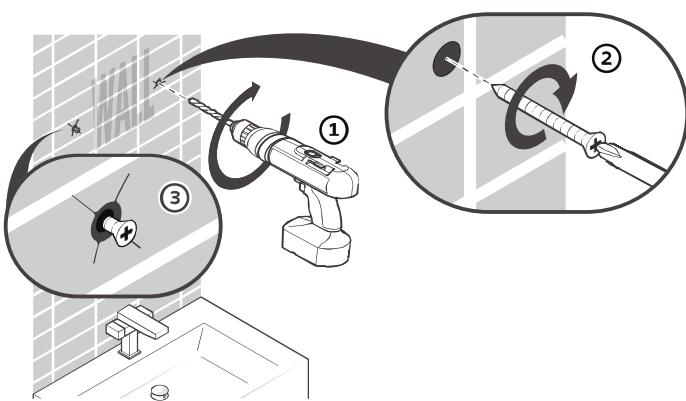

- 4** Hang mirror on the wall

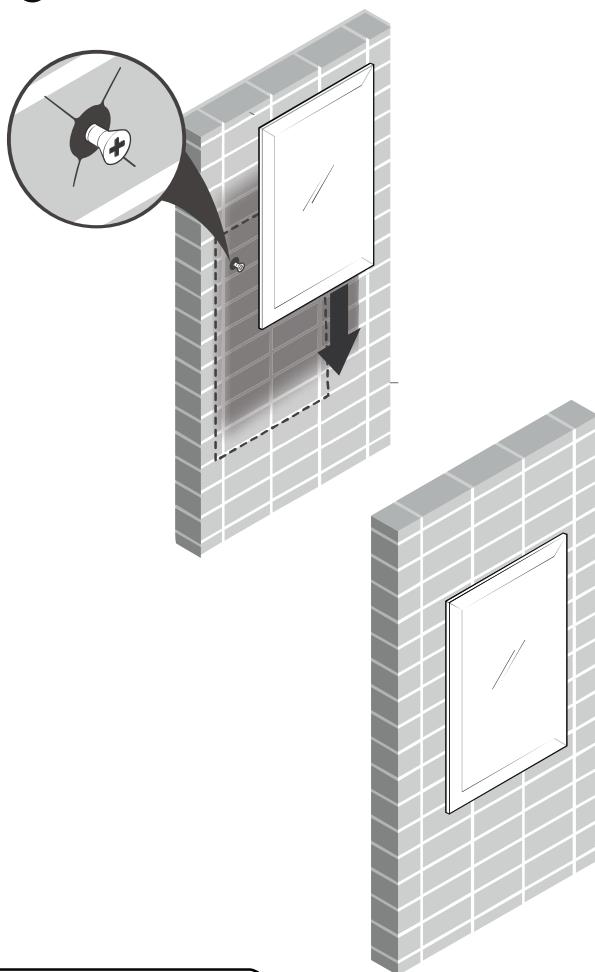

IMPORTANT:


CONSULT AN EXPERT FOR THE PROPER SCREWS/BOLTS TO USE WHEN ATTACHING TO VARIOUS WALL CONSTRUCTIONS. SCREWS PROVIDED DO NOT ATTACH TO ALL WALL CONSTRUCTION TYPES.




FVN21-2412 | CAMBRIDGE | INSTALLATION GUIDE

PAGE 3

DRAWER REMOVAL

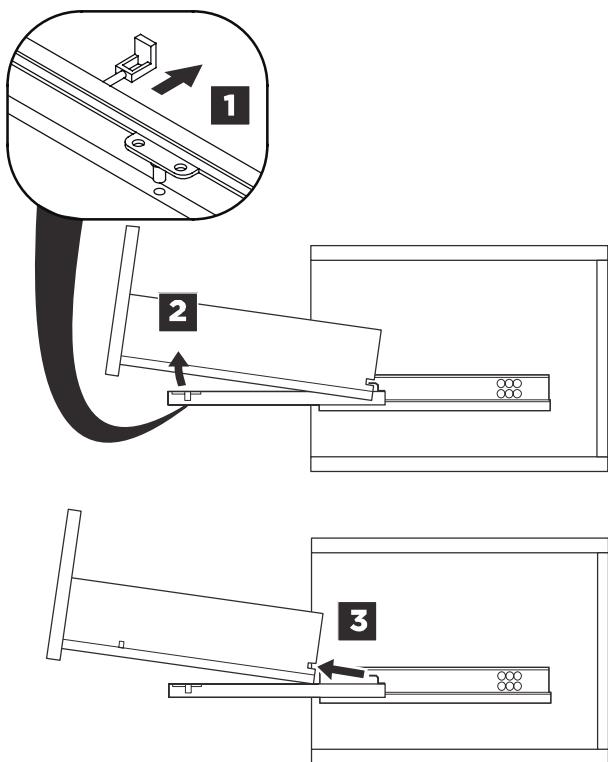


DRAWER INSTALLATION

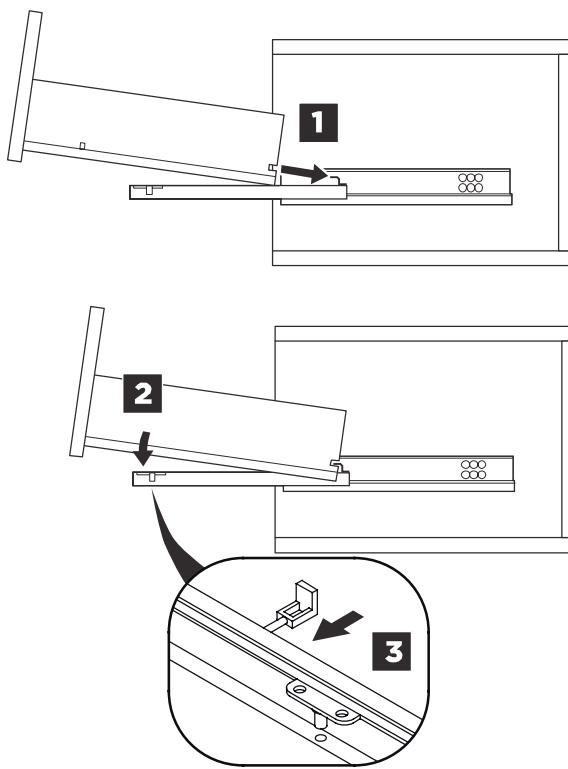


INSTALLATION INSTRUCTIONS

- 1 Secure cabinet to the wall

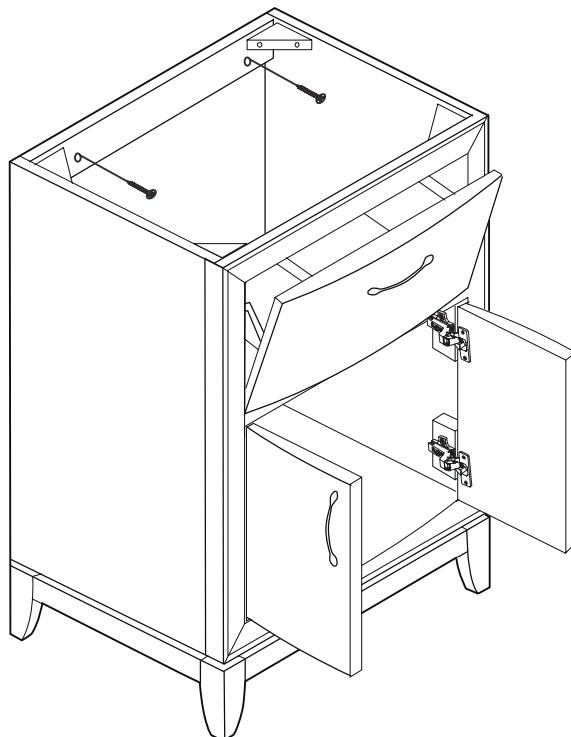


- 2 Apply a bead of silicone on the top of the cabinet and place the sink on top

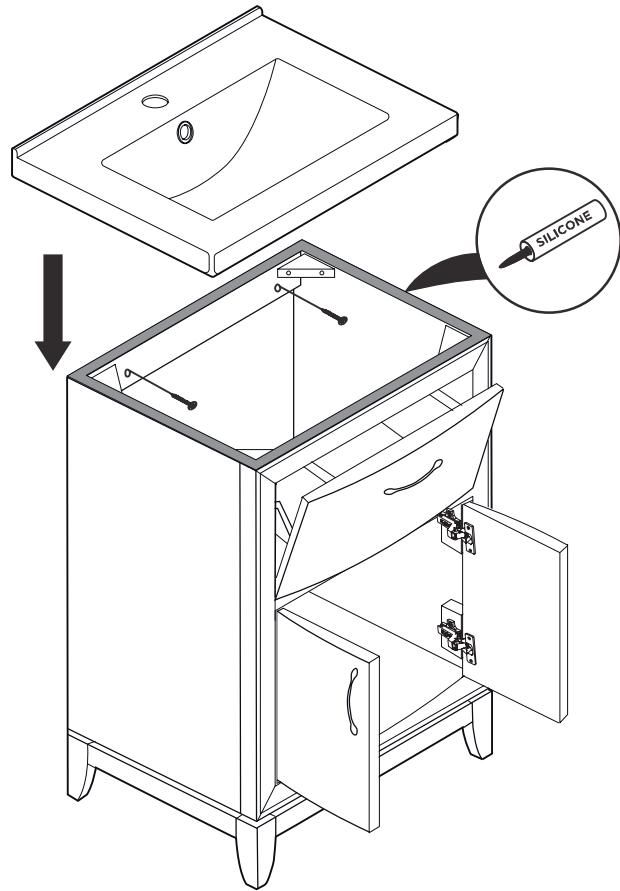


- 3 Remove side cabinet drawer

- 4 Secure cabinet to the wall

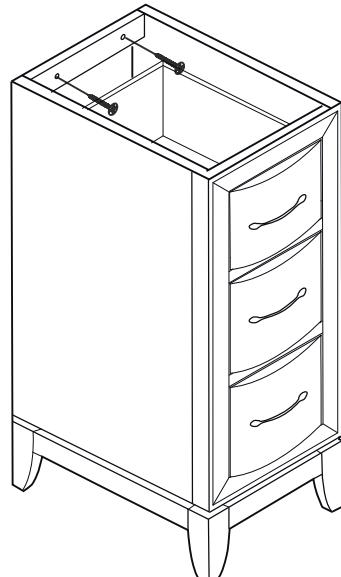

- 5 Apply a bead of silicone on top of the cabinet and place the counter-top on top

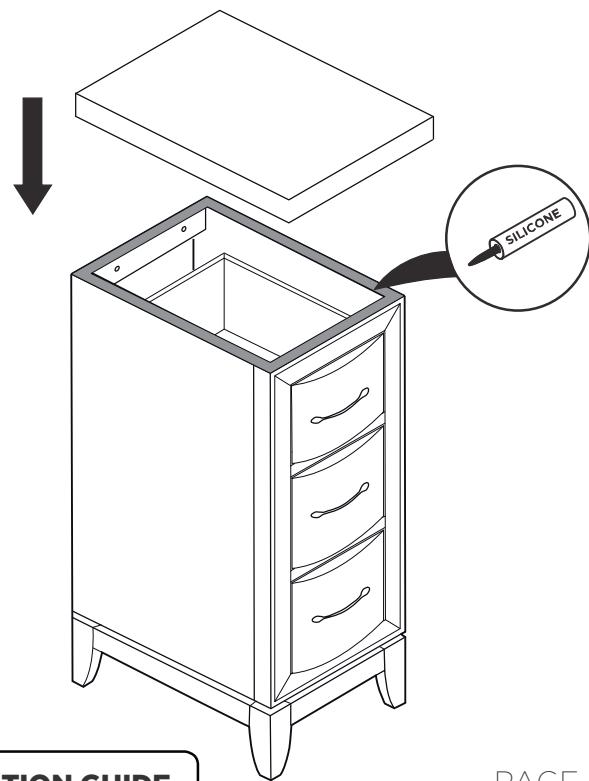

IMPORTANT:

Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.




FVN21-2412 | CAMBRIDGE | INSTALLATION GUIDE

PAGE 5


P-TRAP & POP-UP INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration.

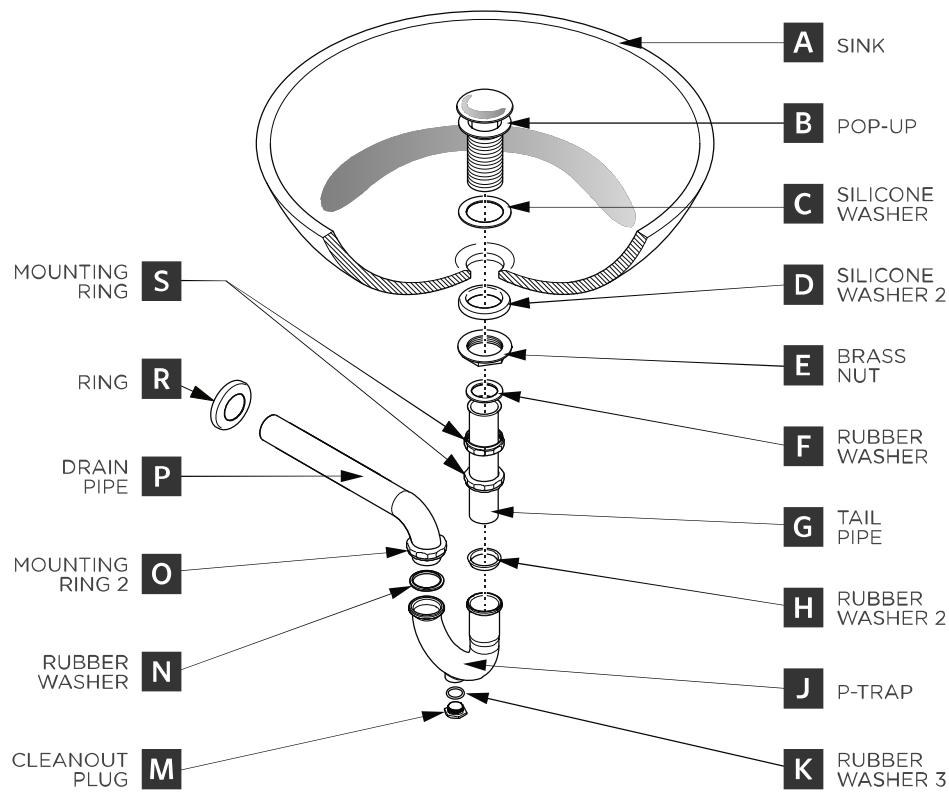


POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW

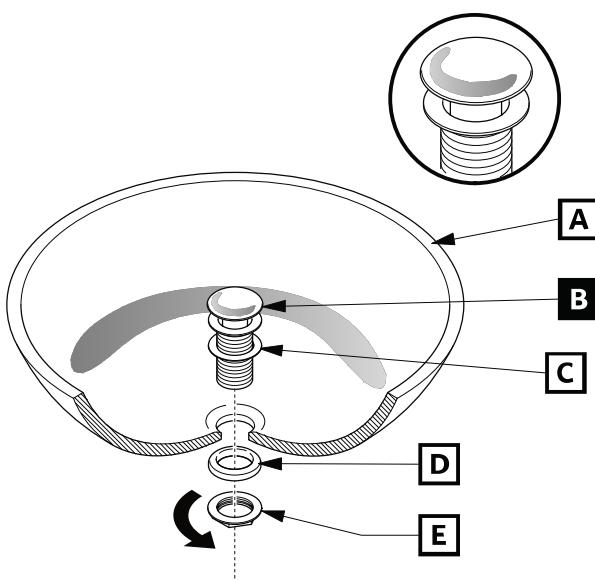


OR

FOR SINKS WITH OVERFLOW

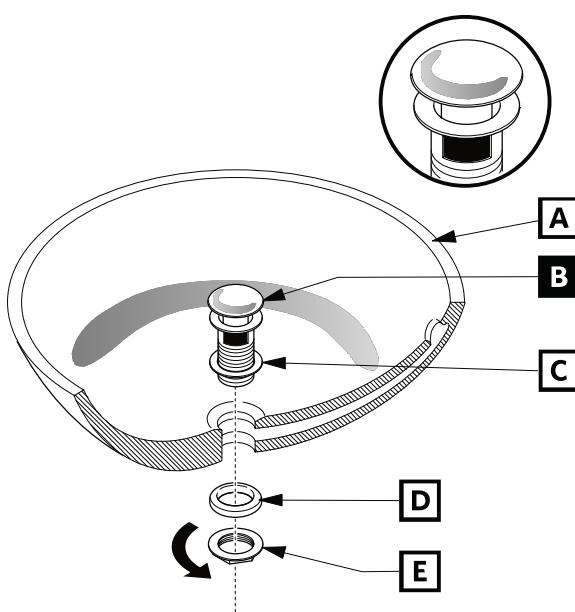

P-TRAP INSTALLATION

- 1 Install tail pipe (G)

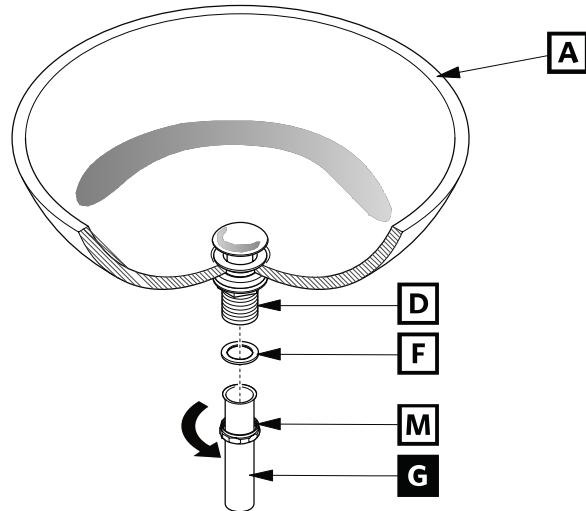

- 2 Install P-trap (J)

