

UNDERMOUNT PAN RACKS/ SUPPORT



Installation Instructions

Inspect all parts and read all instructions prior to beginning assembly and installation.

Step 1:

Install the drawer slides by mounting the slide to the face frame and utilizing the rear mounting brackets to attach the slides in the back of the cabinet. Use two #7 X 5/8" screws per slide to attach the slides to the face frame and three #6 X 1/2" screws for each of the rear mount brackets. Be sure to position the slides level at a height that ensures the tray will clear the cabinet opening when in place.


Step 2:

Attach the drawer slide release clips to the drawer box as shown in **illustration 1** using two #6 X 1/2" screws per clip. Be sure the clips are placed in the front corners of the drawer box.

Step 3

Extend the installed drawer slides and place the tray onto the slides, making sure the release clips lock onto the slides.

Illus. 1

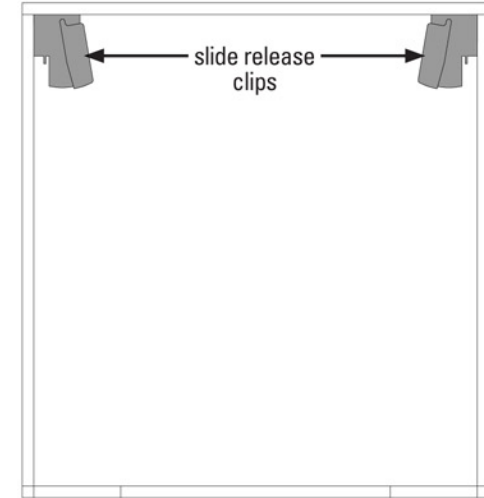

Parts included

- 1 set of undermount slides
- 2 rear mounting brackets
- 1 pan tray
- 10 # 6 1/2" truss head screws (4 for release clips; 6 for rear brackets)
- 4 #7 5/8" flat head screws (for mounting slide to face frame)

Tools Required

- Phillips head screwdriver
- Drill with 3/32" bit for pilot holes
- Pencil

Product Assemblies

UMSOPS21-M UMSOPS-MGT21-M



Real Solutions
For Real Life.™