

# ALTERNATIVE “EASY INSTALL”

for RV Series Pull-Out Waste Containers WITH

## Door Mounting Brackets Tape

Your Door Mount Kit also includes two pieces of specially designed two-sided tape. Follow the directions below for quick and easy installation method that is usually much faster for “In-Home” retro-fitting:

### STEP 1:

Follow steps one through four on “Installation Instructions” (Seperate Sheet).


### STEP 2:

Make sure you have correctly selected the correct positioning of our Door Bracket Flanges so that the mounting holes will be located in a position to insert the fasteners (screws) in the thick, outside section of the door panel.



### STEP 3:

Peel off one side of each of the (4) tape squares provided and carefully place over the door bracket flanges

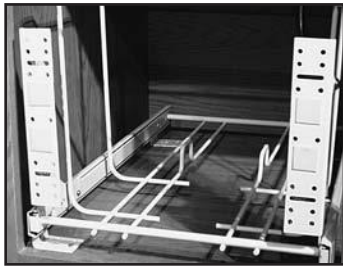

### STEP 4:

Loosen the 4 bolts (2 each side) that connect the door brackets to the product member bracket. Pull them forward (towards you) and tighten them. This will insure that the face of the door bracket extends slightly outside of the front frame of your cabinet.

### STEP 5:

Peel off the exterior layer of tape. Now carefully line up your desired door position by eyesight using the drawer above and any cabinets to your left or right as a gauge for correct alignment.



### STEP 6:

Press the door firmly onto the door brackets with the two sided tape. Put pressure directly on the lower left and right edge to allow for good adhesion.



### STEP 7:

Carefully pull out door from bottom edge and mark several holes on each side through the brackets.



### STEP 8:

Fasten the brackets to the door using the tape as a temporary hold while you insert your #6 x 1/2" wood screws.



### STEP 9:

- Final adjustment
- Loosen the four bolts and make adjustments if necessary. (See Step 12 on installation instructions)

