



REV-A-SHELF®

INSTRUCTION SHEET

TOOLS REQUIRED:
OUTILS NÉCESSAIRES:
HERRAMIENTAS NECESARIAS:




ESTIMATED ASSEMBLY TIME:
TEMPS ESTIMÉ DU MONTAGE:
ESTIMAR EL TIEMPO DE MONTAJE:

60-90 MIN

CARE AND MAINTENANCE:
ENTRETIEN ET MAINTENANCE:
CUIDADO Y MANTENIMIENTO:

**NEVER OIL THE BOTTOM
SLIDE PLATE, CLEAN WITH
A DAMP CLOTH**



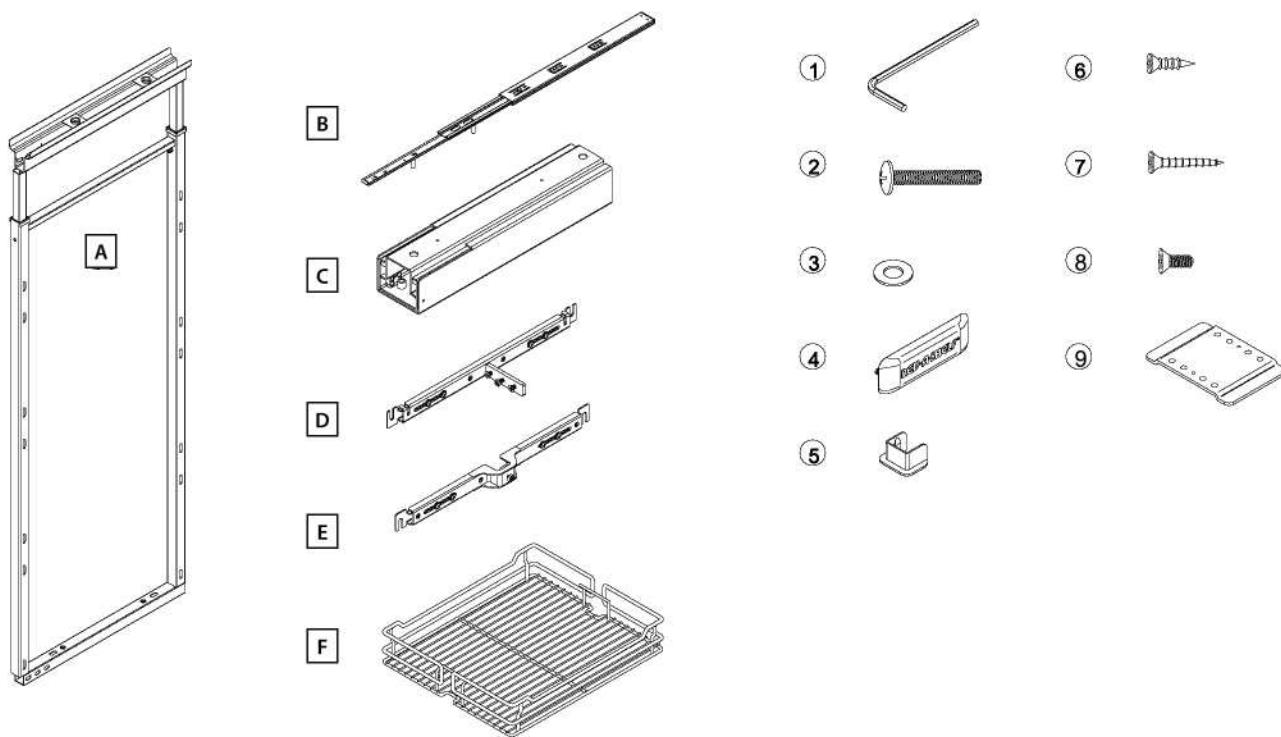

Component Check List • Lista para verificar los componentes • Liste de vérification des composants

Description • Descripción • Description	5243/5250	5258	5273
A Steel Frame • Marco de metal • Cadre en acier	1	1	1
B Top Side • Lado superior • Coulisse du haut	1	1	1
C Bottom Side • Lado inferior • Coulisse du bas	1	1	1
D T Type Door Bracket • Soporte de puerta tipo T • Support de type T pour porte	2	2	2
E Door Bracket • Soporte de la puerta • Support pour porte	1	2	2
F Basket • Canasta • Panier	4	5	6


Fittings Check List • Lista para verificar equipo • Liste de vérification des raccords

Description • Descripción • Description	1	2	3
1 4mm Allen Wrench • Llave Allen de 4mm • Clé Allen de 4mm	1	1	1
2 M6 Screw • Tornillo M6 • Vis M6	2	2	2
3 Washer • Arandela • Vis M6	2	2	2
4 Logo Cap • Tapa de logo • Capuchon avec le logo	1	1	1
5 Plastic Basket Clip • Clip plástico para canasta • Attache de panier en plastique	8	10	12
6 #8 x 1/2" Wood Screw • Tornillo de madera #8 x 1/2" • Vis à bois #8 x 1/2"	20	20	20
7 #8 x 1" Wood Screw • Tornillo de madera #8 x 1" • Vis à bois #8 x 1"	16	16	16
8 M4 Screw • Tornillo M4 • Vis à bois #8 x 1"	4	4	4
9 Slide Foot • Pata deslizante • Pied de la coulisse	2	2	2


FACE FRAME CABINETS

Install bottom slide

- 1)** Attach feet (#9) to bottom slide (C) using M4 screw (#8) as shown in figure 1. To attach the rear foot, the soft close will need to be removed first as shown, then re-attach afterwards. You will need to remove the inner member(s) from the slide so you have a hollow channel when attaching the feet.

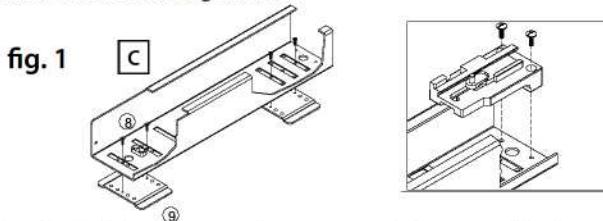


- 2)** Mark 8 hole locations and drill $\frac{1}{8}$ " pilot holes. Roughly align the front of the slide with the front of the face frame and center the slide in the cabinet. Attach to the floor using screw (#7). When using the template to align the pilot hole, be sure to fold across the dotted line on the front of the template to wrap over the face frame or front end of the frameless cabinet. This will keep your slide from being installed too far back into the cabinet. See figure 2.

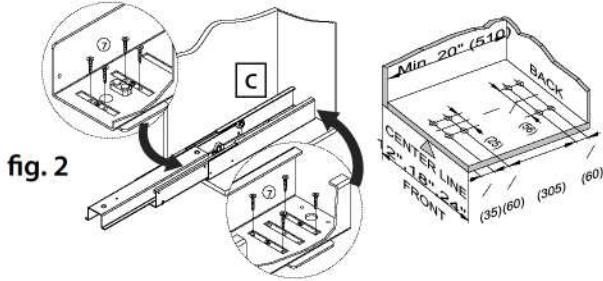


Insert pantry frame

- 5)** The bottom of the frame sits on top of the bottom slide (C) as shown in figure 5. Use M6 screw (#2) and washer (#3) to attach.

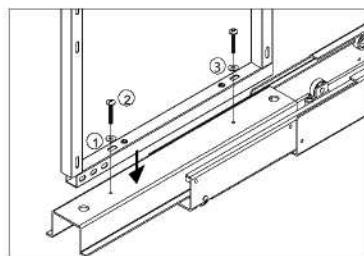

- 6)** Slide the top portion of the frame up so that the top slide is concealed but not touching the wood cabinet.


- 7)** Two pins in top slide insert into mating bushings in the top of the frame (A) as shown in figure 6.

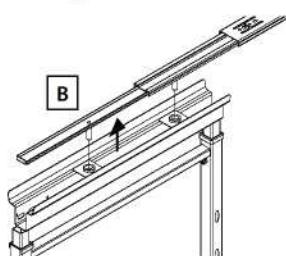

Install top slide


- 3)** The top slide (B) of the pantry needs to be mounted flush with the face frame. It will likely be necessary to cut and attach a spacer board as shown in figure 3.

fig. 3

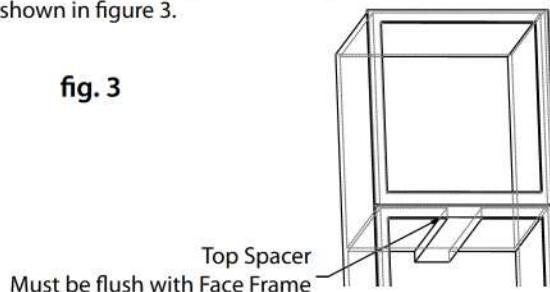

- 4)** Using figure 4, mark 3 hole locations and drill $\frac{1}{8}$ " pilot holes. Roughly align the front of the slide with the front of the face frame and center the slide in the cabinet. Attach to the spacer board from step 3 using screw (#6).

fig. 4

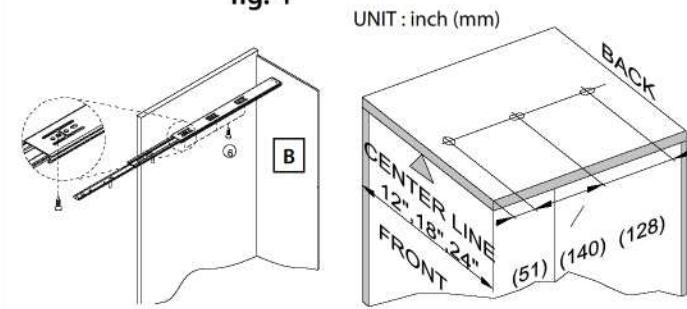

- 8)** Tighten the two screws in figure 7.

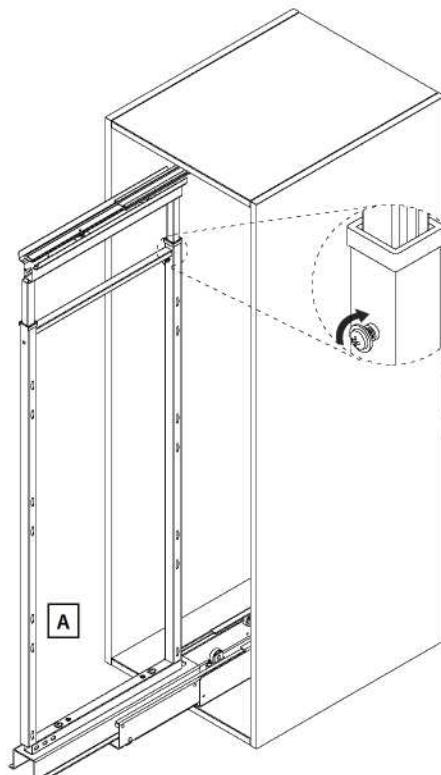


fig. 7