

Always read the instructions completely and carefully before beginning assembly.  
Remove and check contents for damage and / or missing parts.

# Stemware Rack

	Cherry	Maple
12"D x 18"W x 1 1/2"H	541.98.684	541.98.184
12"D x 30"W x 1 1/2"H	541.98.687	541.98.187
12"D x 36"W x 1 1/2"H	541.98.688	541.98.188

## Contents of Box:

- 1 - Stemware Rack
- 4 - #6 x 1" Phillips head screws

## You will need:

- Safety Glasses
- Tape Measure
- Drill and 3/16" drill bit
- Screwdriver

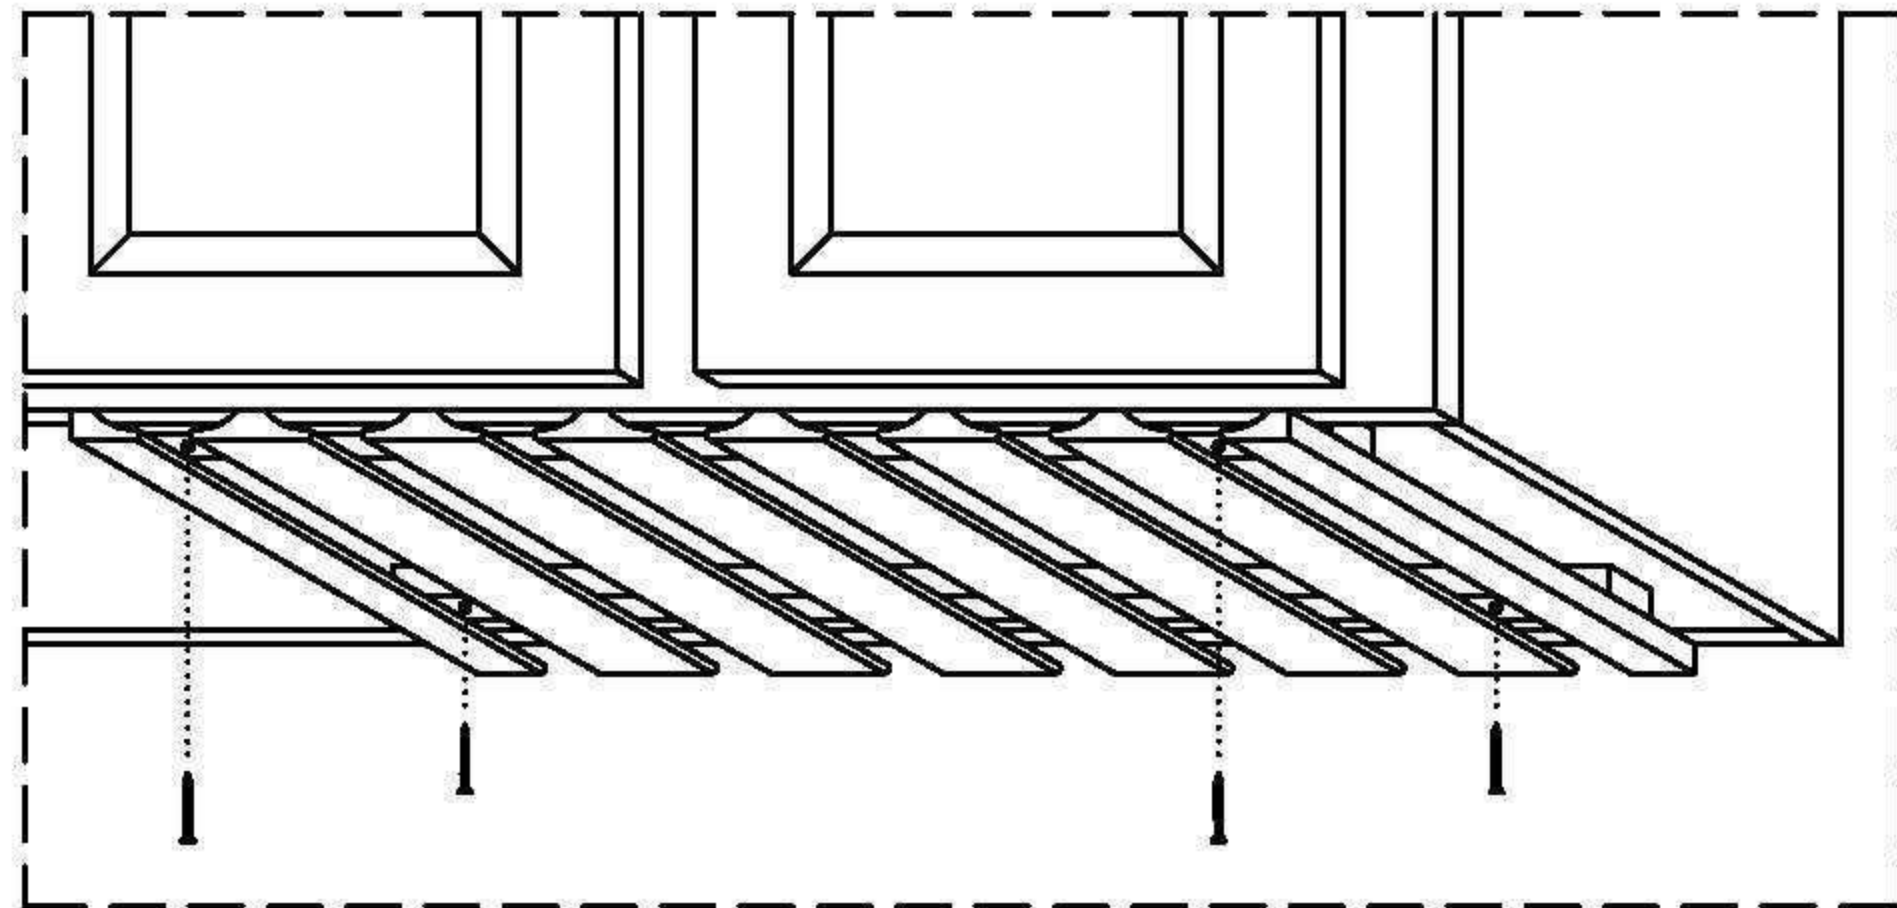


Fig. 1

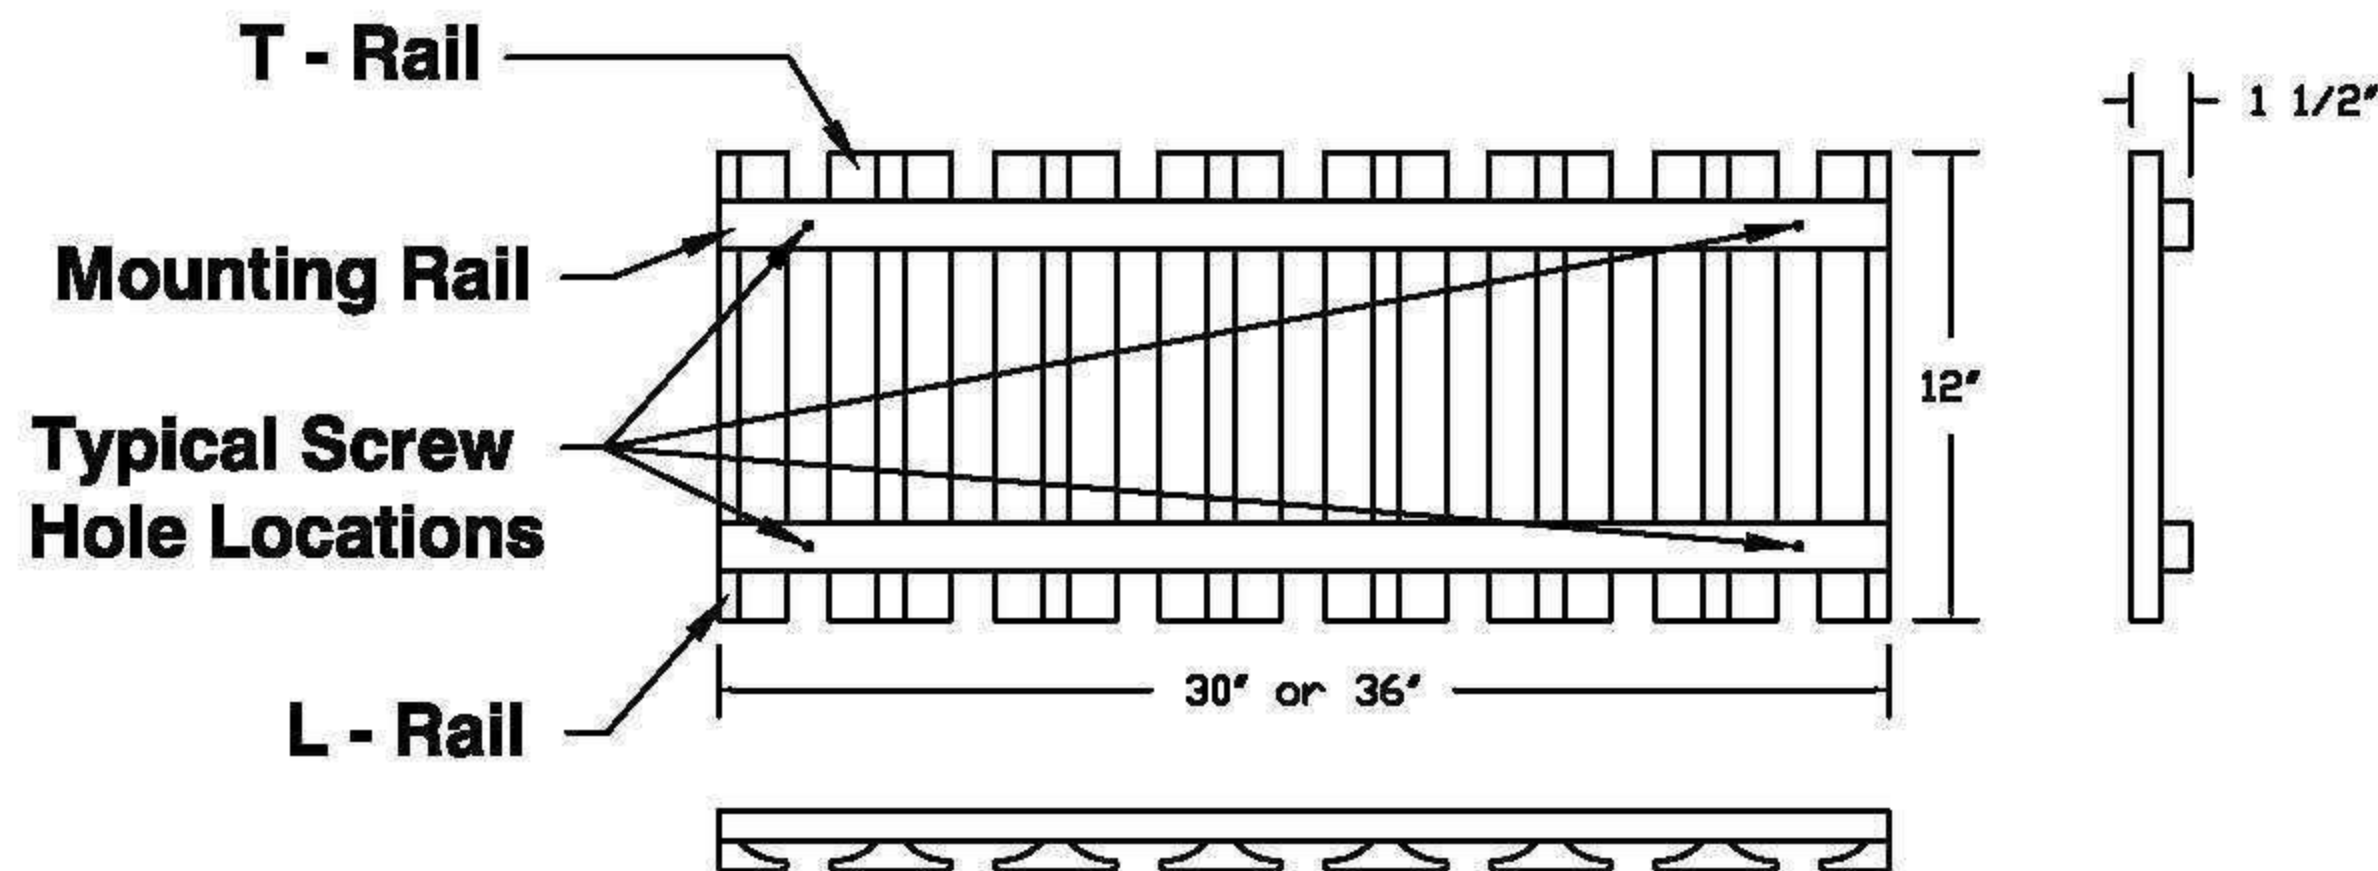


Fig. 2

## Installation Instructions

- Step 1 Measure the depth and width on the underside of your cabinet.  
The minimum cabinet depth required = 12"  
If cabinet width is less than 12" you will have to trim the width of the T & L rails on a table saw.  
If cabinet length is less than the length of the Stemware Rack you will need to trim to proper length.
- Step 2 Mark hole locations and pre-drill holes for screws using a 3/16" drill bit thru the Mounting Rail, centered between the T & L Rails. (See Fig. 2)
- Step 3 Position Stemware Rack under neath cabinet making sure that the front of the Stemware Rack is flush with the front face of the cabinet and fasten to the cabinet with screws provided. **(Note: The screws provided work with a 1/2" thick or thicker shelf. If the shelf is thinner the screws will go through the shelf! You will need to use a shorter screw.)**