



::kitchensource.com




CABINET INSTALLATION

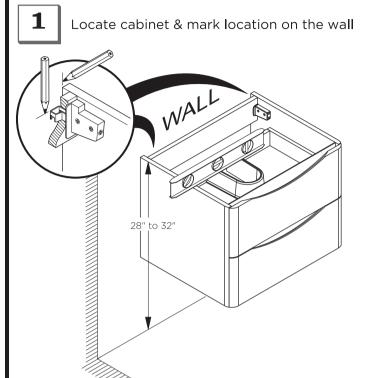


2 Install wall brackets

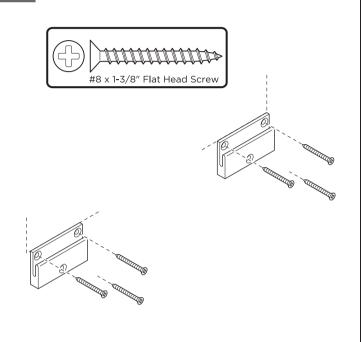

3 Install cabinet

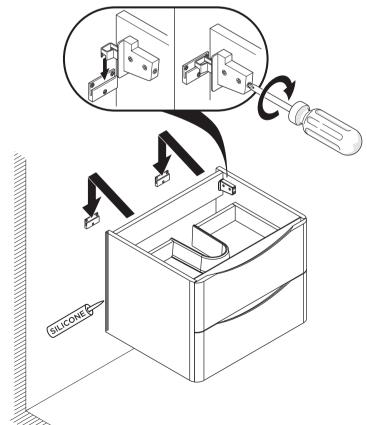

Apply a bead of silicone on the top of the cabinet and place sink on the cabinet

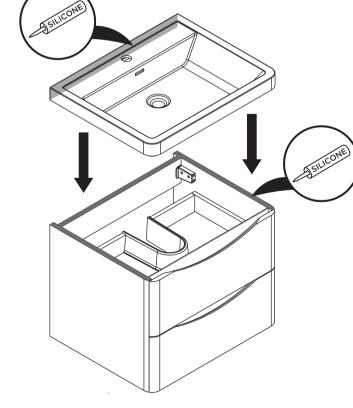


Ö FVN9024 | SENZA | INSTALLATION GUIDE





DRAWER REMOVAL & INSTALLATION

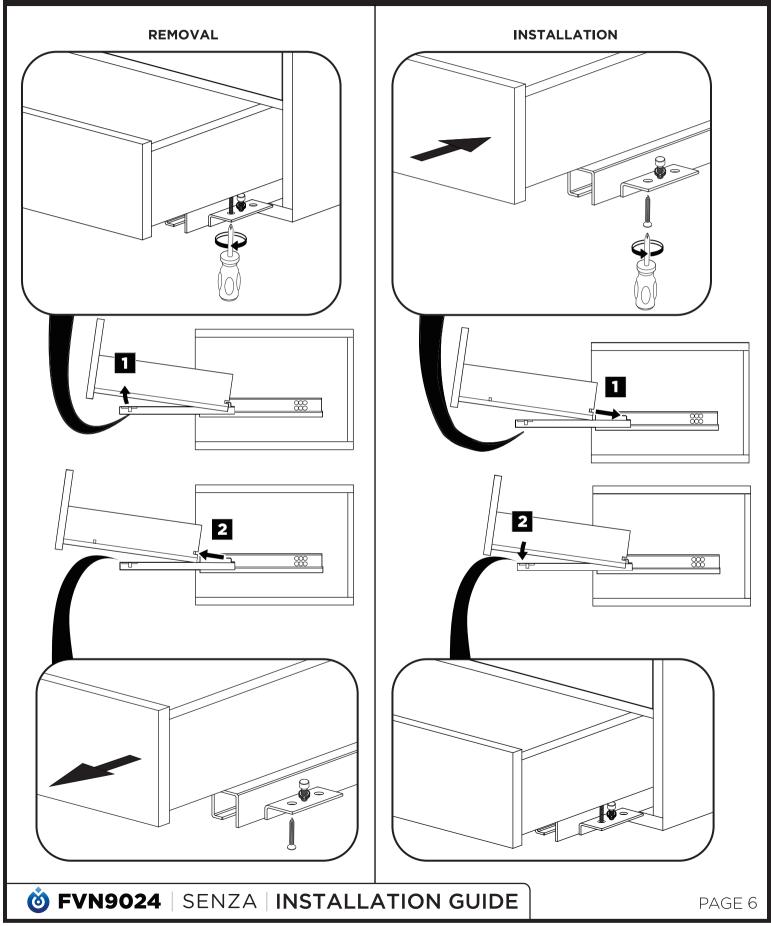




::kitchensource.com



P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

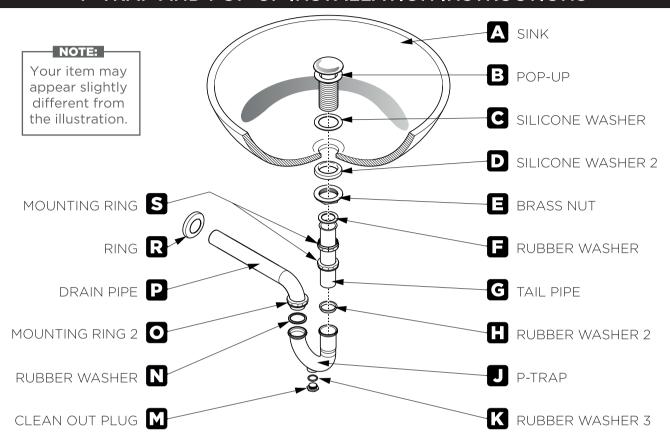

POP-UP INSTALLATION INSTRUCTIONS

