



FVN8011 MEZZO INSTALLATION GUIDE



kitchensource.com
1.800.667.8721

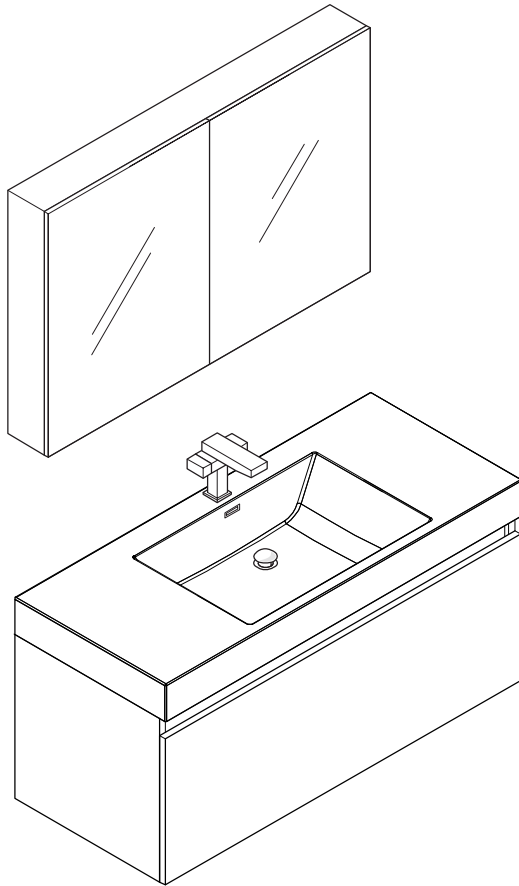

Vanity Front

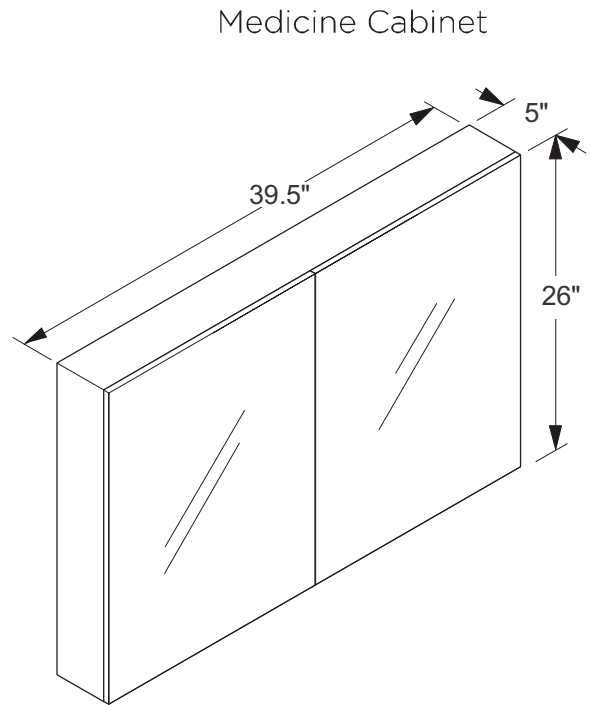

Medicine Cabinet

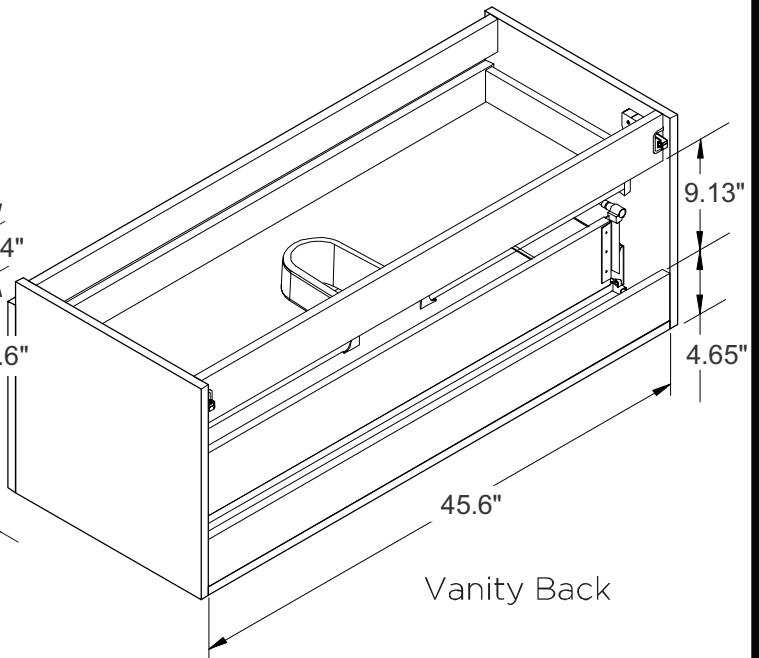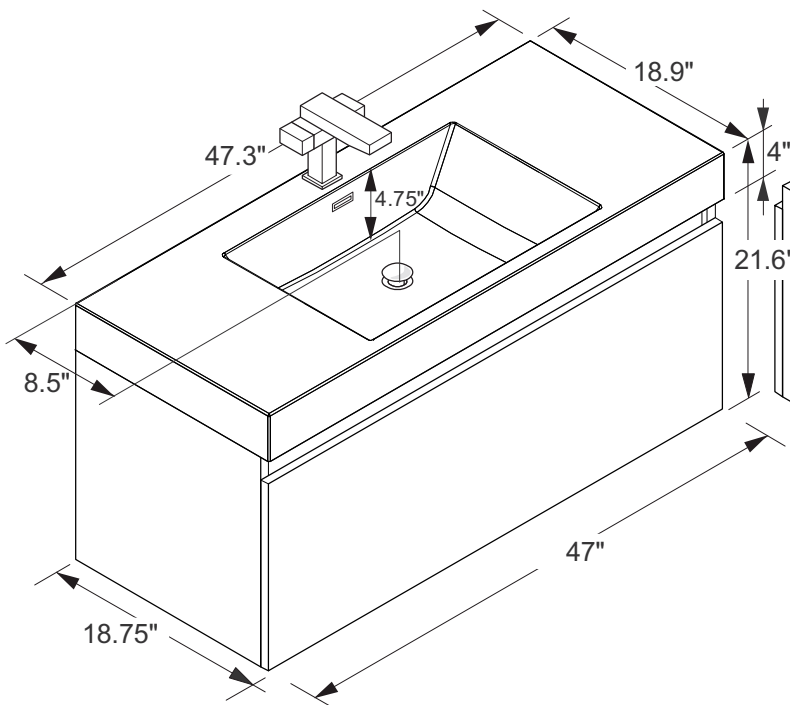






Vanity Back

 ALL DIMENSIONS & SPECIFICATIONS
ARE APPROXIMATE AND SUBJECT TO
CHANGE WITHOUT NOTICE.

TOOLS FOR ASSEMBLY



PARTS

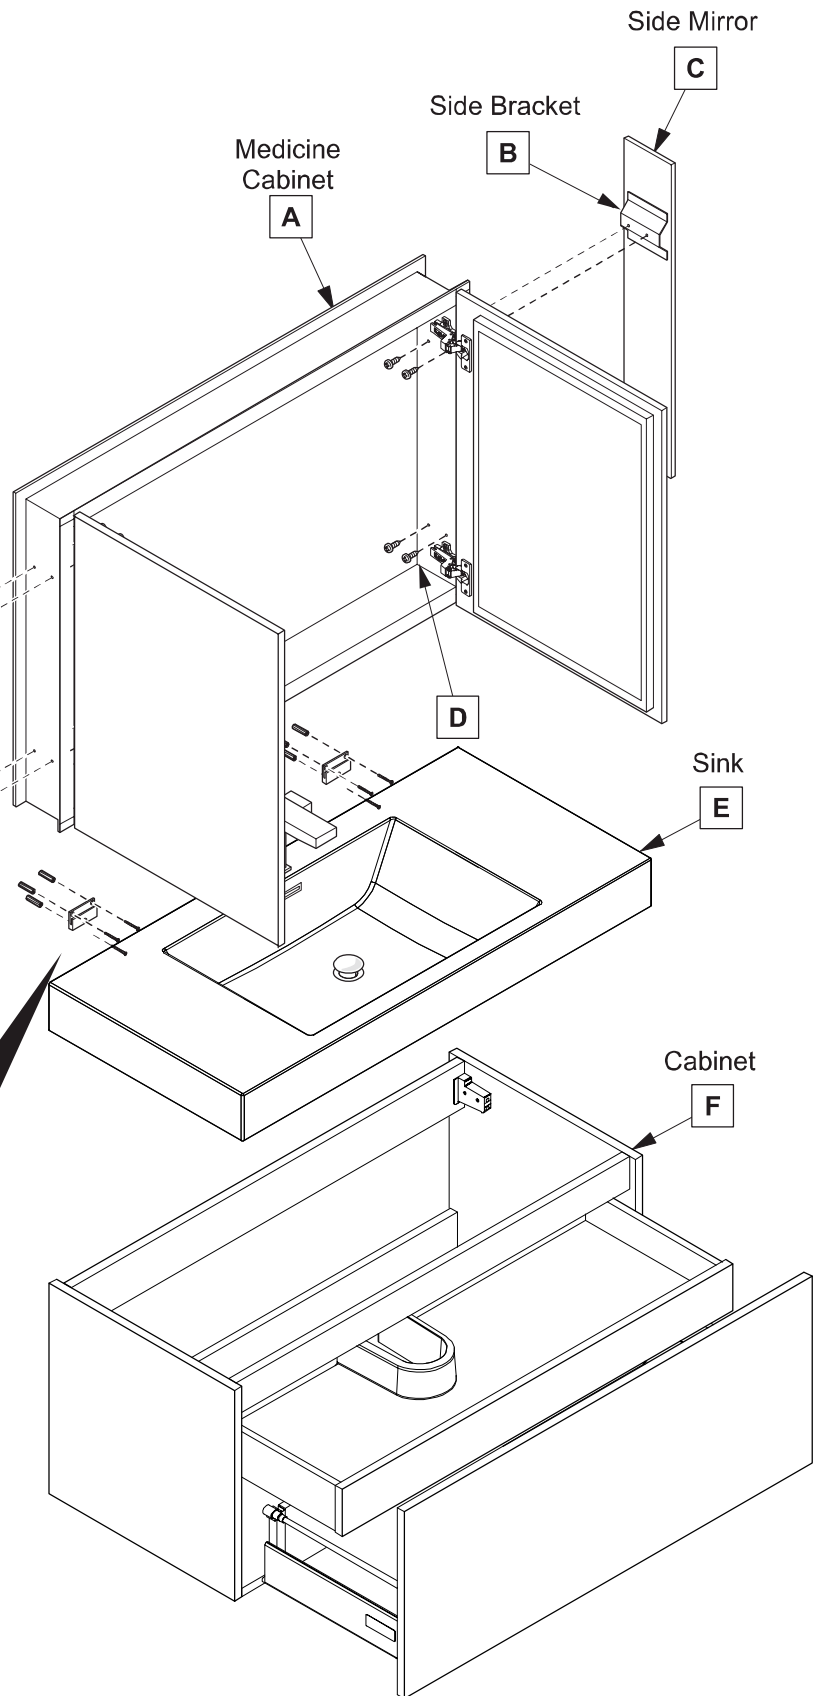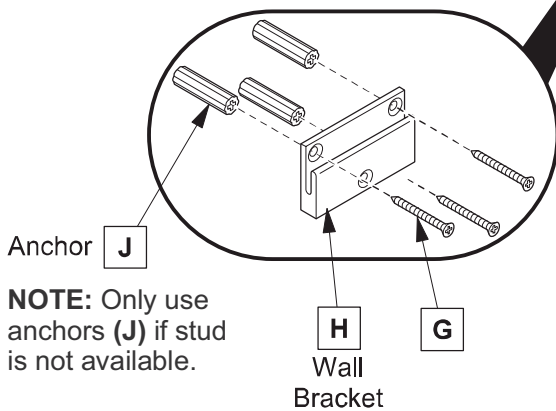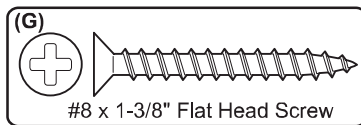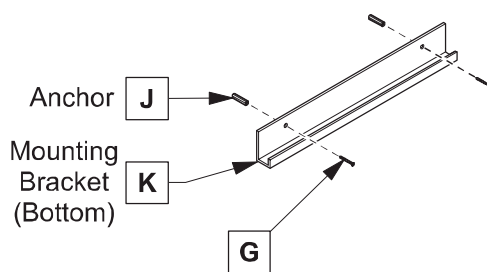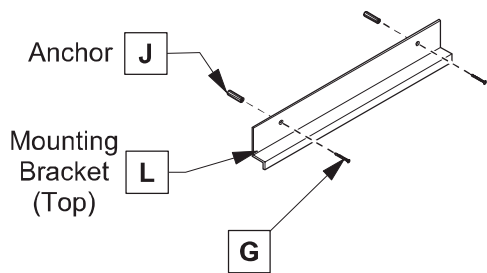


1

DRAWER REMOVAL & INSTALLATION

To remove drawer:

1. Pull the drawer open until the guides are fully extended.
2. Tilt drawer up and simultaneously pull the drawer out.

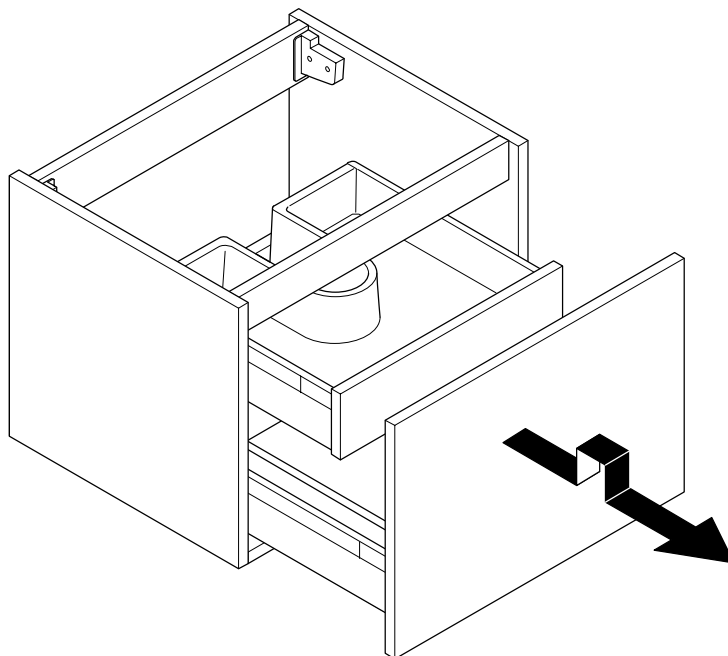


2


To instal drawer:

1. Line up drawer bottom with the glides on the right and left side.
2. Place the drawer on the glides and gently push into closed position.

1

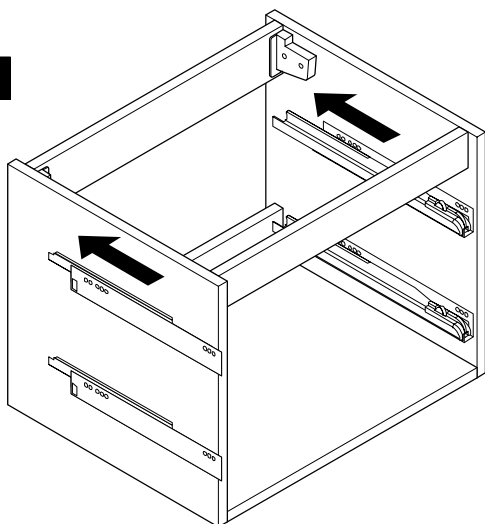


2

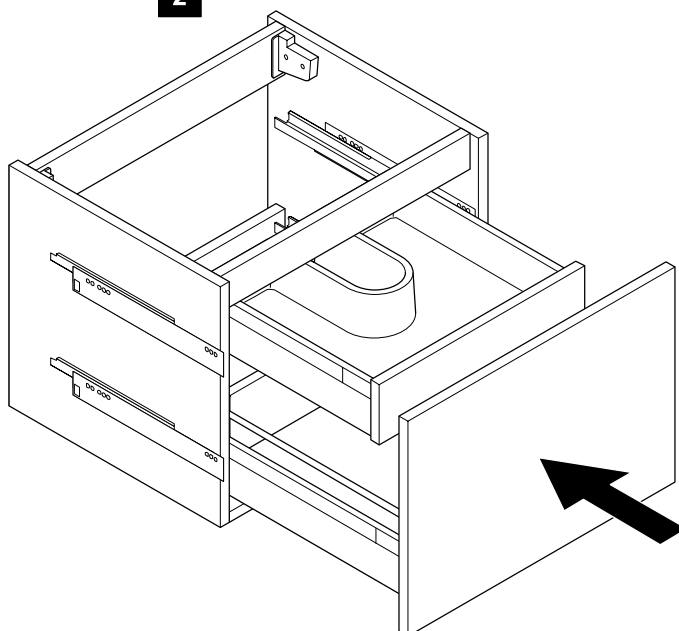

1




Locate cabinet (F) & mark location on the wall

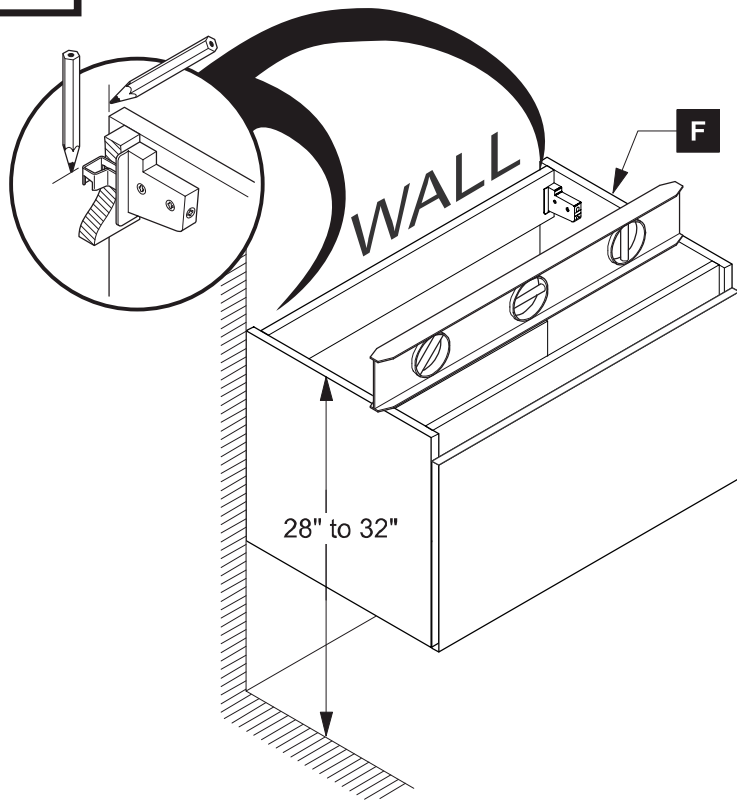


2

Install wall brackets (J)

IMPORTANT: Consult an expert for the proper screws / bolts to use when attaching to various wall constructions. Screws provided *do not* attach to all wall construction types.

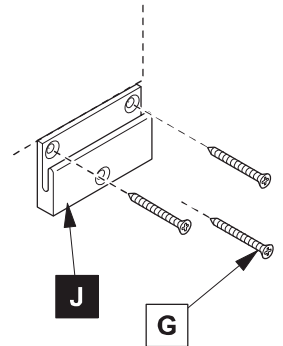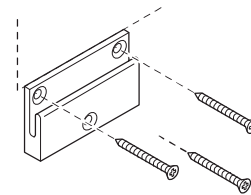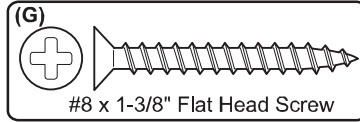


3

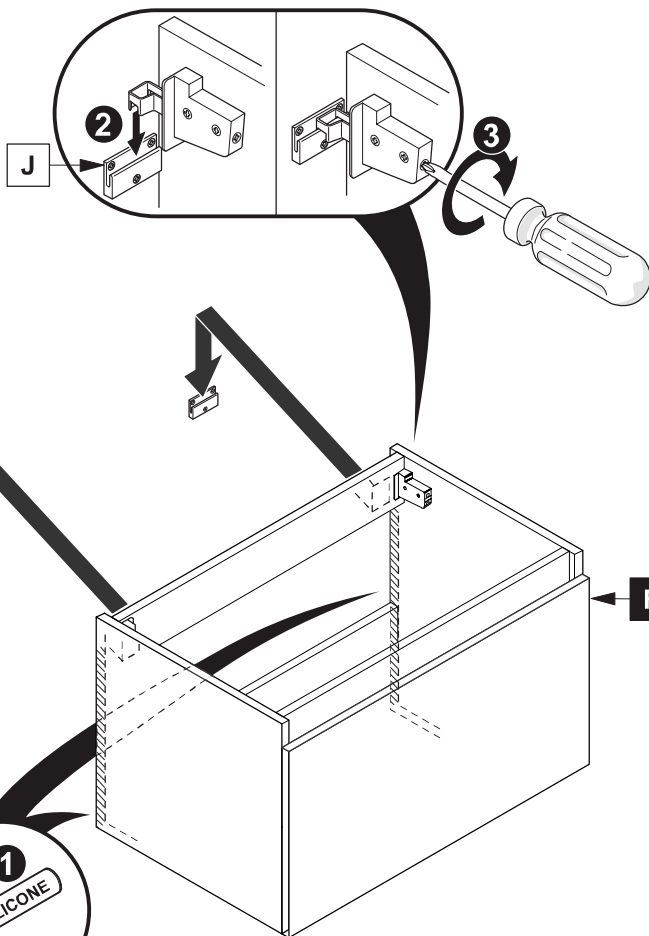

4


Apply silicone and install sink (E)

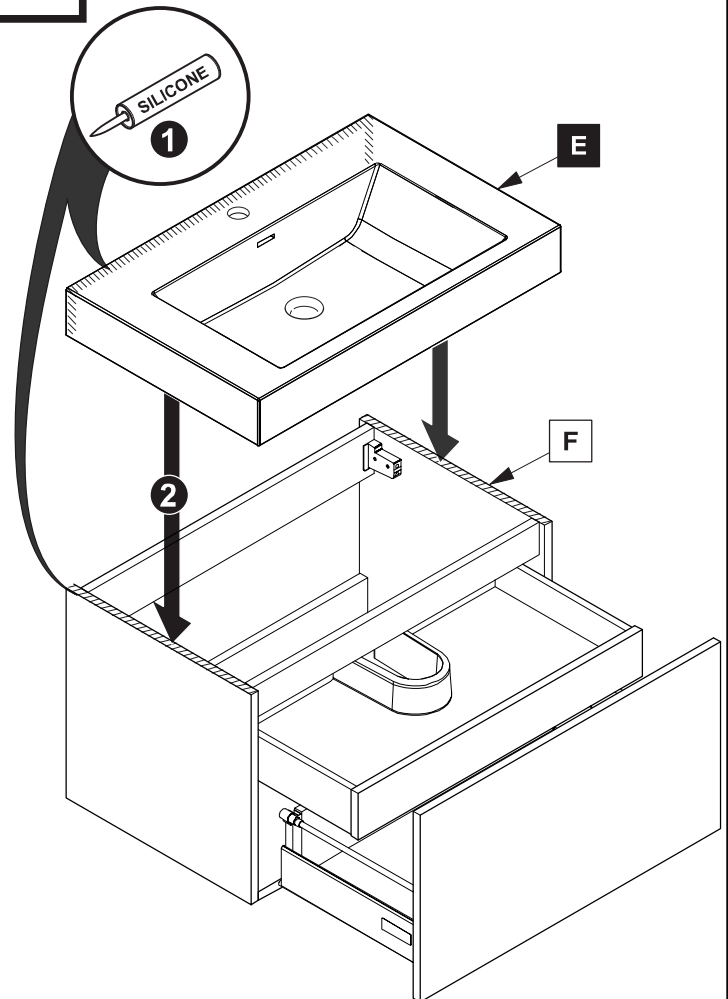

MEDICINE CABINET INSTALLATION


1

Install side mirrors (C)

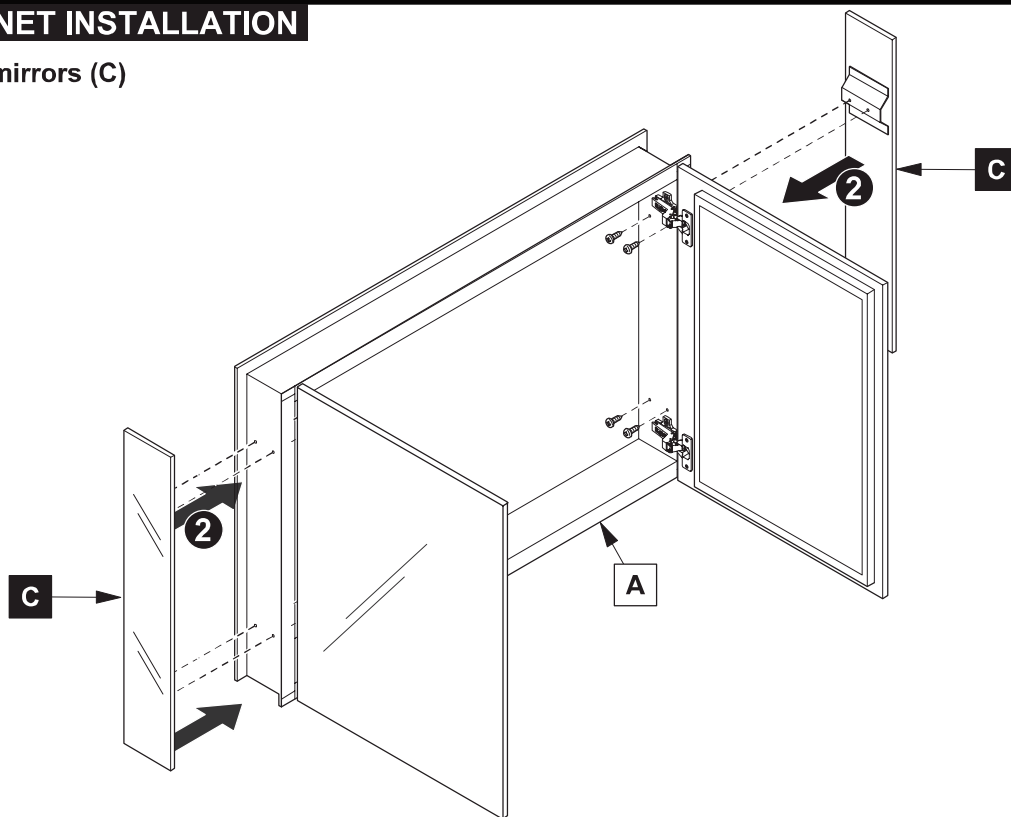



2

Mark cabinet (A) location

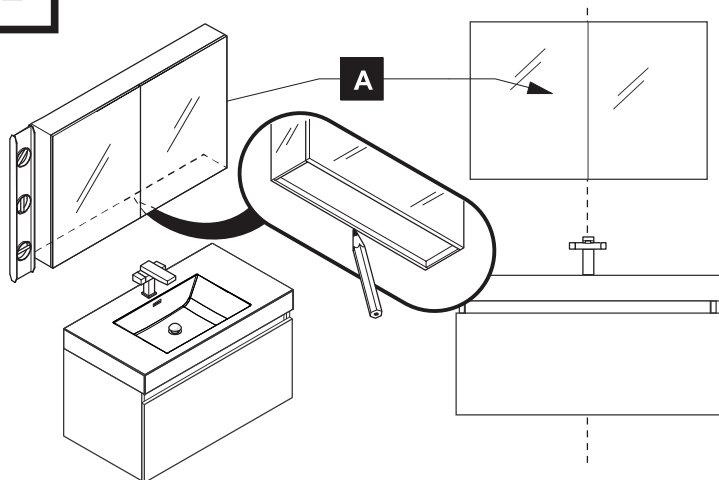

4


Install cabinet (A) and top bracket (L)

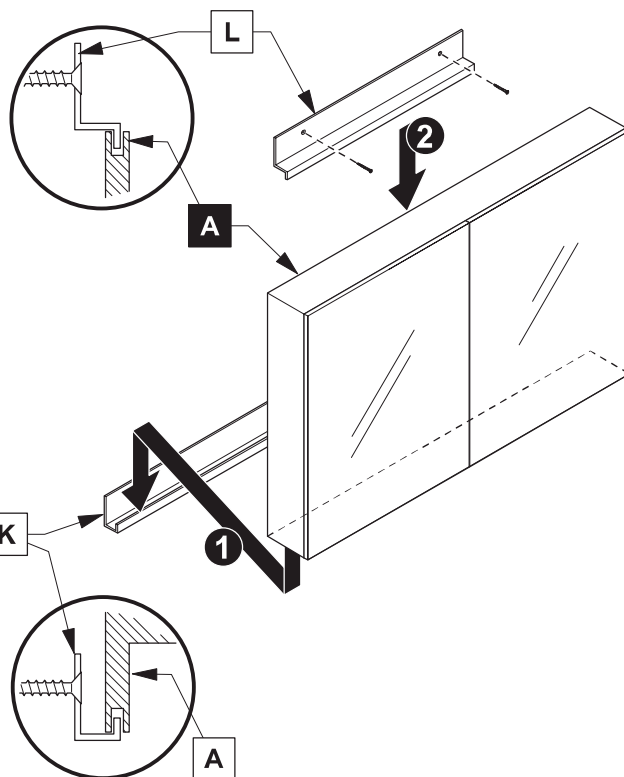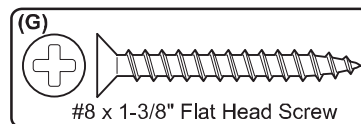

3

Install bottom bracket (K)


IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

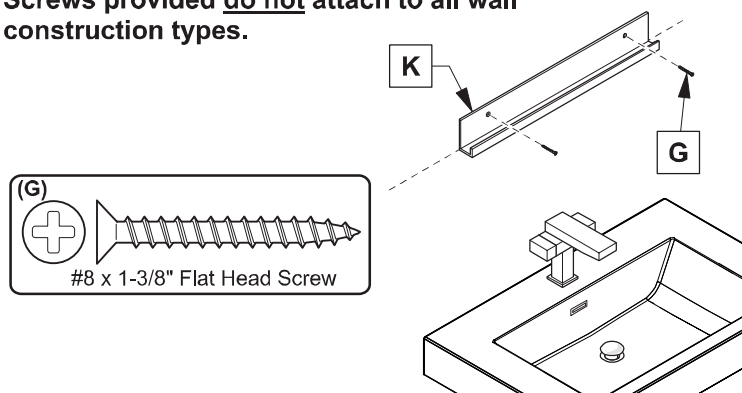

P-TRAP & POP-UP


INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration.

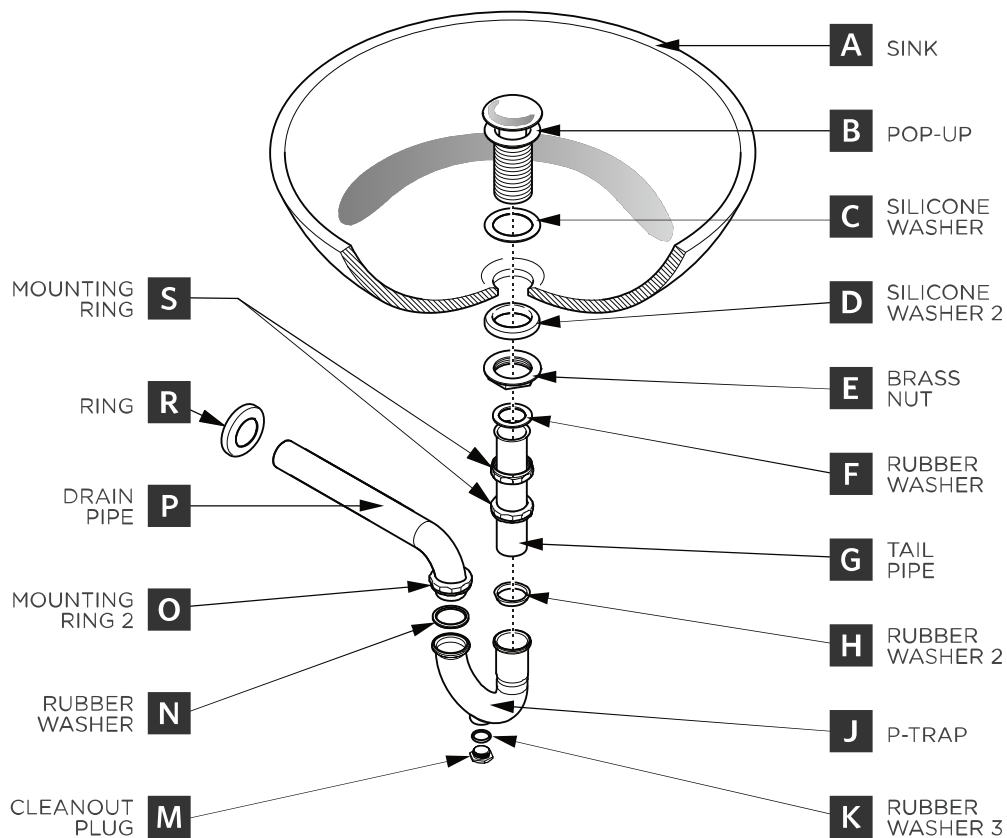


POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW

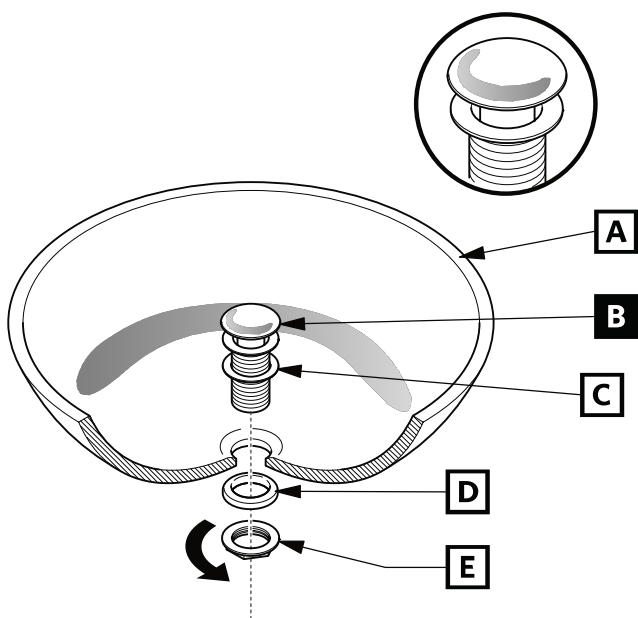

OR


FOR SINKS WITH OVERFLOW

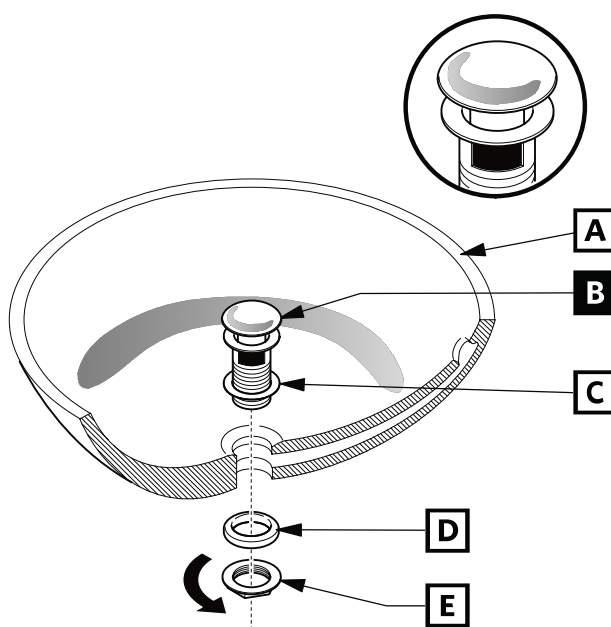

P-TRAP INSTALLATION

1

Install tail pipe (G)

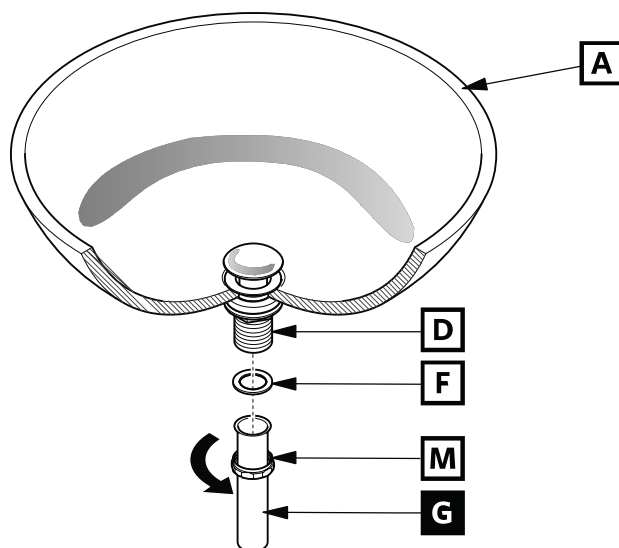

2

Install P-trap (J)

