





# ACRYLIC DIVIDERS INSTALLATION INSTRUCTIONS

I-CSPD

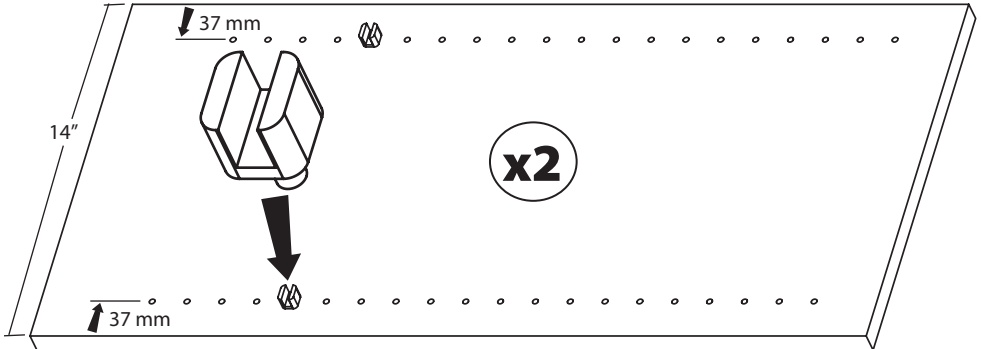

1

Insert the connectors in the desired system holes on the shelf bottom.  
Repeat on the underside of the top shelf.

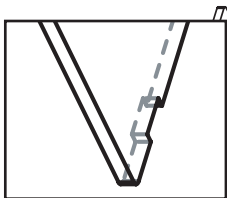

2

Insert the the acrylic divider into the bottom connectors  
with notches facing down.

3

Place the top shelf with connectors installed  
on top of the acrylic dividers. Lock shelf into  
position with standard cam and dowel  
fittings where applicable

