





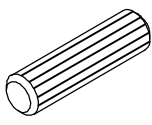


## **Bun Foot**


**CF0101**

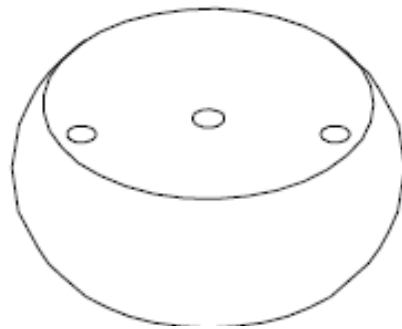

# HARDWARE LIST
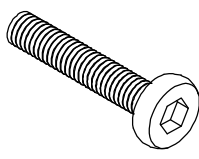
<div style="border: 1px solid black; padding: 2px; width: 20px; margin: 0 auto;">1</div> 	<div style="border: 1px solid black; padding: 2px; width: 20px; margin: 0 auto;">2</div> 	<div style="border: 1px solid black; padding: 2px; width: 20px; margin: 0 auto;">3</div> 	<div style="border: 1px solid black; padding: 2px; width: 20px; margin: 0 auto;">4</div> 
HEX SOCKET HEAD BOLT 4 PCS	FLAT WASHER 4 PCS	SPRING WASHER 4 PCS	WOOD DOWEL 8 PCS

# PART LIST

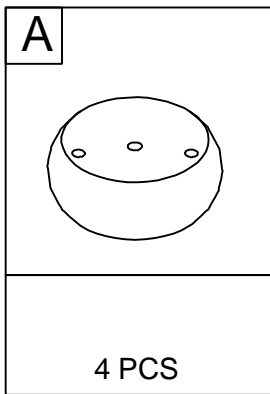

step 1. Insert Wood Dowel (4) into two pre-drilled side holes on Bun Foot A. Attach bun foot to cabinet bottom, insert Hex Socket Head Bolt (part#1) with Spring Washer (part#3) and Flat Washer (part#2) through Bun Foot A. Turn bolts clockwise with Allen Wrench until tight.

