

88 5080 941 Kitchen Island


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



Part List

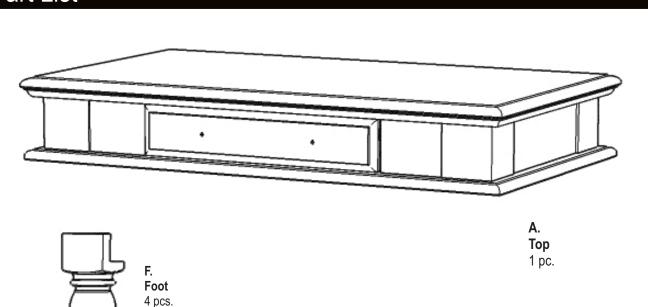

Hardware List

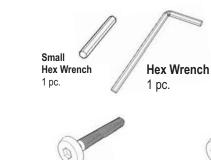





M6x50

Flat Washer

Head Cap Bolt (long)

4 pcs. (+1 extra)



4 pcs.(+1 extra)



Adjustable Pin 4 pcs. (+2 extra)

Spring Washer

4 pcs.(+1 extra)



Cam Lock 4 pcs.(+2 extra)



Pull Handle 8 pcs.



Cam Lock Screw 4 pcs.(+1 extra)



M4x25 **Machine Screw** 8 pcs.

For assembly see instructions in carton 88 5080 942





88 5080 942 Kitchen Island

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

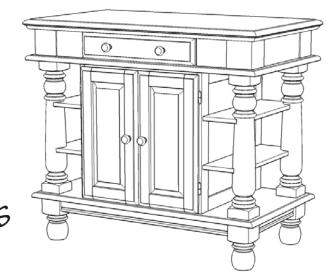

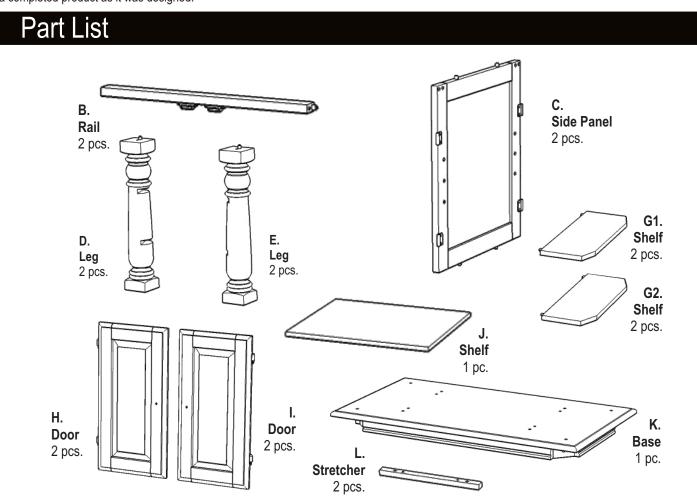

For assembly also need carton 88 5080 941


Part List in carton 88 5080 941		Hardware List in carton 88 5080 941	
Top (A)	1 pc.	Hex Wrench	1 pc.
Foot (F)	4 pcs.	Small Hex Wrench	1 pc.
		Cam Lock Screw	5 pcs.
		Cam Lock	6 pcs.
		Head Cap Bolt	17 pcs.
		Head Cap Bolt (long)	5 pcs.
		Spring Washer	5 pcs.
		Flat Washer	5 pcs.
		Adjustable Pin	6 pcs.
		Pull Handle	8 pcs.
		Machine Screw	8 pcs.



Assembly Instructions 2/5

IMPORTANT

- * Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the bolts until each part is properly assembled.
- * After assembly, item must be level to work properly. Use the included adjustable levelers to level.

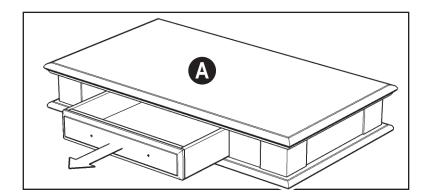

STEP 1

Remove the Drawer from Top (A).

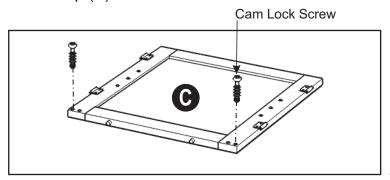



Figure 1


STEP 2

Insert Cam Lock Screws into the pre-drilled holes of Side Panels (C) and tighten. (See Figure 1)

Assemble Side Panel (C) and Rail (B) using Cam Lock. (See Figure 2)


Place the unit onto Top (A).

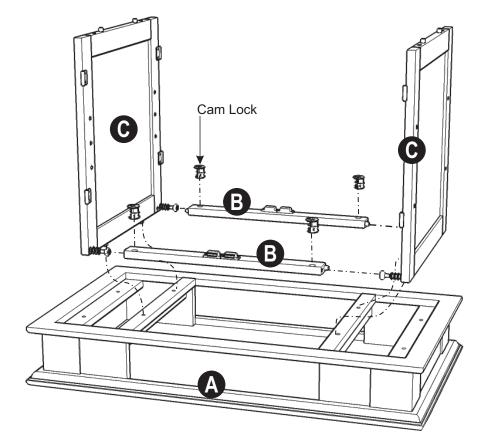

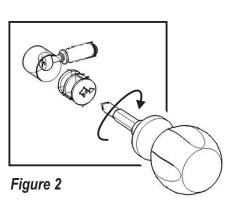




Assembly Instructions 3/5

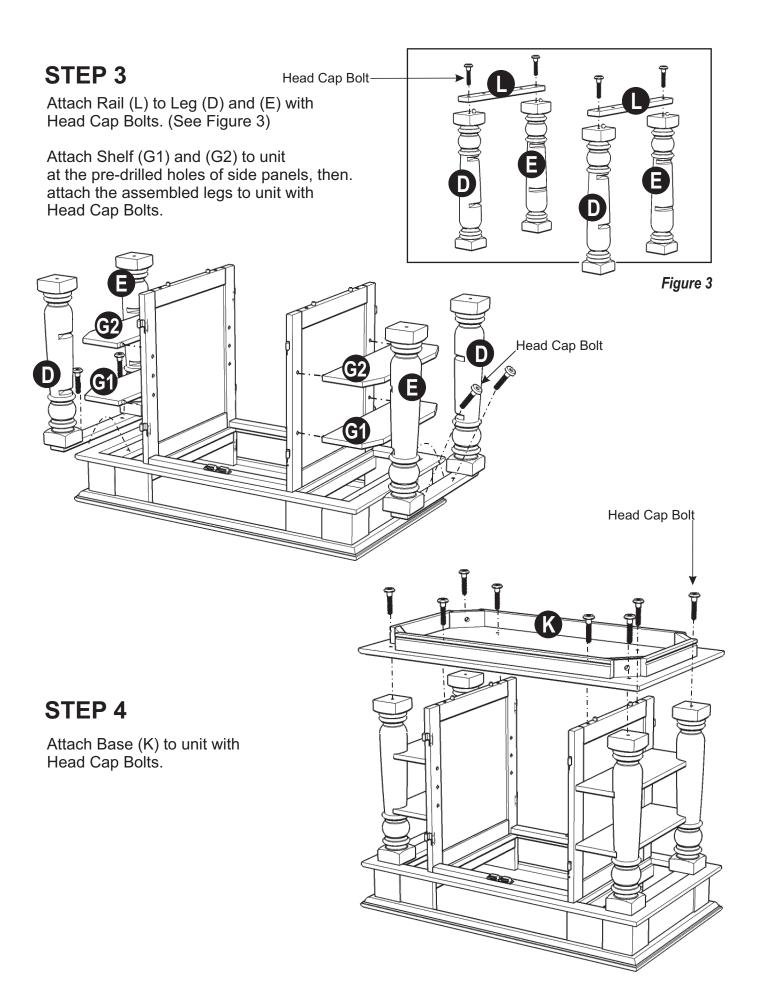



Assembly Instructions 4/5

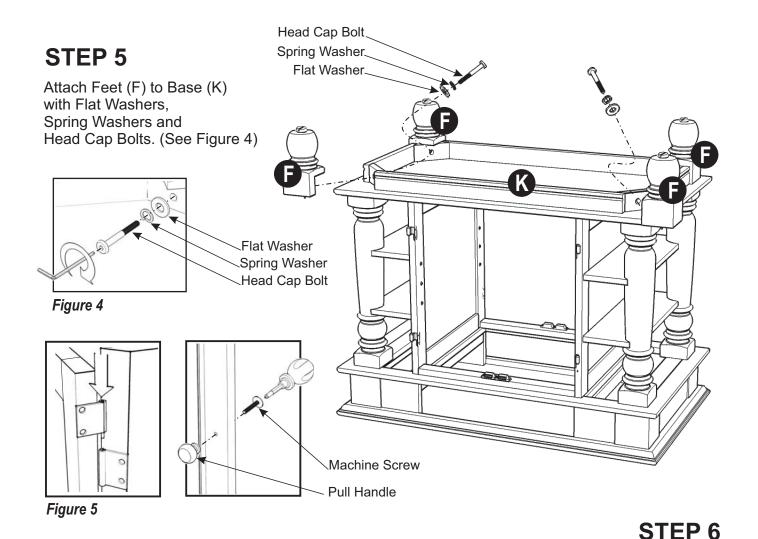

Attach Doors (H) and (I) by sliding the door lift hinges into the side panel lift hinges. (See Figure 5)

