



FURNITURE

Sideboard

CF4213

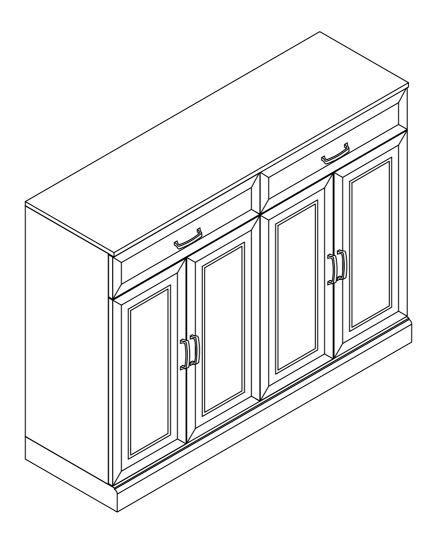




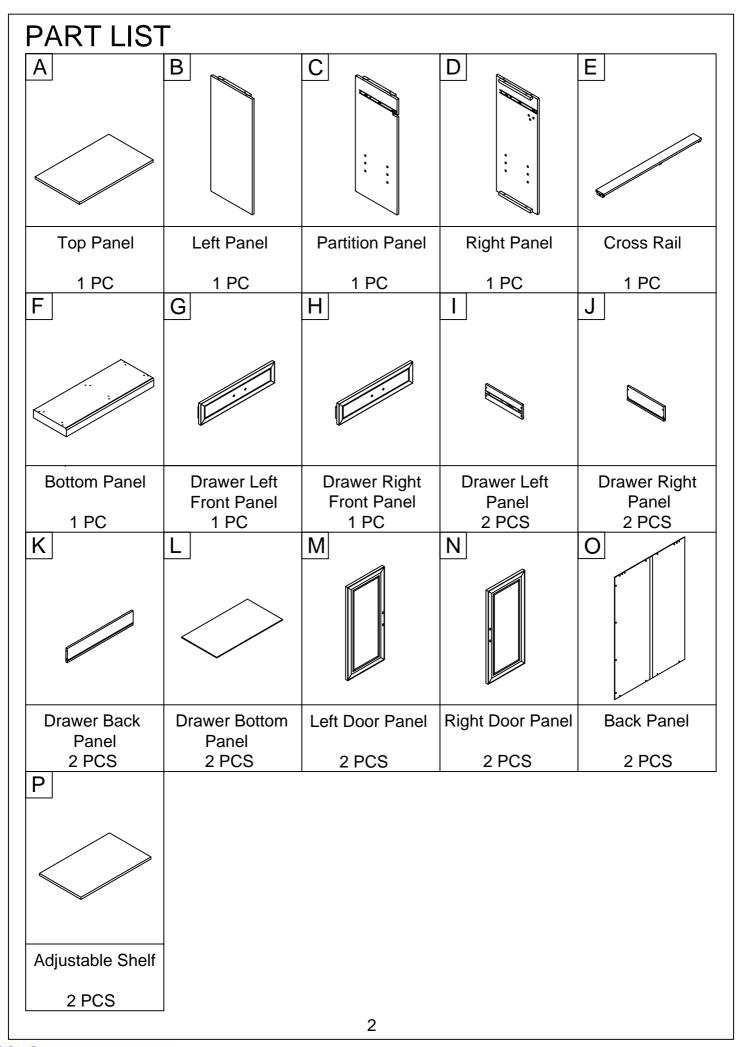

HARDWARE LIST								
		#2	#4	#5				
#1	#2	#3		#5				
Change	0	O						
Ø1/4"*25mm	Ø1/4"*25mm Ø1/4"*11mm		4mm*90	Ø8*30mm				
Bolt	Spring Washer	Flat Washer	Allen Wrench	Wood Dowel				
15 PCS (Extra 1)	15 PCS (Extra 1)	15 PCS (Extra 1)	1 PC	16 PCS (Extra 1)				
#6	#7	#8	#9	#10				
			and the second sec	Gunner				
	6*3*15mm			7*3.5*15mm				
Double Magnet	Round Head	Straight Door	Spring Door	Screw				
2 PCS	Screw 4 PCS (Extra 1)	Hinge 4 PCS	Hinge 4 PCS	48 PCS (Extra 1)				
#11	#12		#14	#15				
	Common	Common	S					
	5/32"*19mm	5/32"*15mm		8*3*15mm				
Handle	Long Round Head Bolt	Short Round Head Bolt	Shelf Holder	Short Screw				
6 PCS	8 PCS (Extra 1)	4 PCS (Extra 1)	8 PCS (Extra 1)	26 PCS (Extra 1)				
#16	#17							
a second	ASTRONE							
	8*4*25							
Safety Strap Kit	Long Screw							
1 SET	16 PCS (Extra 1)							


## ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach double magnets (part #6) to cross rail (part E) using round head screws (part #7) and phillips head screwdriver. Attach handles (part #11) to drawer left front panel (part G) and drawer right front panel (part H) using short round head bolts (part #13) and phillips head screwdriver.

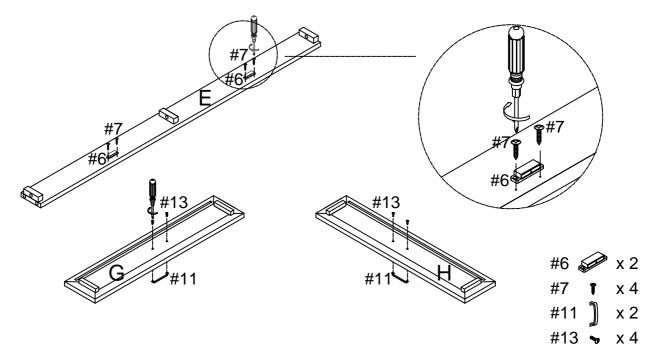


Step 2. Attach straight door hinges (part #8) and spring door hinges (part #9) to left door panels (part M) and right door panels (part N) using screws (part #10) and phillips head screwdriver. Attach handles (part #11) to left door panels (part M) and right door panels (part N) using long round head bolts (part #12) and phillips head screwdriver.

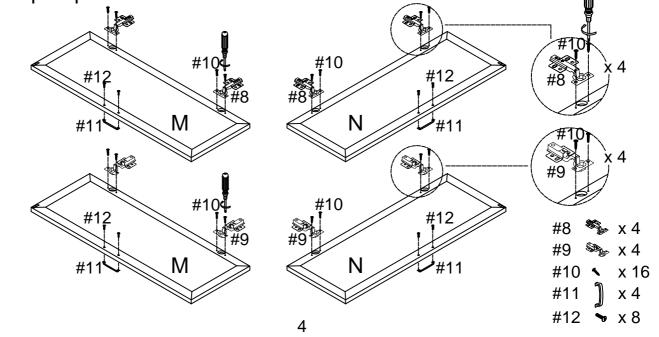


::kitchensource.com

☎ 1.800.667.8721

Step 3. Attach drawer panels (parts I & J) to drawer left front panel (part G) and drawer right front panel (part H) using long screws (part #17) and phillips head screwdriver. Slide drawer bottom panels (part L) into the grooves of assembled units (parts G, H, I & J). Attach drawer back panels (part K) to assembled units (parts I, J & L) using long screws (part #17) and phillips head screwdriver.

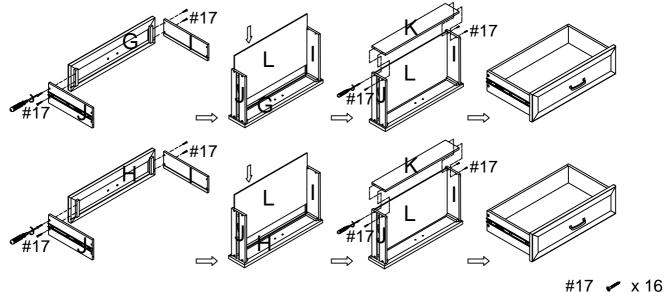


Step 4. Attach cross rail (part E) to partition panel (part C) using bolt (part #1), spring washer (part #2), flat washer (part #3) and allen wrench (part #4). Attach left panel (part B) and right panel (part D) to cross rail (part E) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

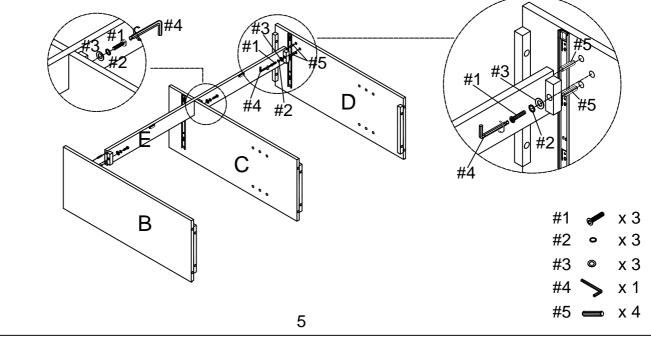

Step 5. Attach top panel (part A) to assembled unit (parts B, C & D) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4). #5 x 6 #5 **』**#4 A D В #1 x 6 x 6 #2 #3 x 6 x 1 #4 #5 x 6 Step 6. Attach bottom panel (part F) to assembled unit (parts B, C & D) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4). x 6 D °@ #3 С В F x 6 #2 x 6 x 6 #3 х 1 x 6 #5 6




Step 7. Carefully turn unit upright. Attach back panels (part O) to assembled unit (parts A, B, C, D & F) using short screws (part #15) and phillips head screwdriver.

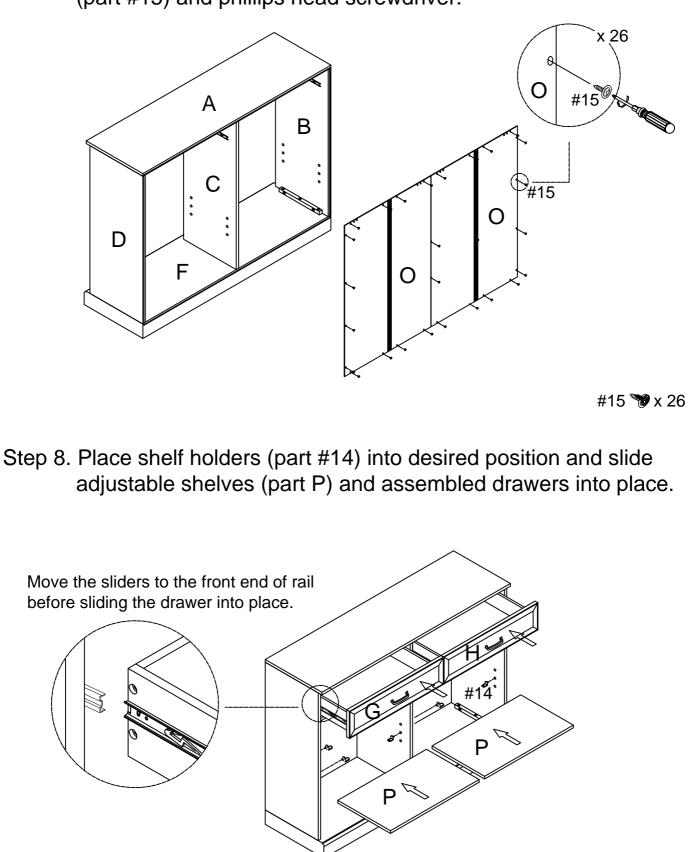


::kitchensource.com

☎ 1.800.667.8721

- Step 9. Attach door panels (parts M & N) to panels (parts B & D) and partition panel (part C) using screws (part #10) and phillips head screwdriver.
- NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.
- Important: Safety strap kit (part #16) must be installed to prevent tipping, damage and/or injury.

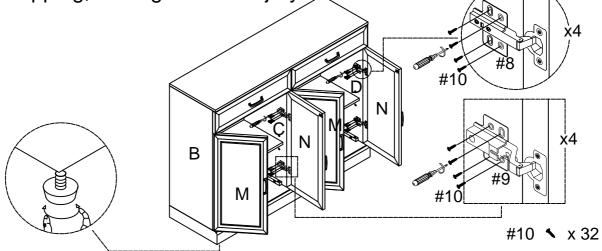

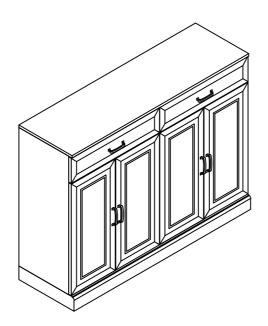

#16	A	В	С	D	E
and a second	C.	6	<b>***</b>	No. of Concession, State	
			8*3*15mm	8*4*35mm	
Safety Strap Kit	Wall Anchor	Bracket	Short Screw	Long Screw	Safety Wall Strap
1 SET	1 PC	2 PCS	1 PC	1 PC	1 PĊ

## SAFETY WALL STRAP INSTALLATION

- Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.
- 1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
- Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
- 3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

