

88 5530 42 Naples Night Stand (White Finish)


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.




Casual Attire For Today's Home

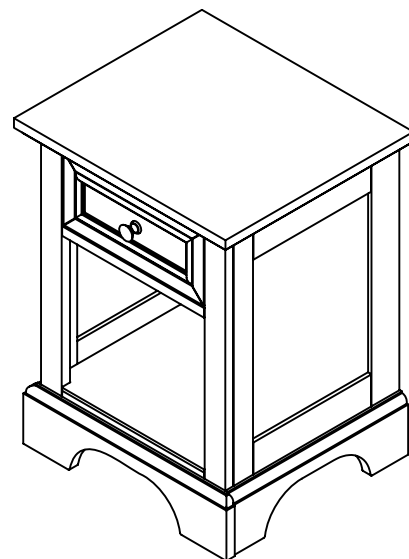

Part List

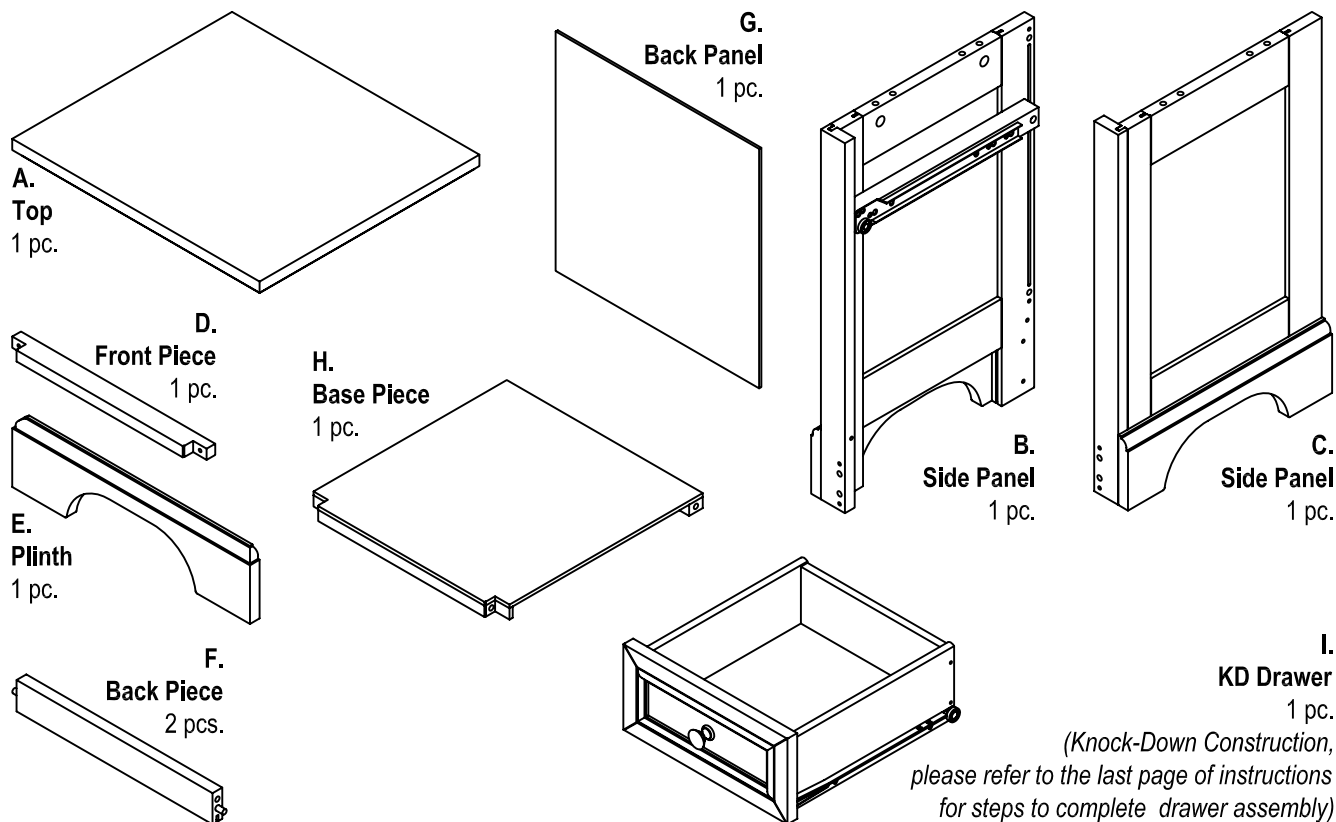


Hardware List



Cam Lock Screw
12 pcs. (+1 extra)




Cam Lock
12 pcs. (+1 extra)



1 1/4" Flat Head Screw
8 pcs. (+1 extra)



3/4" Flat Head Screw
2 pcs. (+1 extra)



1 1/4" Round Head Screw
4 pcs. (+1 extra)



1" Round Head Screw
2 pcs. (+1 extra)



5/8" Round Head Screw
4 pcs. (+1 extra)



Machine Screw
1 pc.



Pull Handle
1 pc.



Wooden Dowel
8 pcs. (+1 extra)

Tools Required For Assembly : Phillips screwdriver

Assembly Instructions 2/6

IMPORTANT

Do not tighten up all the screws until each part is properly assembled.

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Side Panel (B) and (C).




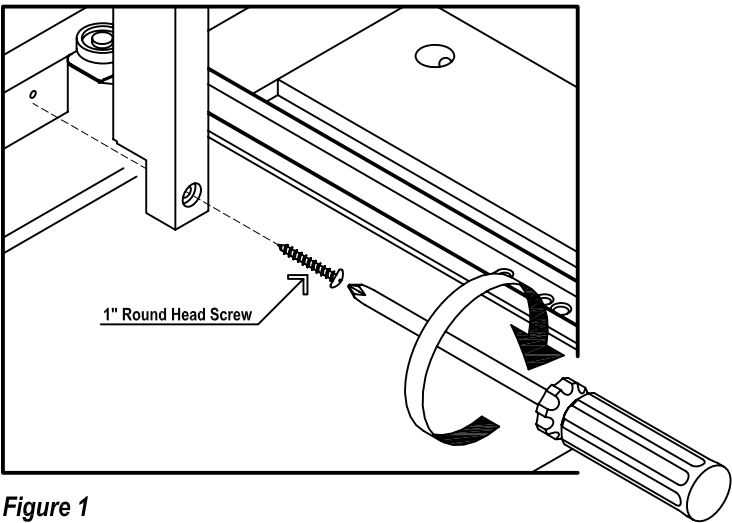


Figure 1

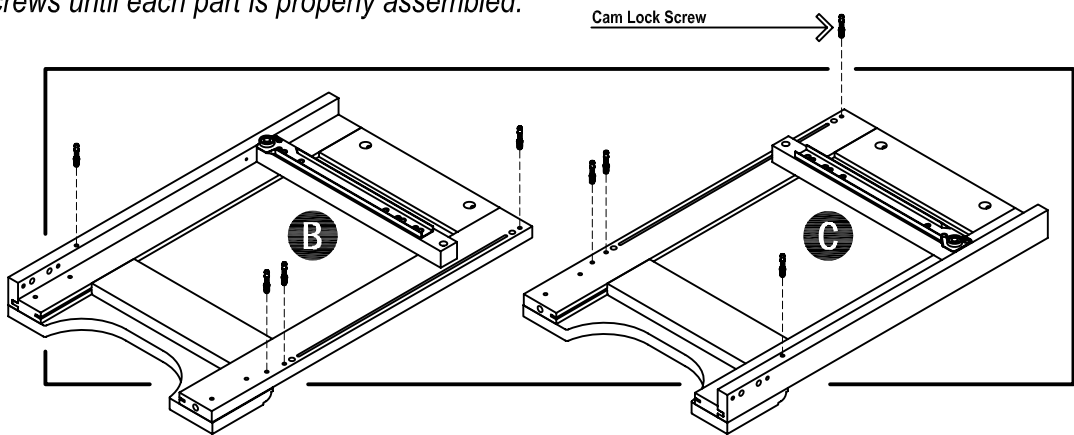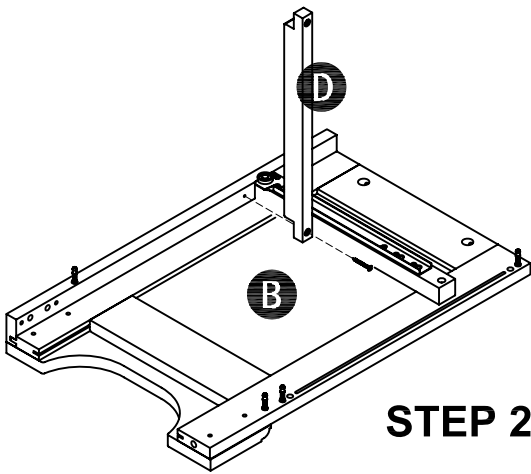

STEP 2

Attach Front Piece (D) to Side Panel (B) with 1" Round Head Screw. (See figure 1)

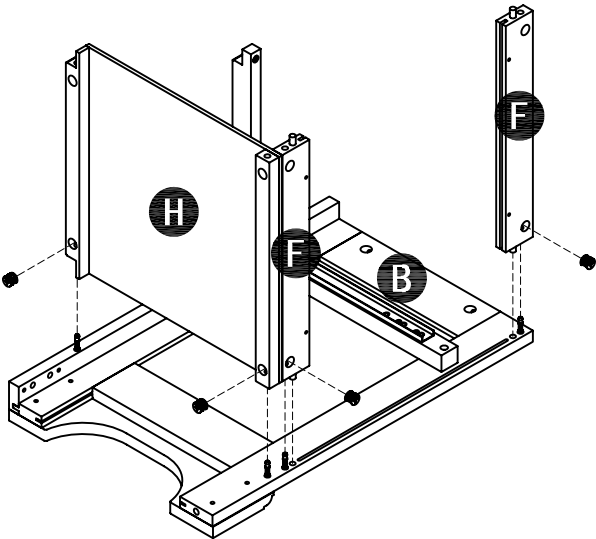

STEP 3

Attach Back Pieces (F) & Base Piece (H) to Side Panel (B) using Cam Locks. (See figure 2)

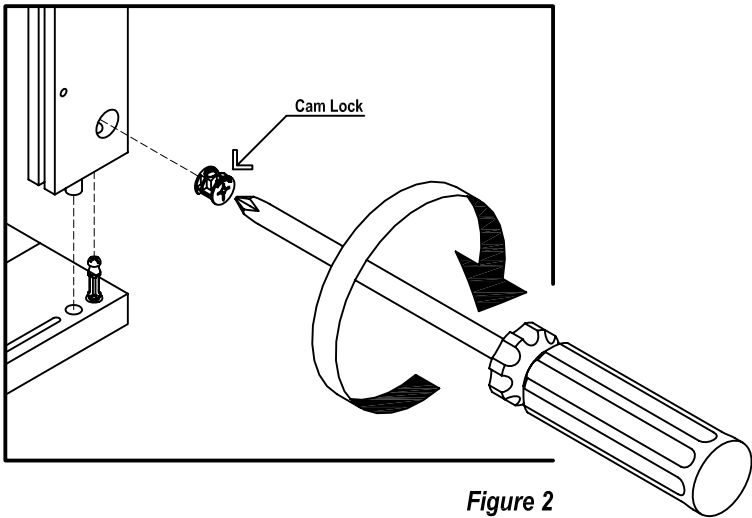


Figure 2

Assembly Instructions 3/6

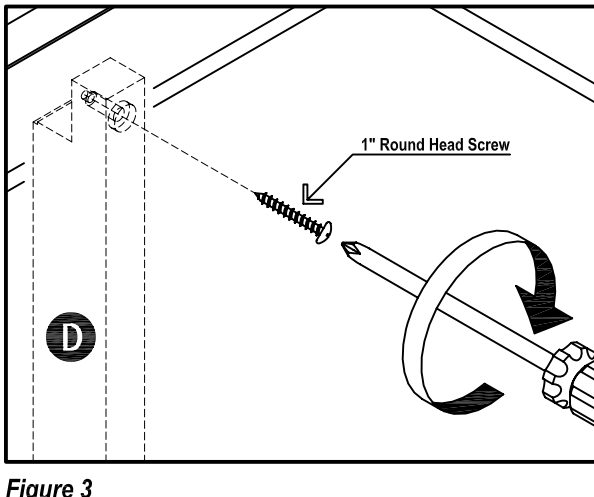





Figure 3

STEP 4

Slide Back Panel (G) into Back Piece's (F) grooves.

Attach Side Panel (C) to unit using Cam Locks.

Attach Front Piece (D) to Side Panel (C) with 1" Round Head Screw. (See figure 3)

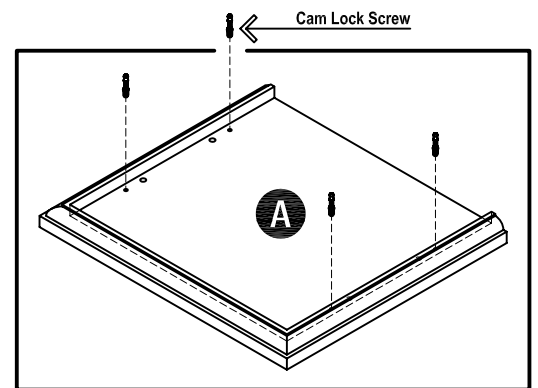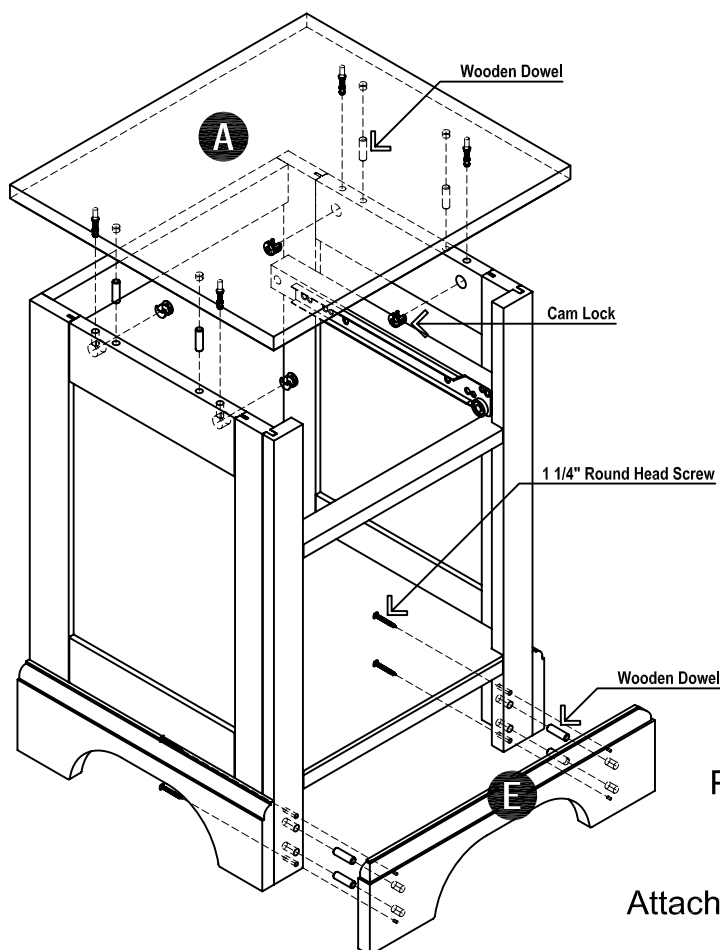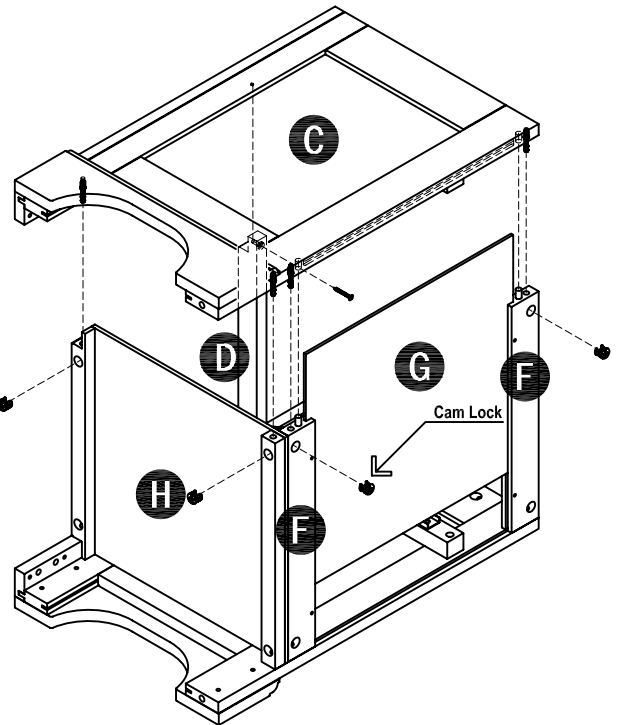

STEP 5

Insert Cam Lock Screws into the pre-drilled holes of Top (A).

STEP 6



Place Top (A) onto the unit using Cam Locks & Wooden Dowels.

Attach Plinth (E) to the unit using 1 1/4" Round Head Screws & Wooden Dowels.

Assembly Instructions 4/6

STEP 7

Attach 5/8" Round Head Screws to the back of unit through the holes of Back Piece (F).

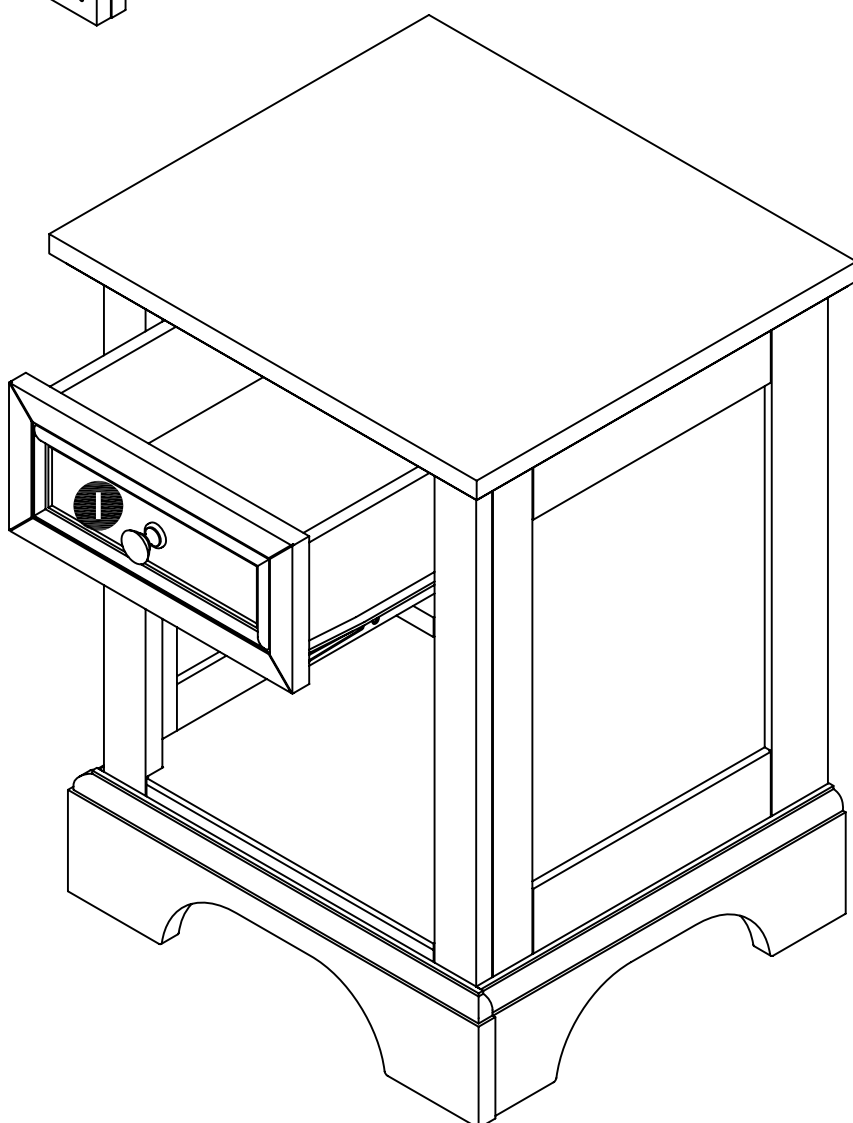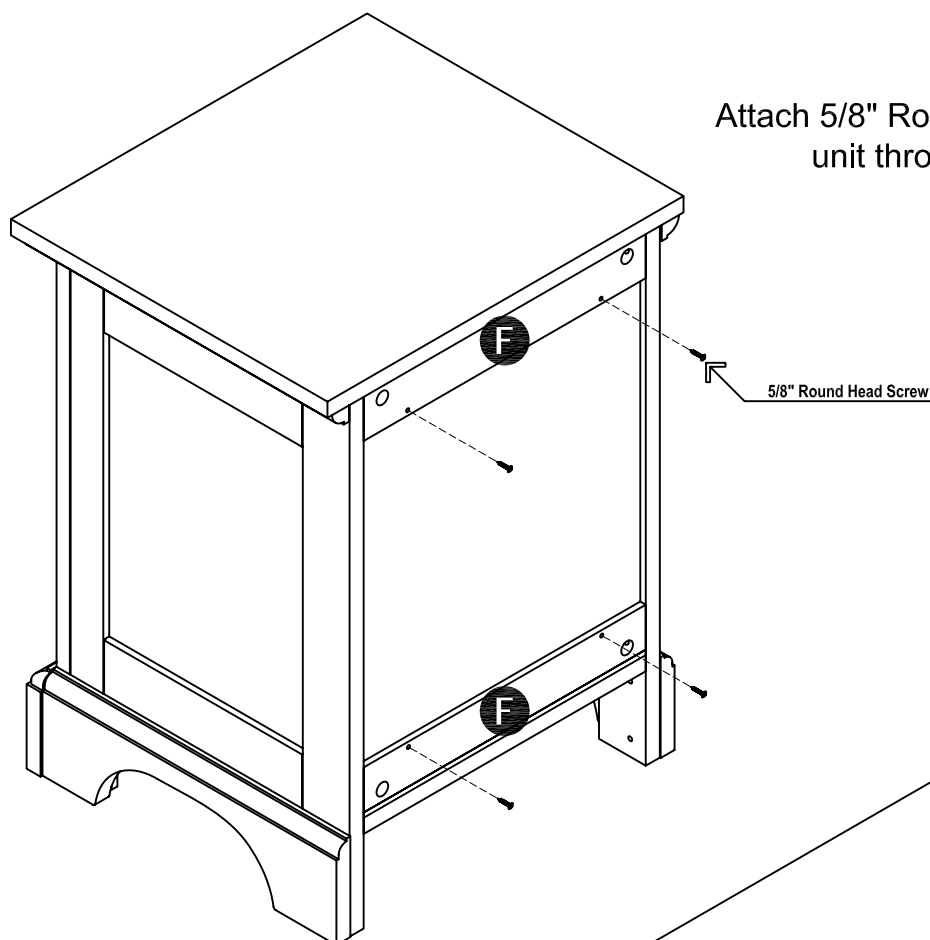


STEP 8

Insert the drawer (I) into unit.

Assembly Instructions 5/6

Drawer (I)

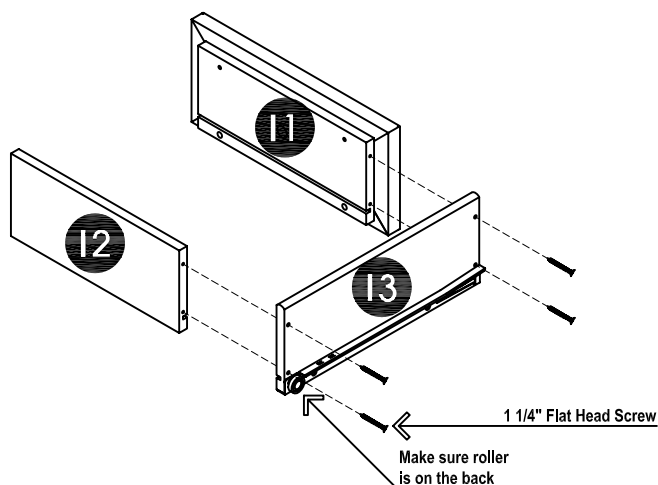



STEP 1

Attach Side Part (I3) to Front Part (I1) and Back Part (I2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

STEP 2

Insert Base Part (I5) into the groove.


Attach Side Part (I4) to Front Part (I1) and Back Part (I2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

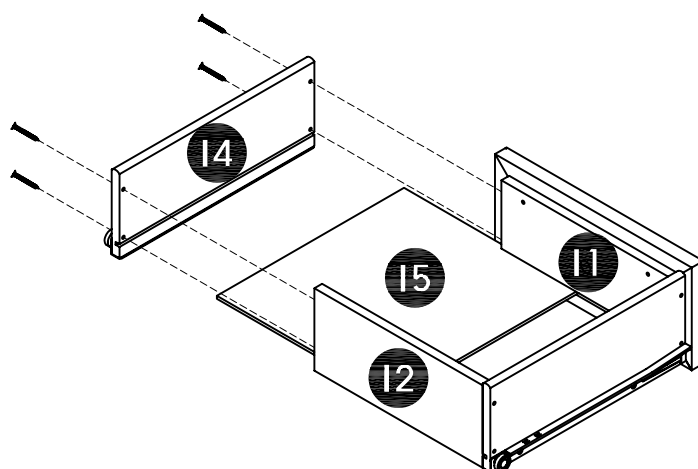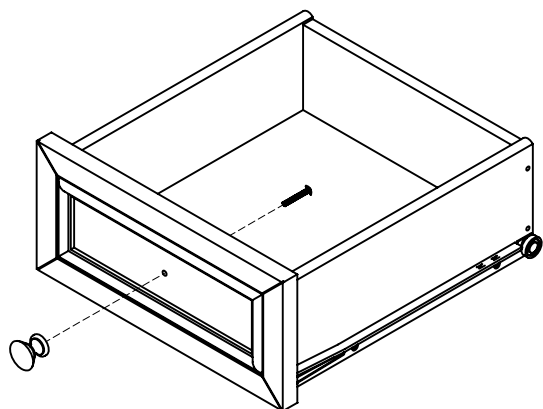


STEP 3

Attach Pull Handle with machine screw.


Part List

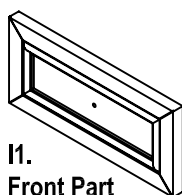


I1.
Front Part
1 pc.

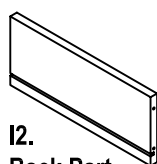


I2.
Back Part
1 pc.

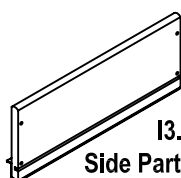

I3.
Side Part
1 pc.

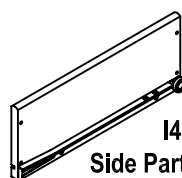

I4.
Side Part
1 pc.

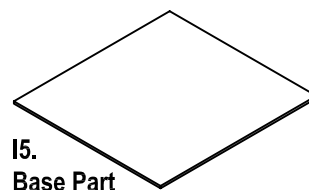


I5.
Base Part
1 pc.

Assembly Instructions 6/6

I. IF THE DRAWER DOES NOT ALIGN



STEP 1

Loosen slightly the lower screws.

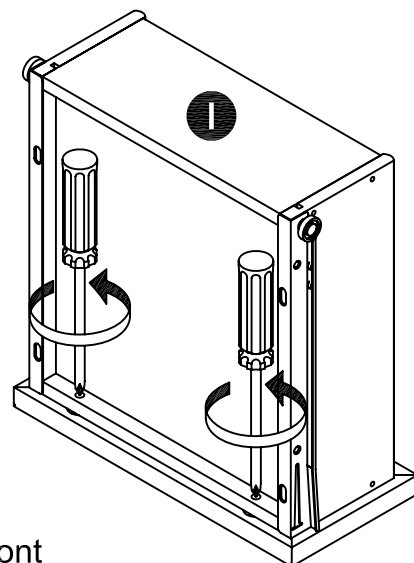


STEP 2


Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down, until the drawer gaps look proportional.

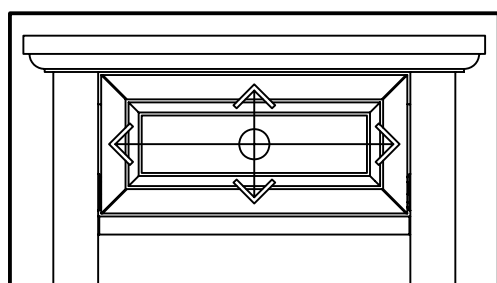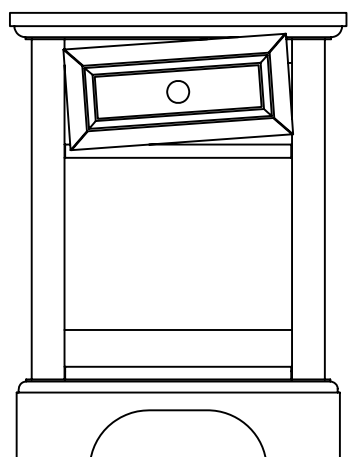

II. IF THE DRAWER ALREADY ALIGNS

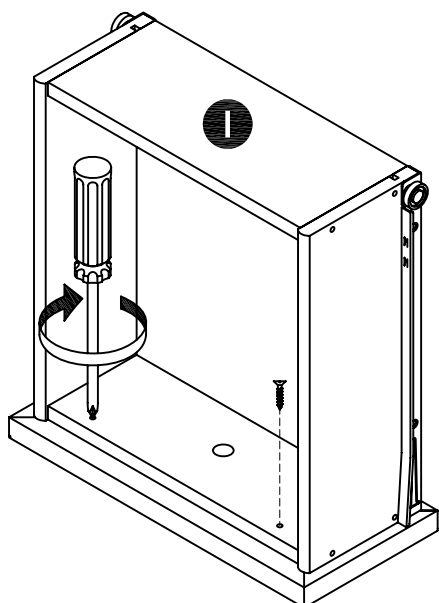

Pull out drawer slowly. Lock the drawer front panel into position with 3/4" Flat Head Screws.

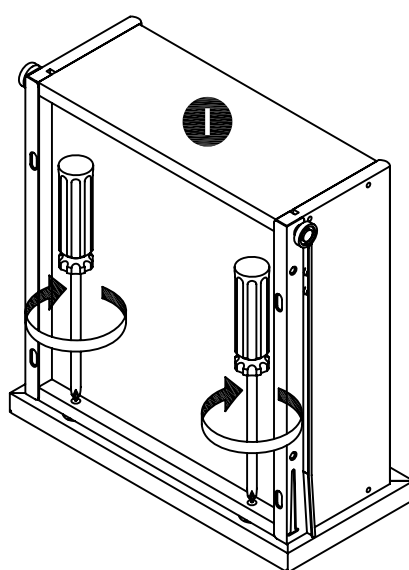

STEP 3

Pull the drawer open slowly and tighten the upper screws. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

