


X-Series

BRACKET SYSTEM™

RECOMMENDED LOCATION TO ATTACH X BRACKETS TO UNDERMOUNT SLIDES.
 RECOMMENDED LOCATION TO INSTALL PILASTERS.

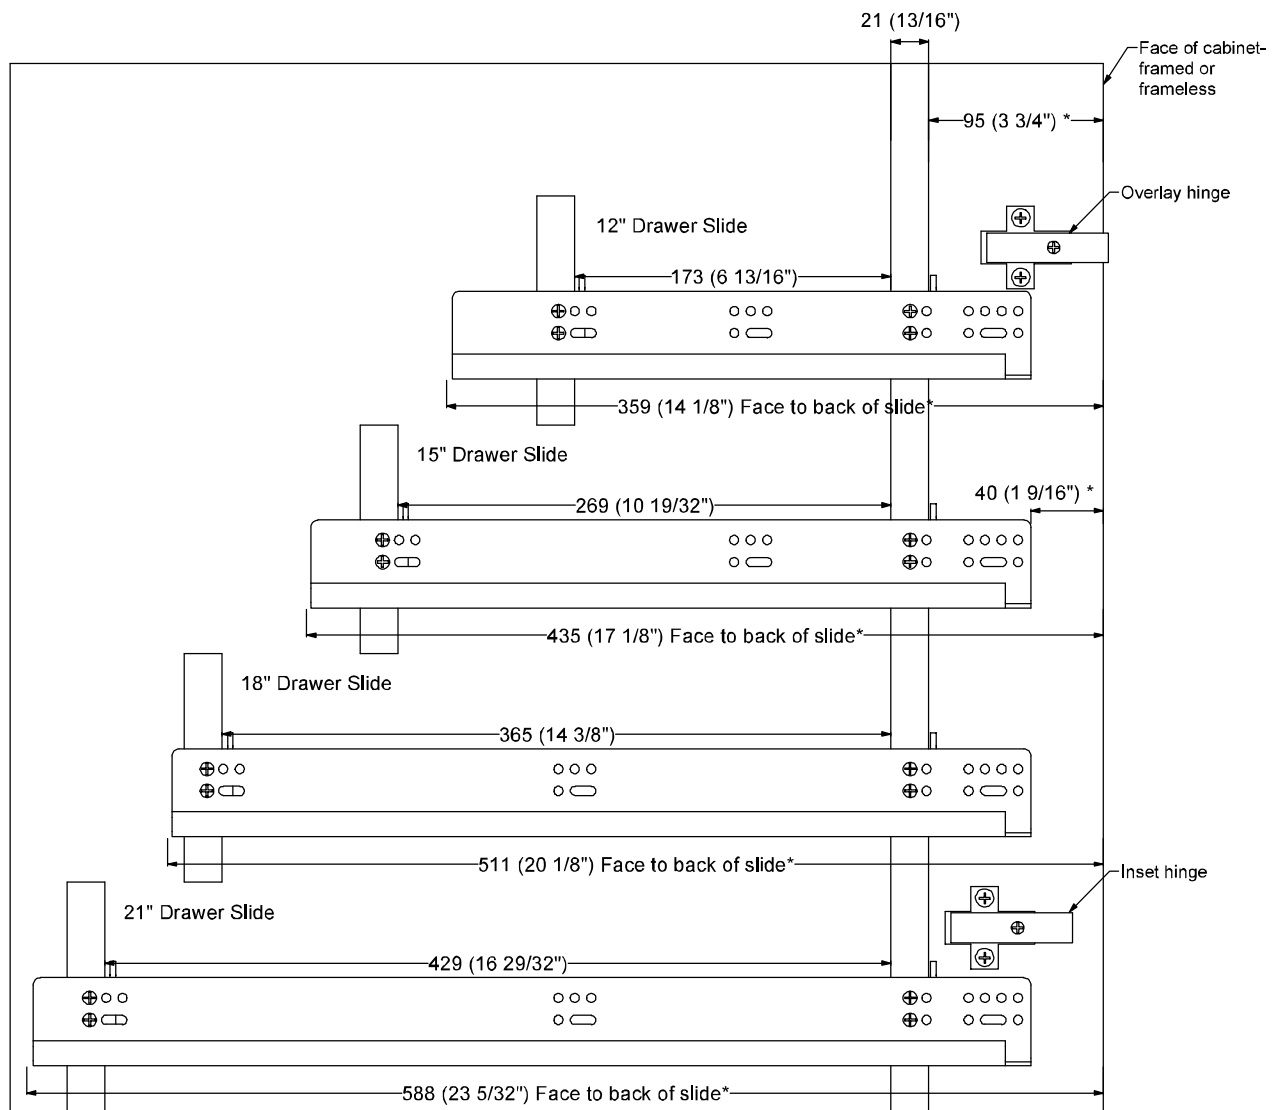

* Can be adjusted depending on hinge model and cabinet construction.

X-Series BRACKET SYSTEM™

RECOMMENDED GUIDE TO DETERMINE PILASTER WIDTH

