

# Installation Instructions

445 Series Grooming Organizer

# Instrucciones de Instalación

Serie 445 Organizador Personal

# Instructions d'Installation

de la série 445 de rangement de toilette



# Installation Instructions

## 445 Series

### Grooming Organizer



1. Disengage Cabinet Slide Assembly from unit by pressing release levers on the 2 vertical slides and pulling unit away from Cabinet Slide Assembly (see fig. 1).



fig. 1

2. Center Cabinet Slide Assembly on cabinet floor  $\frac{7}{8}$ " from front outside edge of cabinet (see fig. 2).

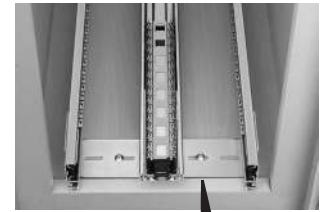


fig. 2

Front Edge of Cabinet Slide Assembly Mounting Bracket  $\frac{7}{8}$ "  
Front Edge of Face Frame

3. Mount Cabinet Slide Assembly to cabinet floor with provided screws.



fig. 3

4. Engage Product Slide Assembly to Cabinet Slide Assembly (see fig. 3).



fig. 4

5. Attach door to unit. **Note:** utilize the adjustable door mounting brackets to ensure mounting in thick portion of cabinet door (see fig. 4).

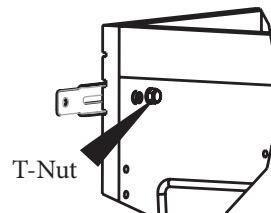


fig. 5

6. Loosen T-Nut that holds cabinet door to pull-out. (see fig. 5).

7. Tighten adjustment screw (this will push mounting bracket out) until cabinet door is at desired position. (see fig. 6).

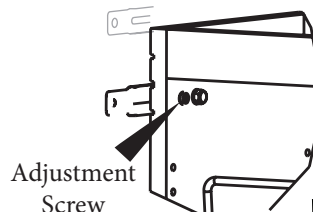


fig. 6

8. Tighten T-Nut to lock filler against adjustment screws. (see fig. 5).



fig. 7

9. Install the provided rub bushings in line with the top rails. (see fig. 7).

10. To adjust shelves you must first remove the side skirt from the upper shelf.

**10a.** First remove the shelf pins from the underside of the skirt. (see fig. 8).

**10b.** After the lower pins are removed the side skirts can be slid out of the groove on the underside of the shelf. (see fig. 9).

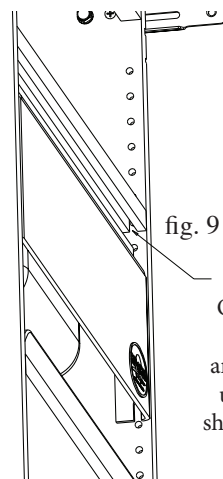


fig. 9

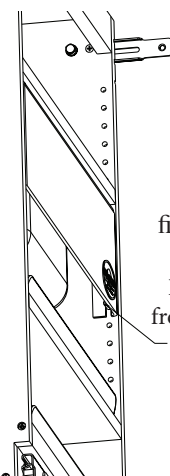


fig. 8

Remove shelf pins from both ends of the underside of the Acrylic cover

Once the pins are removed the side skirt will slide in and out of the groove on the underside of the shelf. The shelf can now be adjusted to a different position.