

VIGO INDUSTRIES INSTALLATION GUIDE FOR STANDING SHOWER CABIN (MODEL VG06012)

SAFETY PRECAUTIONS

**This Installation Guide uses the following symbols to indicate important information.
Always observe the instructions indicated by these symbols.**

WARNING

Instructions that, if ignored, could result in death or serious personal injury caused by incorrect handling or installation of the product. These instructions must be observed for safe installation.

CAUTION

Instructions that, if ignored, could result in personal injury or material damage caused by improper handling or installation of the product. These instructions must be observed for safe installation.


IMPORTANT

Maintenance and other important non-personal injury and non-material damage instructions or statements that should be observed.










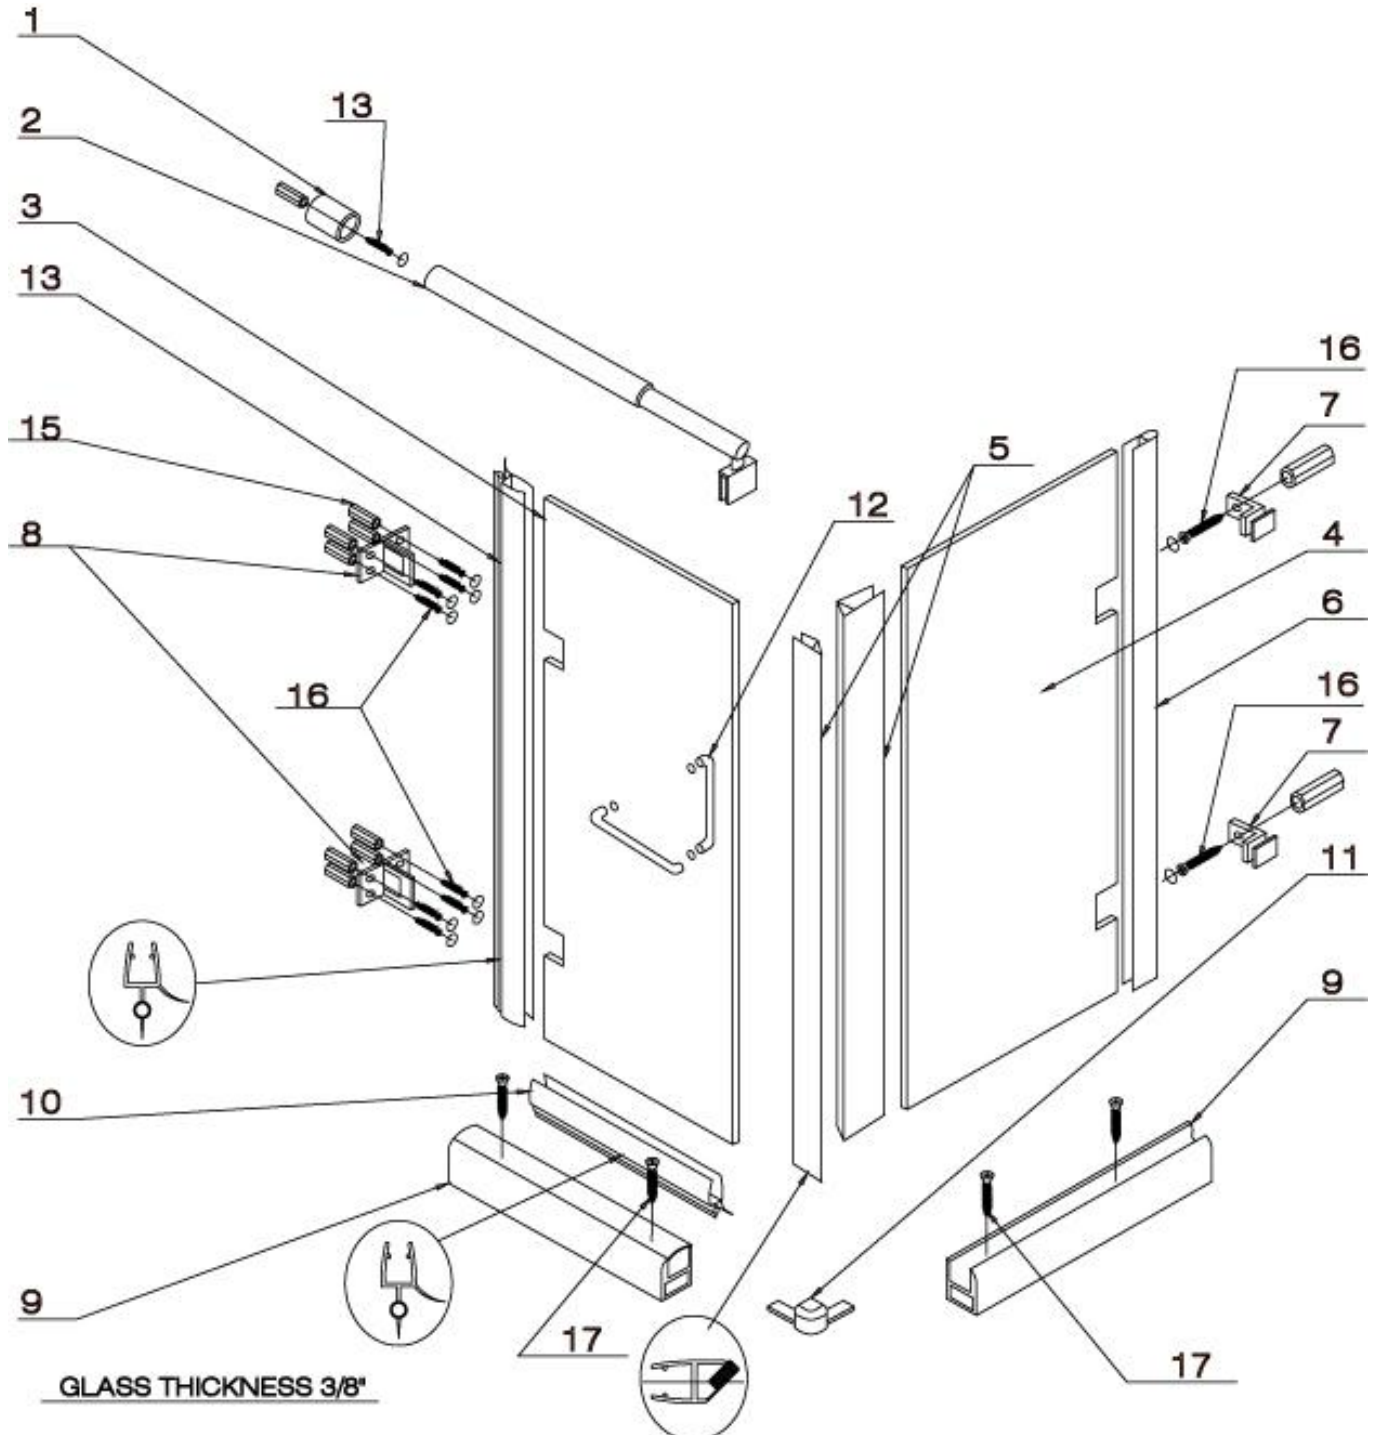







VIGO INDUSTRIES INSTALLATION GUIDE FOR STANDING SHOWER CABIN (MODEL VG06012)

PACKING LIST:

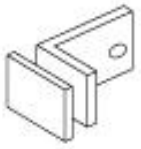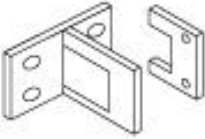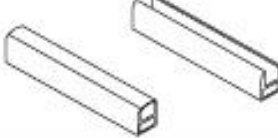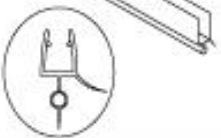- | | | |
|-----------------------------------|----------------------------------|---------------------------------|
| 1. Wall connector (1pc) | 6. Side seal strip (1pc) | 12. Handle assembly (1pc) |
| 2. Structural arm (1pc) | 7. Glass support (4pc) | 13. Door side seal strip (1pc) |
| 3. Door (1pc) | 8. Hinge (2pc) | 14. Phillips screw 1-1/8" (1pc) |
| 4. Side glass panel (1pc) | 9. Bottom rail (2pc) | 15. Plastic anchors (15pc) |
| 5. Door magnetic seal strip (2pc) | 10. Door bottom seal strip (2pc) | 16. Phillips screw 2" (10pc) |
| | 11. Bottom corner joint (1pc) | 17. Phillips screw 3/4" (4pc) |

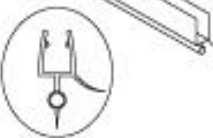

MODEL VG06012


1 WALL CONNECTOR  96007	2 STRUCTURAL ARM  96017-36	3 DOOR  97014-36	4 SIDE GLASS PANEL  97013-48	5 DOOR MAGNETIC SEAL STRIP 96011 
6 SIDE SEAL STRIP  96001	7 GLASS SUPPORT  96010	8 HINGE ASSEMBLY  96015	9 BOTTOM RAIL 95004-36x48 	10 DOOR BOTTOM SEAL STRIP 96004 
11 BOTTOM CORNER JOINT  94004	12 DOOR HANDLES  96012-18	13 DOOR SIDE SEAL STRIP  96012	14. SCREW 1 1/8" 	15. PHILLIPS ANCHORS 
16. PHILLIPS SCREW 2" 	17. PHILLIPS SCREW 3/4" 			

MODEL	DIMENSION "A"	DIMENSION "B"	HEIGHT*	#3- DOOR (97014-48)	#4- SIDE GLASS PANEL (97013-48)
36x48	34 1/16***	46***	72 1/2"	33 3/8"X71 1/8"	45 5/16"X71 1/8"

* - WITH HARDWARE AND WITHOUT SHOWER BASE

** - EXTERIOR SIZES

A & B DIMENSIONS WERE MEASURED AFTER SHOWER ENCLOSURE WAS COMPLETELY INSTALLED

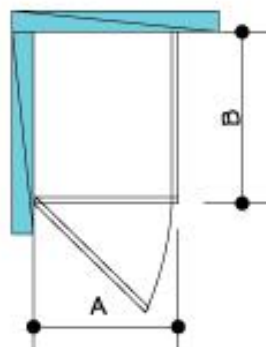

⚠ **WARNING**

WE STRONGLY RECOMMEND THAT A LICENSED PLUMBER INSTALL THIS STANDING SHOWER CABIN AND INCLUDE THE ASSISTANCE OF A SECOND PERSON TO INSTALL THE DOOR UNIT.

INSTALLATION OF THE SHOWER DOORS BY AN INEXPERIENCED PERSON MAY RESULT IN GLASS BREAKAGE AND, CONSEQUENTLY, CAUSE PERSONAL INJURY OR DEATH.

BEFORE STARTING

Compare items on your invoice with what you have received. Carefully review the Packing List on page 2. If any item is missing, please call Vigo Industries at 1-866-591-7792.

REQUIRED TOOLS

- Square and/or Phillips #1 and #2 screwdriver
- Flat head screwdriver
- Electric drill plus a 1/8", 3/16", or 7/32" drill bit (depending on wall)
- Level
- Measuring Tape
- Pencil (non-permanent; HB)
- Clear silicone caulking
- Utility knife


🚧 **WARNING**

- Handle fragile items with care to prevent personal injury or material damage.
- Glass on panels and doors is tempered glass and must never be cut to prevent personal injury.

🚫 **IMPORTANT**

- Fiberglass or acrylic construction might not be sufficiently strong enough to support the shower door enclosure. You should use the wood framing from behind the face edge of the stall to provide a secure mounting to the door. Apply a bead of silicone between the walls and base of the stall.
- For optimum performance, you should install the shower door perfectly level on a level surface.

MODEL VG06012 HAS A REVERSIBLE DOOR AND CAN THEREFORE BE INSTALLED TO EITHER THE RIGHT OR LEFT SIDE (SEE CONFIGURATION DIAGRAM BELOW)

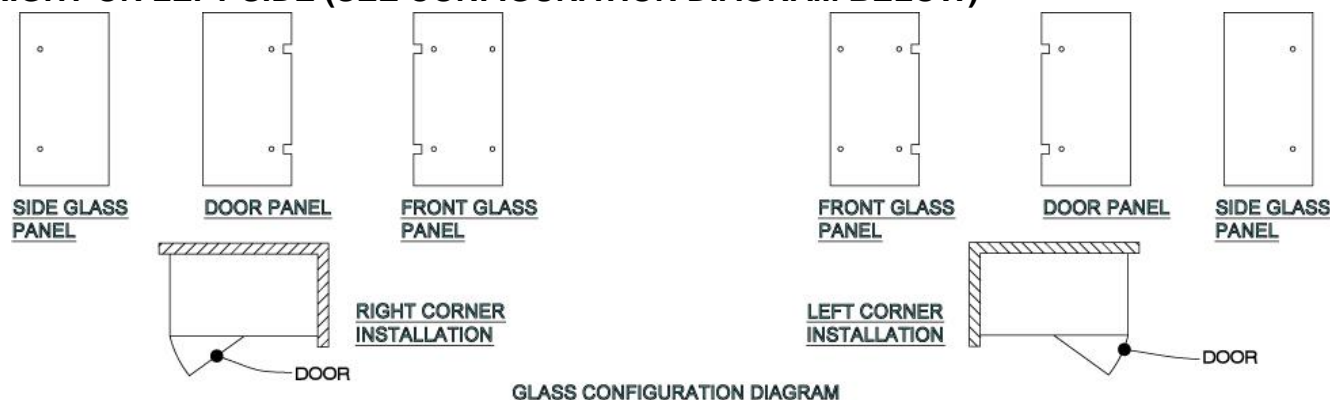

MODEL VG06012

PREPARATION STEPS TO FOLLOW BEFORE INSTALLATION

1. Remove the plastic layer from the base border (if needed). Do NOT remove the plastic layer off the plastic platform of the base.
2. Properly apply silicone to the wall and base joints.

⊘ IMPORTANT

- To prevent damage to the finish, you should protect the shower cabin bottom with a cardboard protector before beginning the installation.
- Ensure that there is sufficient structural support behind the shower wall to hold the weight of the shower door. If there is not sufficient enough support, then reinforce the shower walls with wooden studs prior to shower door installation. [SEE FIG.1]

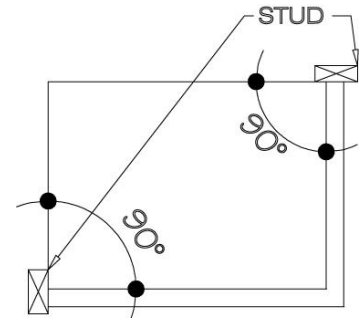


FIG.1

INSTALLATION STEPS

A. INSTALLING THE BOTTOM RAIL

■ CAUTION

OUTSIDE EDGE OF THE BOTTOM RAIL IS HIGHER THAN THE INSIDE EDGE

1. Slide the corner joint (#11) onto the bottom rail (#9). [SEE FIG.2]
2. Place the bottom rail with the corner joint to the desired position on the shower base (see page 2 for proper A and B distances). Make sure A and B are correct.
3. Seal the underside of the bottom rail with clear silicone. Center the rail sides to the base according to A and B measurements.
4. Apply silicone to 3/4" screw (#17) threads. [SEE FIG.2A]
5. Screw the bottom rail securely to the base with the 3/4" screw.
6. Clip the aluminum cover to the front piece of the bottom rail.



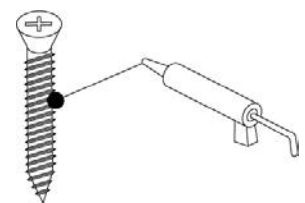


FIG.2A

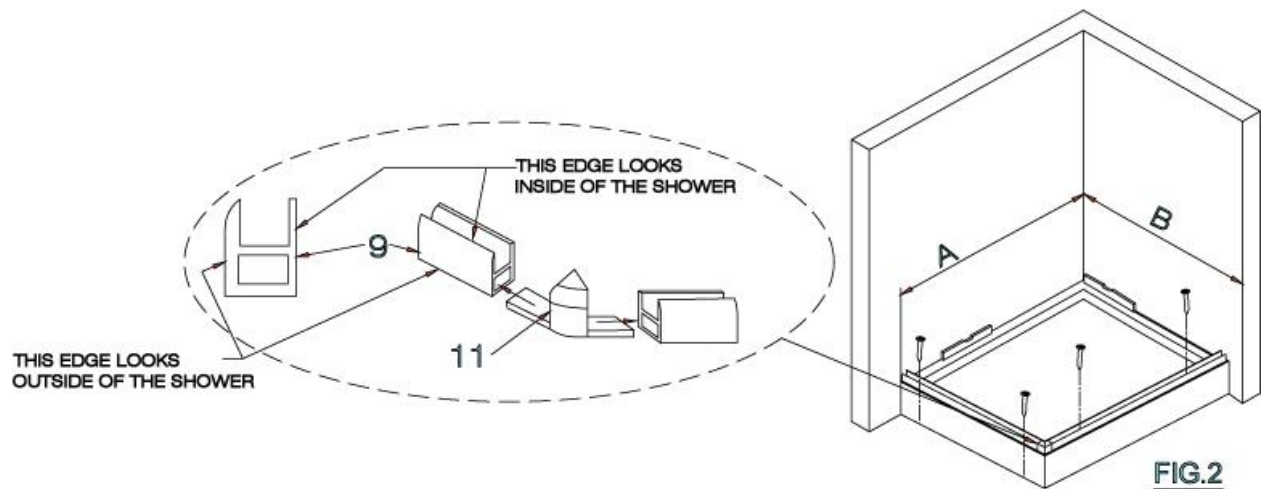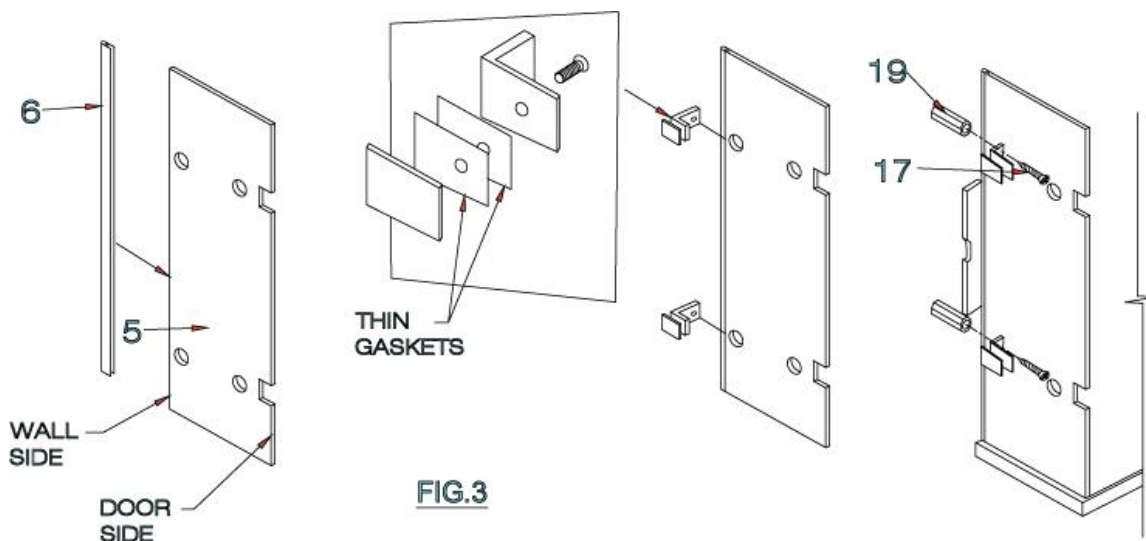

B. INSTALLING THE SIDE GLASS PANEL

1. Arrange glass to the preferred configuration. [SEE FIG.1A]
2. Install the seal strip (#6) to the wall side of the side glass panel (#4). [SEE FIG.3]
3. Screw in the glass support (#7) with the hex key to the side glass panel. Be sure to use washers on both sides of the panel.
4. Place the side glass panel onto the bottom rail (#9).
5. Mark holes on the wall for the mounting screws.
6. Remove the side glass panel and drill holes into the wall. Insert the plastic anchors (#15) into the holes.
7. Replace the side glass panel. Screw into the wall with 2" screws (#16). [SEE FIG.4]



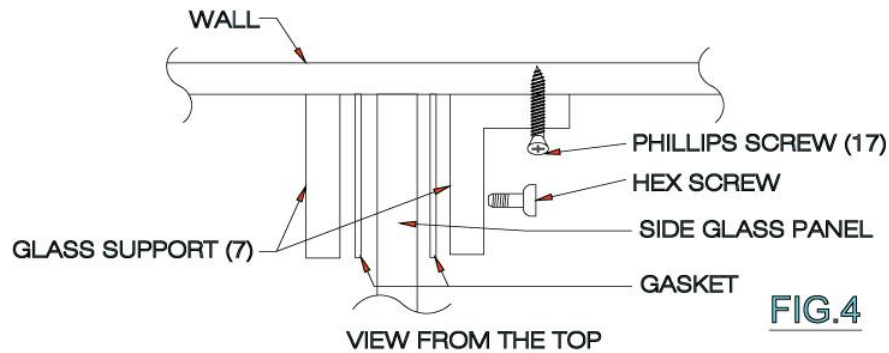


FIG.4

C. INSTALLING THE HANDLE

Assemble the door handles (#12) to the door (#3) as shown. [SEE FIG.5]

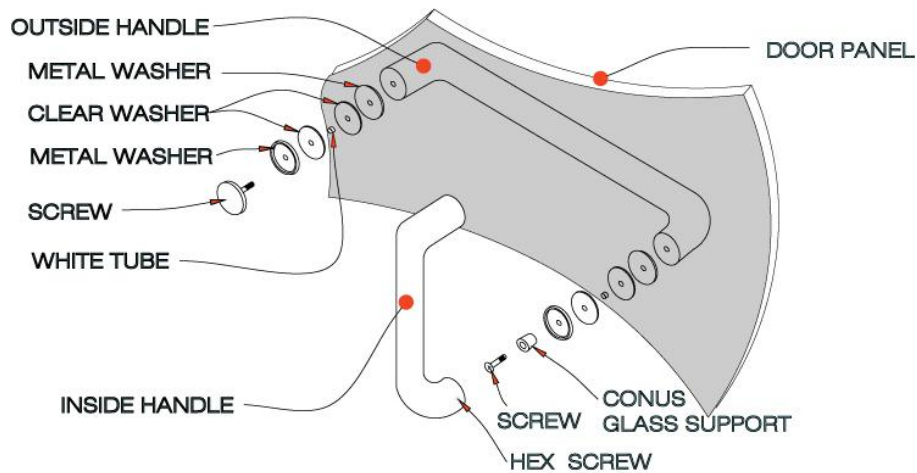


FIG.5

D. INSTALLING THE SIDE PANEL SUPPORT

1. Install the wall connector (#1) approximately two-thirds from the wall. [SEE FIG.6]
2. Install the structural arm (#2) to the wall connector.
3. Mark a hole on the wall for the mounting screw.
4. Move the wall connector aside. Drill hole into the wall and place a plastic anchor (#15) into the hole.
5. Move wall connector back into place. Screw into wall with 1-1/8" screws (#14).
6. Tighten all hex screws.


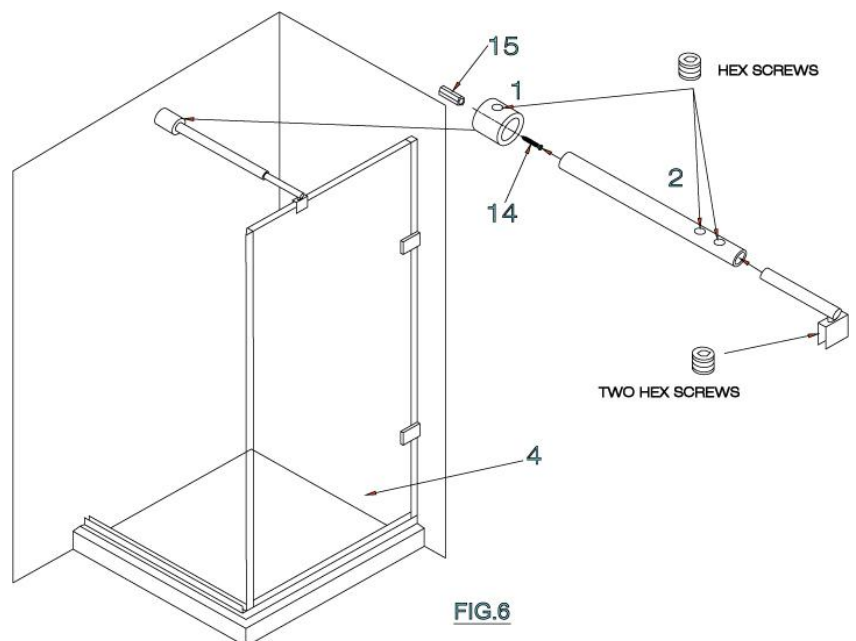


FIG.6

E. INSTALLING THE WATER SEAL STRIP

1. Clean all glass panel edges receiving seal strips with rubbing alcohol. [SEE FIG.7]
2. Cut seal strips (#6, #10, #13) according to the seal strip diagram (FIG.7).
3. Verify that the seal strip lips face towards the inside of the cabin.
4. Install seal strips according to the seal strip diagram (FIG.7).

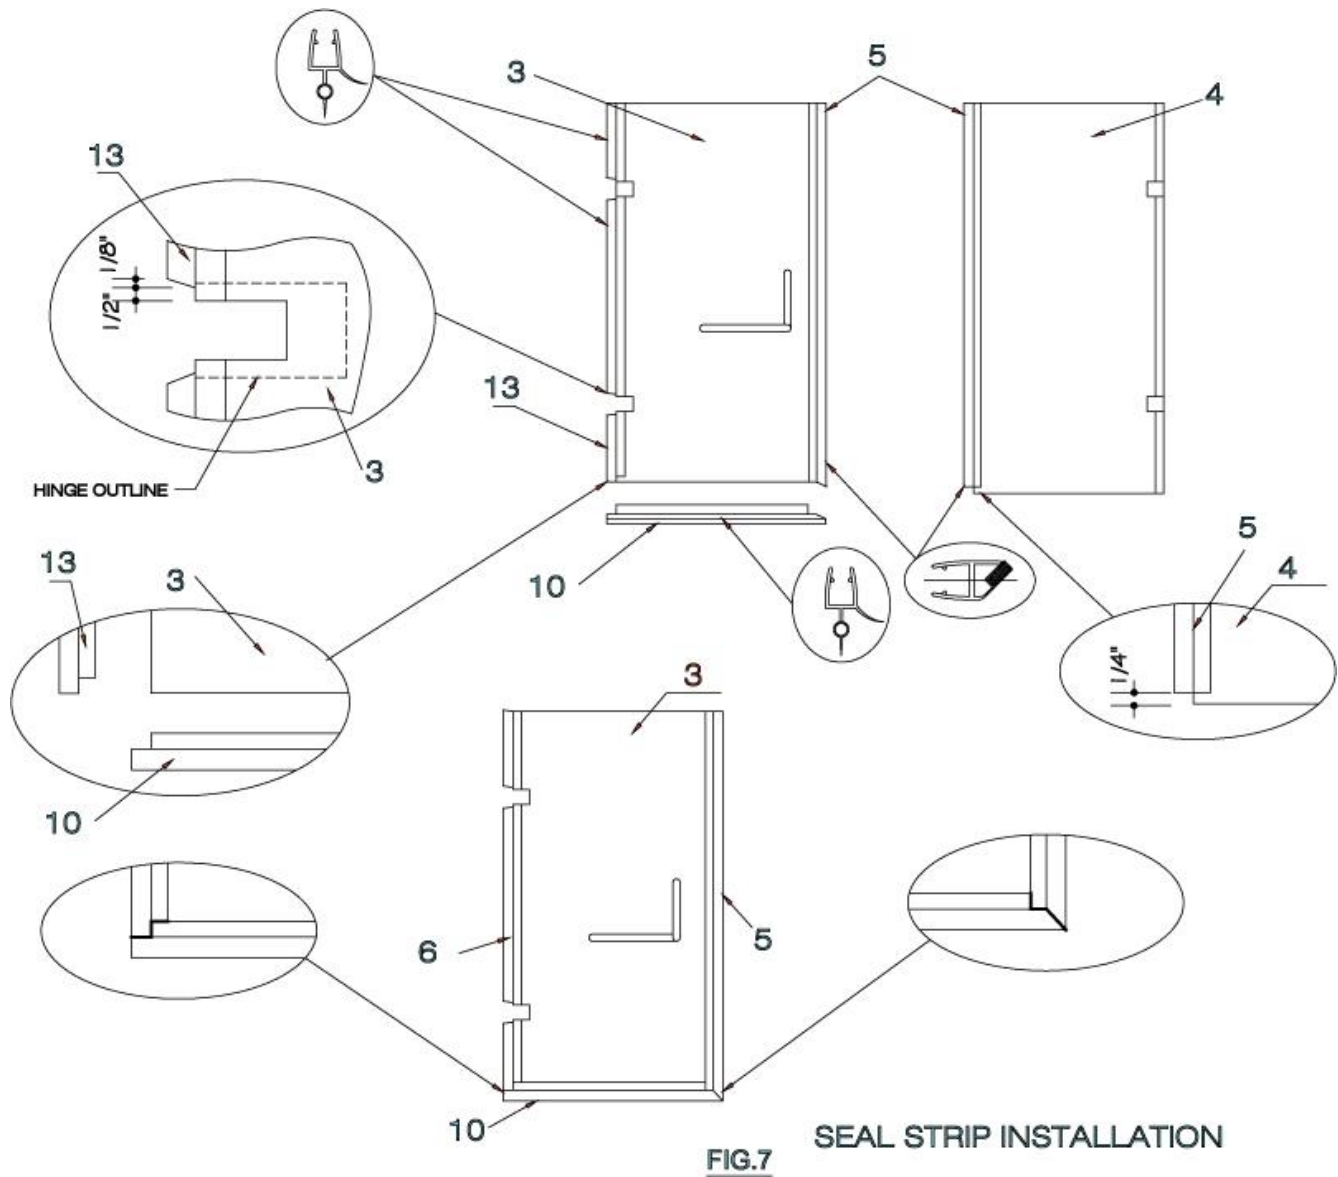

F. INSTALLING THE HINGE

1. Clean the glass surfaces where the hinges (#8) are to be installed with rubbing alcohol.
2. Screw the metal plate to the hinge with a washer on each side of the panel using the hex key (supplied). [SEE FIG.8]

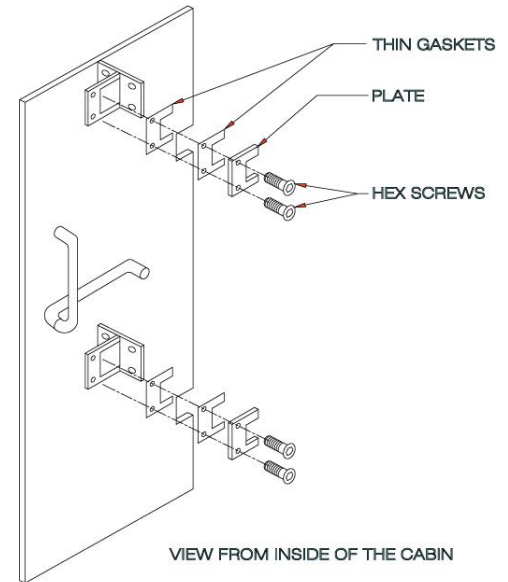



FIG.8

G. INSTALLING THE DOOR

WARNING

DOOR PANEL INSTALLATION REQUIRES TWO OR MORE PEOPLE TO ASSIST

1. Position the door (#3) onto the hinges.
2. Place the door on the bottom rail (#9).
3. Align the door correctly using a level. Verify that the top of the door aligns with the top of the side glass panel (#4).
4. Mark four (4) holes on the wall for the mounting screws for each hinge.
5. Remove the door and drill holes into the wall where marked. Place plastic anchors (#15) inside the holes.
6. Replace and screw door securely to the wall with 2" screws (#17). [SEE FIG.9]

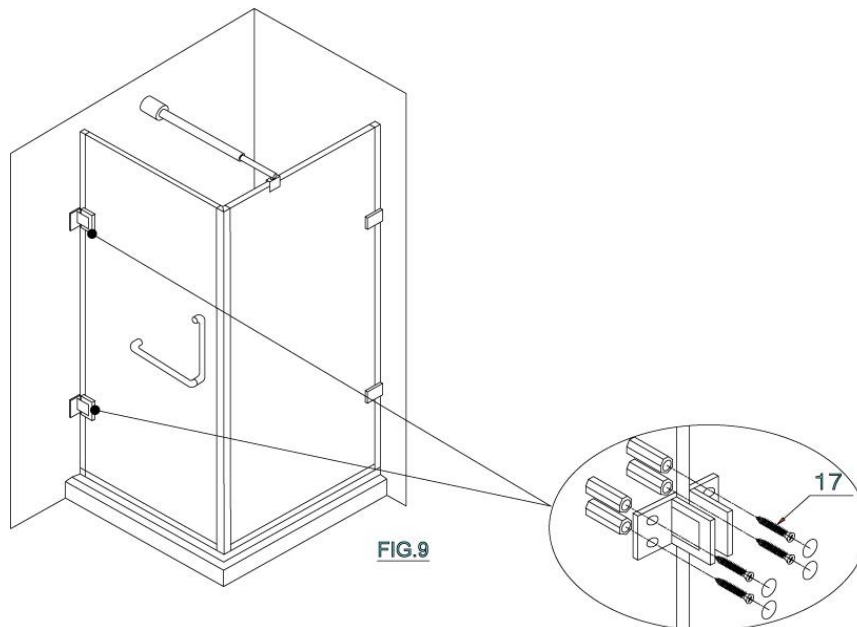

H. APPLYING THE SILICONE

1. Apply clear silicone caulking to the inside between the wall and side seal strip. Repeat for the other side. [SEE FIG.10]
2. Apply clear silicone caulking to the inside between the side panel bottom and the bottom rail.
3. Apply clear silicone caulking around the inside perimeter of the bottom rail.

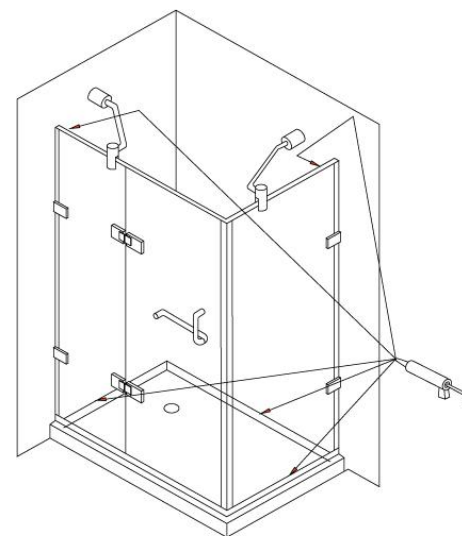


FIG.10

■ IMPORTANT

- **WAIT 24 HOURS BEFORE USING SHOWER.**
- **DO NOT ALLOW WATER TO DIRECTLY HIT DOOR SEAL STRIP.**

CLEANING INSTRUCTIONS FOR THE SHOWER CABIN AND DOOR PANEL

- A. Use mild liquid household cleaners to keep metal surface bright and clean. Rinse well and dry with a clean cloth.
- B. Remove dust with a soft, damp cloth.
- C. Use rubbing alcohol to clean and remove grease, oil, paint, and ink.
- D. Accidental scratches or stains will rarely show. If they do show, they can be easily removed with a liquid automobile polish.

⚠ IMPORTANT

- **Do NOT use** abrasive cleaners, scrapers, metal brushes, or any items/products that would scratch and/or dull surface.
- **Do NOT allow** surface to come into contact with acetone (nail polish remover), dry cleaning solution, lacquer thinner, gasoline, or any other similar product.

LIMITED WARRANTY

VIGO offers the following express limited warranty on each of its products. This warranty extends only to the original owner or end-user for personal household use. For commercial uses, additional limitations apply.

VIGO warrants acrylic units to be free from defects in workmanship and materials under normal use and service for a period of twenty (20) years from the initial date of purchase by the owner or end-user, contractor, or builder, from an authorized dealer.

VIGO warrants shower panels to be free from defects in workmanship and materials under normal use and service for a period of one (1) year from the initial date of purchase by the owner or end-user, contractor, or builder, from an authorized dealer.

VIGO warrants shower doors to be free from defects in workmanship and materials under normal use and service for a period of ten (10) years from the initial date of purchase by the owner or end-user, contractor, or builder, from an authorized dealer.

VIGO warrants faucets to be free from defects in workmanship and materials under normal use and service for a period of one (1) years from the initial date of purchase by the owner or end-user, contractor, or builder, from an authorized dealer.

Any product reported to the authorized dealer or to **VIGO** as being defective within the warranty period will be repaired or replaced (with a product of equal value) at the option of **VIGO**. This warranty extends to the original owner or end-user and is not transferable to a subsequent owner.

Neither the distributor, authorized **VIGO** dealer, nor any other person has been authorized to make any affirmation, representation, or warranty other than those contained in this warranty; any affirmation, representation, or warranty other than those contained in this warranty shall not be enforceable against **VIGO** or any other person.

VIGO reserves the right to modify this warranty at any time, it being understood that such modifications will not alter the warranty conditions applicable at the time of sale of the products in question.

EFFECTIVE JANUARY 1, 2004

Limitations

This warranty shall not apply following incorrect operating procedures, breakages, or damages caused by fault, carelessness, abuse, misuse, misapplication, improper maintenance, alteration, or alteration of the unit, as well as chemical or natural corrosion, accident, fire, flood, an act of God, or any other casualty. The owner/end-user of the product covered by the present warranty is entirely responsible for its proper installation and electrical wiring. **VIGO** neither installs nor supervises the installation nor hires a contractor for this purpose; consequently, **VIGO** cannot be held responsible for any default, breakage, or damages caused thereby or resulting thereof, either directly or indirectly. The owner/end-user must provide access to the components of the product as described in the installation guide so that **VIGO** can execute the warranty specified herein. If such access is not available, all expenses to provide said access will be the responsibility of the owner/end-user.

This warranty does not apply to products or equipment not installed or operated in accordance with instructions supplied by **VIGO** and all applicable rules, regulations, and legislation pertaining to such installations.

VIGO strongly recommends that its products – for example but without limitation, shower doors and other items – be installed by professionals with experience in bathroom products. Installation of shower doors by an inexperienced person may result in glass breakage and, consequently, cause personal injury or death.

VIGO is not liable for any costs, damages, or claims resulting from the purchase of products that do not fit through openings or existing structures. **VIGO** is not liable for any costs, damages, or claims resulting from defects that could have been discovered, repaired, or avoided by inspection and testing prior to installation.

VIGO is not liable for personal injuries or deaths to any persons or for any direct, special, incidental, or consequential damage, loss of time, loss of profits, inconvenience, incidental expenses, labor or material charges, or any other costs resulting from the use of the product or equipment or pertaining to the application of the present warranty, or resulting from the removal or replacement of any product or element or part covered by this warranty.

EXCEPT AS OTHERWISE PROVIDED ABOVE, VIGO MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR COMPLIANCE WITH ANY CODE.

In any case, **VIGO** cannot be held liable for any amount over and above the purchase price paid for the product by the owner/end-user, contractor, or builder.

Commercial Limitations

In addition to the above conditions and limitations, the warranty period for products installed for commercial applications or used in commercial ventures is one (1) year from the initial date of purchase by the owner/end-user, contractor, or builder from an authorized dealer. **VIGO** is not responsible for loss of use or profit under any circumstances. If the product is used as a display, the warranty period begins when the product is placed on display.

This warranty gives the owner/end-user specific legal rights. The owner/end-user may also have other rights which can vary from one state or province to another.

Warranty Service

In order to obtain service provided under this warranty during regular business hours, contact the dealer or distributor who sold the unit, or contact **VIGO** directly. **VIGO** will provide the warranty service described above when the following conditions have been met: the failure is of the nature or type covered by the warranty; the user has informed an authorized **VIGO** Agent or Warranty Service Department representative of the nature of the problem during the warranty period; conclusive evidence (e.g., proof of purchase or installation) is provided to the foregoing by the user proving that the failure occurred or was discovered within the warranty period; an authorized independent service person or company representative has been permitted to inspect the product during regular business hours within a reasonable time after the problem was reported by the user.

VIGO's warranty obligation shall be discharged upon tender of replacement or repair. The customer's refusal to accept the tender terminates **VIGO's** warranty obligations.

Certain models are pending approval.

Certification may be ended by **VIGO** or certification agencies without notice.