

an **EefaCo.** Store  
1-877-275-9111

**LINE™**  
By Advance Tabco®

## Assembly Instructions for STAINLESS STEEL and WIRE UTILITY CARTS

Stainless Steel Shelving Models:

UC-3-1827RE, UC-3-2433RE

Wire Shelving Models:

WUC-1836PRE, WUC-1842PRE, WUC-2436PRE, WUC-2442PRE



UC SERIES



WUC SERIES

**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH FREIGHT CARRIER**

Utility carts manufactured by **ADVANCE TABCO** are designed and constructed for applications including Food Preparation, Cooking, Manufacturing, Material Handling, Laboratory Service and the like. **ADVANCE TABCO** does not recommend product use for activities employing harsh and active chemicals. Consult factory regarding unusual applications.

an **EefaCo.** Store  
1-877-275-9111

CONTENTS

- (2) Tubular Handles
- (3) Shelves (Stainless Steel or Wire)
- (4) Casters
- (4) Rubber Bumpers
- (4) Plastic Tapered Split sleeves (Per Shelf)

TOOLS REQUIRED

Rubber Mallet

PLEASE NOTE: The following instructions are showing a Stainless Steel solid shelf being assembled. **These instructions apply for assembling a Wire Utility Cart (WUC Series) as well.**

Step 1:  
Position top shelf onto tubular handles.  
(Figure 1)

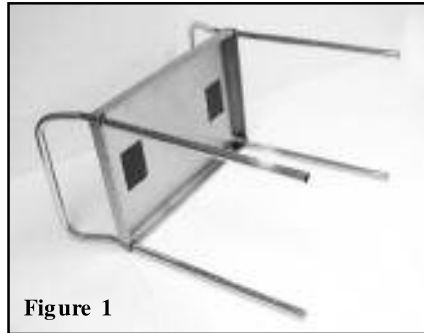


Figure 1

Step 2:  
Position Plastic Split Sleeve at desired location (4) required and lower shelf onto split sleeve. (Figure 2)

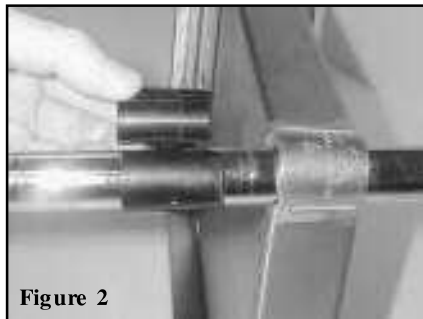


Figure 2

NOTE: Ensure each (4) split sleeves are located at the same height.

Step 3:  
Repeat Step 2 for middle and lower shelf  
(Figure 3)

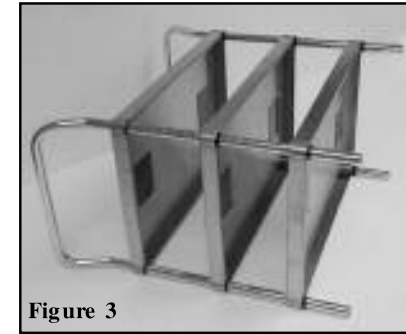


Figure 3

Step 4:  
Place rubber bumper onto bottom of tubular handles.  
(Figure 4)

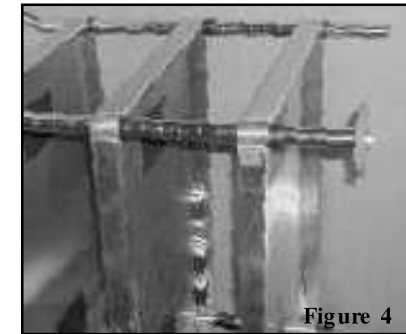


Figure 4

Step 5:  
Install caster into the bottom end of each tubular handle (Use rubber mallet if required).

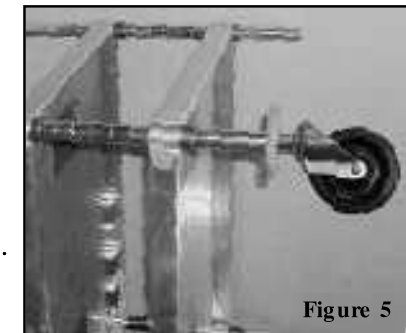


Figure 5