


::kitchensource.com **1.800.667.8721**





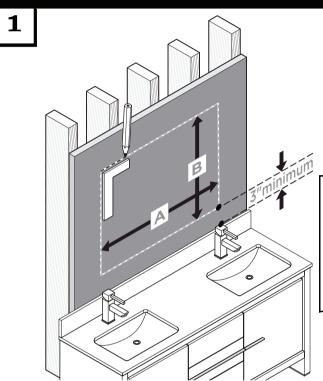


Draw the perimeter of the cabinet on the wall.

2



Determine overall medicine cabinet dimensions. If recessing medicine cabinet, determine rough in dimensions.

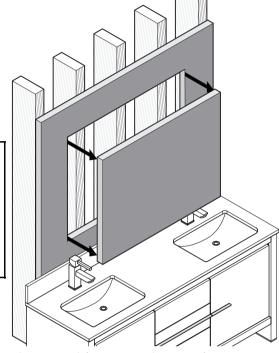

Cut the perimeter with appropriate tool.

3




NOTE:

Please consult with a licensed contractor for proper medicine cabinet framing.

J	
	For Illustration For Illustration
	For Illustration purpose only!
	\longrightarrow

ROUGH IN DIMENSIONS				
Model SKU	Width A	Height B	Depth	
FMC8019	59.5"	26"	5"	
FMC8013	49.5"	26"	5"	

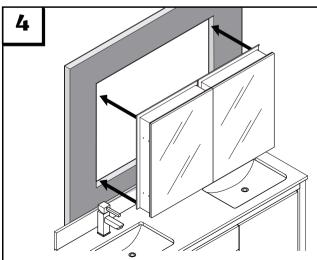

Insert the cabinet into the opening.



◎ FVN9260-D

Frame the cutout opening.

SENZA INSTALLATION GUIDE


PAGE 5



::kitchensource.com **1.800.667.8721**




RECESS-MOUNT INSTALLATION

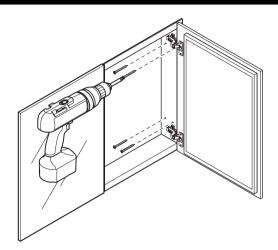


Attach cabinet to the wall from the each side.


6

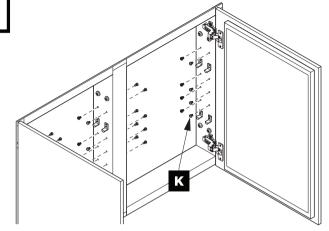


Fill the remaining holes with a plugs (K).

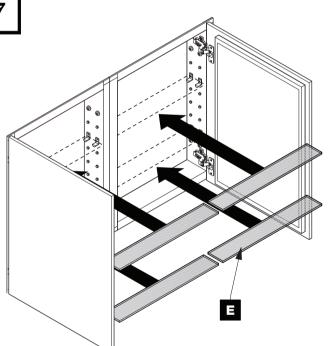

Insert the shelves (E). Follow the steps below for each shelf.




7.a Push a side of the shelf (E) into left or shelf clips (J).



7.b Snap the shelf (E) down into opposite side.

OPTIONAL DOOR ADJUSTMENT

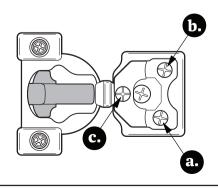

- a. This screw allow you to adjust pitch side to side.
- **b.** This screw releases cabinet's door and allows up and down adjustment.
- c. This screw allow you to adjust the gap between the doors.




OBJECT OF SENZA | INSTALLATION GUIDE

PAGE 6



::kitchensource.com




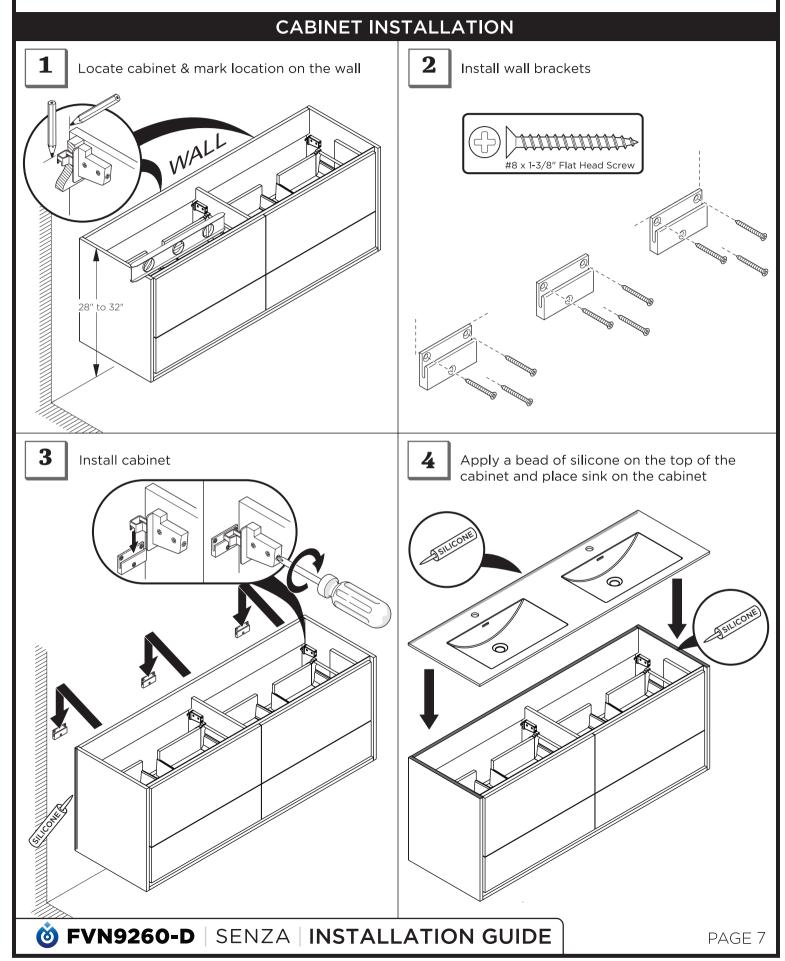





DRAWER REMOVAL & INSTALLATION

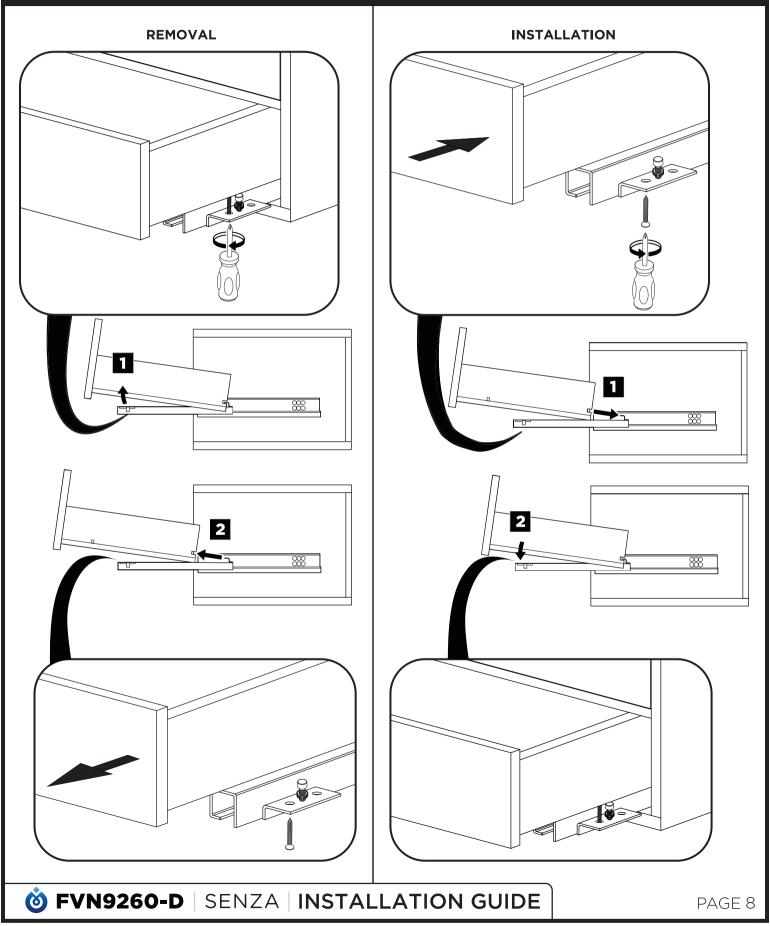





::kitchensource.com



P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

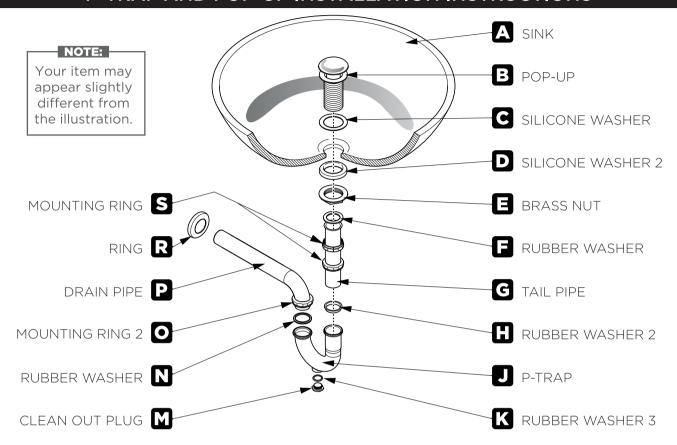

POP-UP INSTALLATION INSTRUCTIONS

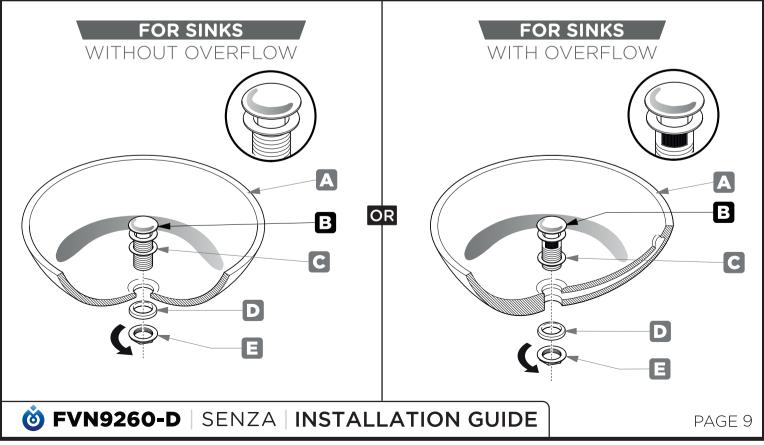






∷kitchensource.com ≈ 1.800.667.8721





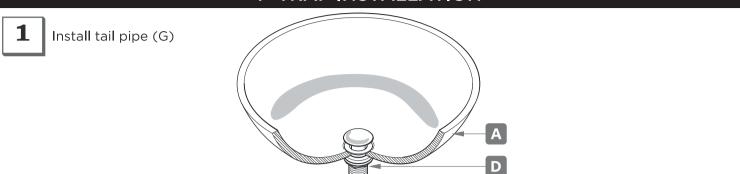



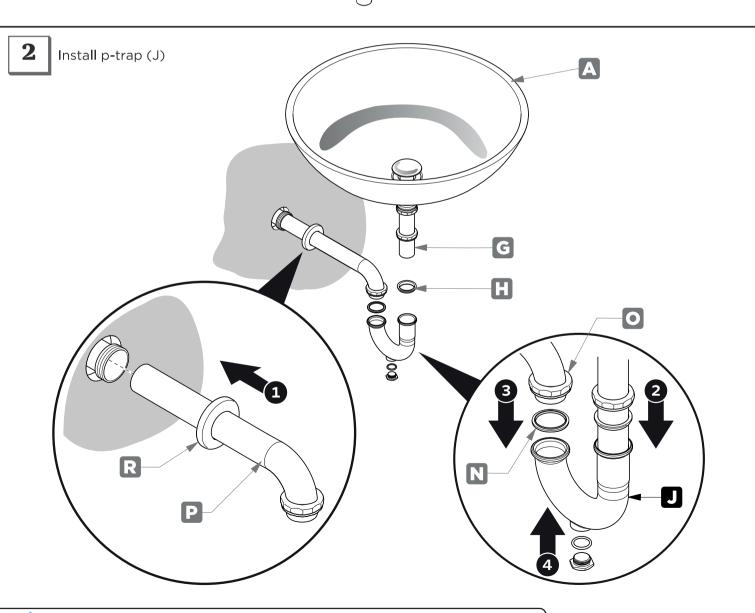

Ö FVN9260-D | SENZA | **INSTALLATION GUIDE**

PAGE 10