


# A Simple, Cost Effective and Reliable Whole House Mechanical Ventilation System!

## AirCycler® VS



An attractive, user friendly and flexible controller  
A stainless steel power open/power closed damper  
Equals the simplest operation and longest life in the industry!

**Use your existing ductwork and air handler to meet your mechanical ventilation requirements!**

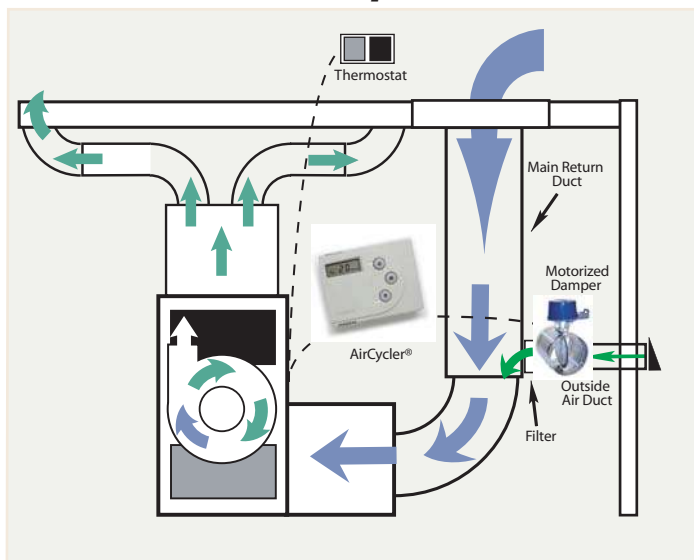

Help meet ventilation requirements for:

- \* ASHRAE 62.2
- \* EPA Indoor Air Quality Plus
- \* Energy Star V3
- \* LEED points



**The Leader in Energy Efficient Ventilation Control**



## AirCycler® VS User Guide

### Operating Mode

Once installed and powered, the **AirCycler®** will automatically enter Operating Mode.

- The factory settings provide 20 minutes of FAN OFF time followed by 10 minutes of FAN ON time. The LCD display will indicate the current fan activity.
- If the thermostat calls for heating or cooling, the display will read "ON". The **AirCycler®** is now in standby mode.
- When there is no call for heating or cooling, the **AirCycler®** will display "FAN OFF" and will count down the time remaining until the **AirCycler®** activates the central fan.
- When the **AirCycler®** activates the central fan, the display will read "FAN ON". The display will now count down the time remaining until the fan is deactivated again. This cycle will repeat until there is another call for heating or cooling from the thermostat.

### Motorized Damper control

- Factory settings provide 10 minutes of VENT ON time followed by 20 minutes of VENT OFF time, with the LCD display indicating the current damper activity.
- If the fan is on and the damper is open, the display will indicate **VENT ON** and the time remaining until the damper closes.
- If the fan is on and the damper is closed, the display will indicate **VENT OFF** and the time remaining until the damper opens.
- The display will alternate between **FAN** times and **VENT** times.

**The damper will never be ON or open when the fan is not running.**

### Turning the AirCycler® off

Should you choose to turn the **AirCycler®** off during extended vacation periods or when windows are open, press and hold the Mode key for six seconds. All thermostat functions will continue to operate normally. To turn the **AirCycler®** back on, press the Mode key.

### Setup Mode

#### Setting the FAN ON time

- Press the Mode key once to enter setup mode. **FAN ON** will flash on the display.
- To change the **FAN ON** time, use the Increase or Decrease buttons.
- Set the number of minutes between 1 and 199, or select "UN" for unlimited operation. This allows the fan to operate continuously after the **FAN OFF** delay has expired following a cooling or heating cycle.

### Setting the FAN OFF time

- To set the delay after the last heating or cooling operation, press the Mode key again. **FAN OFF** will flash on the display.
- As above, set the number of minutes between 1 and 199.

### Setting VENT time

- Press the Mode key until **VENT ON** flashes. Set as before.
- Press Mode again, **VENT OFF** will flash, enter settings.
- This cycle repeats for the duration of time the central fan is operating continuously
- Press the Mode key one last time to return to normal operation.

*Note: In humid climates, the FAN OFF time should be at least 6 minutes. This avoids moisture re-evaporation from the coil and condensation in cold supply ducts.*

### Testing the AirCycler®

Trained technicians use Test mode to verify or demonstrate the control operation. The test mode will display fan activity in seconds rather than minutes. To activate Test mode, follow these steps.

- Press the Mode key
- Press the Mode Key a second time press and hold for six seconds. The display will indicate Test.
- Exit Test mode and return to Operating mode by turning the **AirCycler®** off.
- Hold the Mode key for two seconds, then press Mode again to turn the AirCycler on.

As a safeguard, the **AirCycler®** will automatically exit Test mode after ten minutes.

### Why controlled ventilation is essential?

Many homeowners are reducing their home's energy cost by tightening their homes. If homes are not equipped for controlling and removing indoor pollutants, indoor air quality problems may result. Controlled ventilation helps maintain healthy indoor air quality for the occupants and the home itself.

### What is the energy cost to run the AirCycler®?

For a typical 1,500 ft. home, the energy cost for the **AirCycler®** is between \$ 1 to \$ 5 monthly, depending on your climate and electric costs.

For more information:

Energy Efficient Homes: [www.energystar.gov](http://www.energystar.gov)

Indoor Air Quality: [www.epa.gov](http://www.epa.gov)

